
## Mitsubishi L200 Series 5 Central Locking Vehicle wire colours are listed as a guide. Please check with a multi-meter before fitting the harness.





2) Remove the door seal and inner trim. This will reveal the wiring.

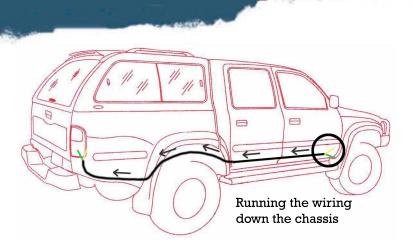

4) Behind the driver's seat, underneath the carpet is a rubber gromment. Drill a suitably sized hole through the gromment and pass the '2-wire' leg through the hole, to the underneath of the vehicle and fill with silicon sealant. Attach the wiring loom to the chassis (as shown above) and connect the wires to the canopy



1) Ensure the ignition is off. Remove door sill trim from the driver's door & the trim plate from the door behind.



3) CANOPY VEHICLE
YELLOW CENTRAL LOCKING (LOCK) BLUE/BLACK
GREEN CENTRAL LOCKING (UNLOCK) BLUE/GREY



5) Check that the hardtop locks and unlocks using the vehicle's remote.