

## MT7DYR000 To be used in conjunction with the fitting instructions supplied








Fit the bulkhead bracket with the self tapping bolts supplied.

Position the black right angle bracket evenly between the bulkhead. Fix with self tapping bolts supplied. This bar may need to be adjusted forwards or backwards once the roller top is lifted into place.



Fix the side brackets (measuring from the bulkhead) between 36-133 cm. These may need adjusting in height once the roller top is sat on the pick up tub.

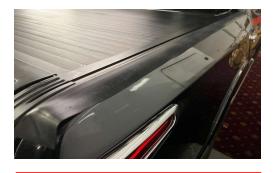

Side rubber may need heating to allow the seal to relax to the shape of the tub.



Pull the roller top back and ensure clearance with the tailgate. Then tighten side arms brackets.