

## **Fitting Instructions - FR8DYPWTC - VW Amarok 23-ON with Sport Bar**



**1. Remove Roll Bar**



**2. Remove the plastic cover and remove bolts**




**3. Remove 2 nuts from the rear legs**




**4. Assemble the Roller top, ensure joints between the bulkhead and side arms are sealed**



**5. Attach the bulkhead seal**

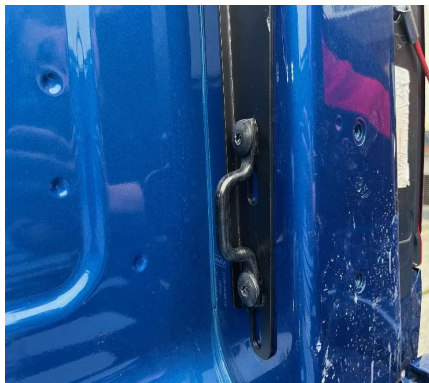

**6. Fit the rear brackets (using the higher holes) adjust for the height of the vehicle tailgate and tighten**

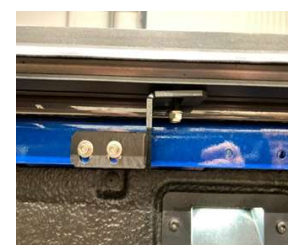

**7. Once in position, ensuring clearance between tailgate and Roller top, tighten all nuts and bolts**

**Fitting Instructions - FR8DYPWTC -  
VW Amarok 23-ON with Sport Bar**



**8. Fit the middle brackets**



**9. Close the tailgate to line up the roller top**



**10. Lift the assembled roller top into the bed (Don't fit the bulkhead bar). Lift the sports bar in place**



**11. Ensure the side rubber sits inbetween the top of the bed rail and sports bar**



**12. Slide the T-bolts into place**



**13. Fit the drainage front and rear**



**14. Ensure the roller top closes against the tailgate**