

Fitting Instructions for New 2015+ Mitsubishi L200.MK.7. EKO Tops Double-Cab.

(GB) Fitting Instructions
(D) Montageanleitung
(NL) Montagevoorschrift
(F) Instructions de montage

(E) Instrucciones de montaje
(I) Schema di montaggio
(S) Manual
(RUS) руководство по монтажу



EKO Tops STD / Plus



EKO Tops DLX



EKO Tops Commercial



45 min


All right reserved to modify the text
www.ekotop.com

Fitting Instructions for New 2015+ Mitsubishi L200.MK.7. EKO Tops Double-Cab.

Required tools



13 mm

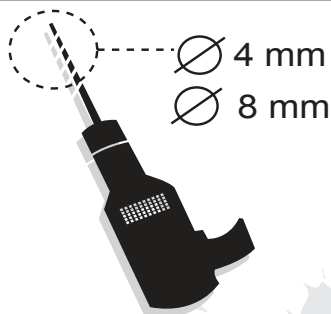

4 mm
8 mm



Nm

- 1) With both the vehicle's tailgate and Truck Top's tailgate closed using 4 people lift the Truck Top on to the bed. Line up, lifting the top far forward so the Truck Tops glassed rear door touches the vehicle's tailgate. Check position around rear seal front & sides.
- 2) Open both tailgates & climb inside, clamp down firmly (without over tightening) in position on all six points. Check again the Alignment on the outside & check the tailgates close without fouling the rear door retaining catches may need adjusting on the inner pillars (two bolts) so as the door catches securely at both side.

Do not over tighten.

- 3) Fit the 6 oval shaped rubber grommets to cover the fittings.
- 4) **Fitting of the rear door corner seal** - the two shape corner rubbers are essential in ensuring the Truck Top is reasonably waterproof. Clean off the paintwork with metholated wipe or similar & adhere as illustrated. These must be adhered correctly.
- 5) **Connection Dome light and Brake light VW Amarok**

We recommend using a qualified auto-electrician:

Drill a small (approx: 8mm) hole in the driver side Rear light cluster housing.

Pass the three wires through the hole & joint to the vehicle's wiring.

Yellow from Hard Top: Dome light connect to Red/Grey on the Car

Red from Hard Top: Brake Light Connect to Red Black on the Car

Black from Hard Top: Earth Connect to Brown on the Car

Use care and **cut** the cable tie which holds the wires.

Do not pull as this will rip the head lining.

Note!!! The rear light must be turned on if the Dome Light shall work


- 6) Check tightness of the clamps periodically.



45 min

All right reserved to modify the text
www.ekotop.com

Fitting Instructions for New 2015+ Mitsubishi L200.MK.7. EKO Tops Double-Cab.

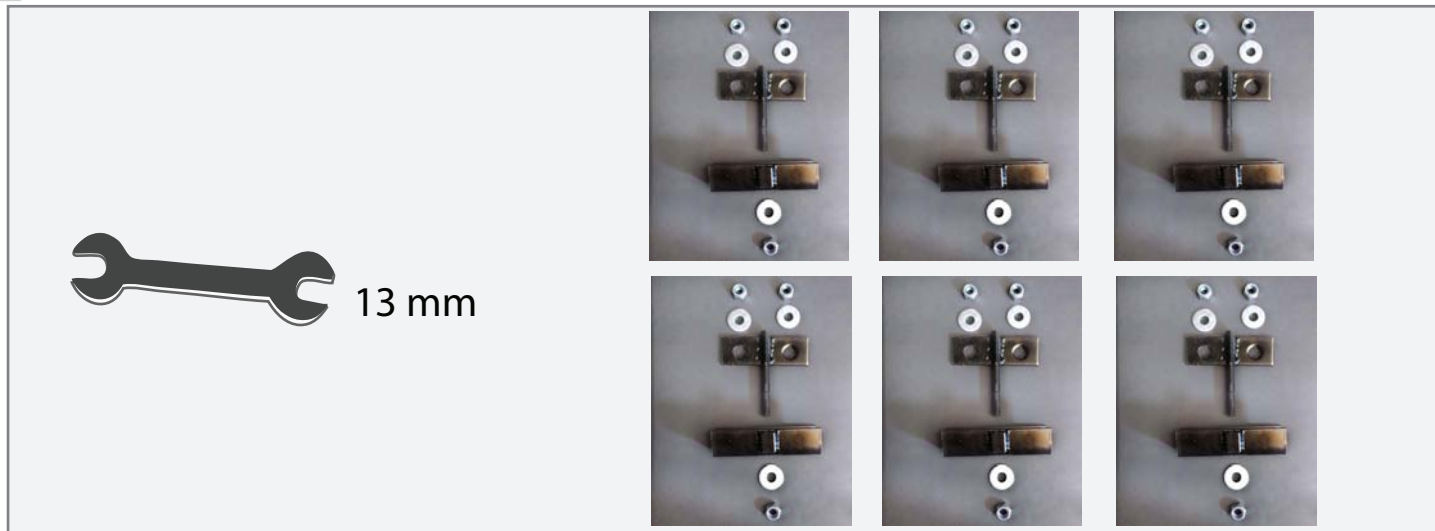

45 min

All right reserved to modify the text
www.ekotop.com

Fitting Instructions for New 2015+ Mitsubishi L200.MK.7. EKO Tops Double-Cab.



FIG.7



FIG.8



FIG.9



FIG.10



FIG.11

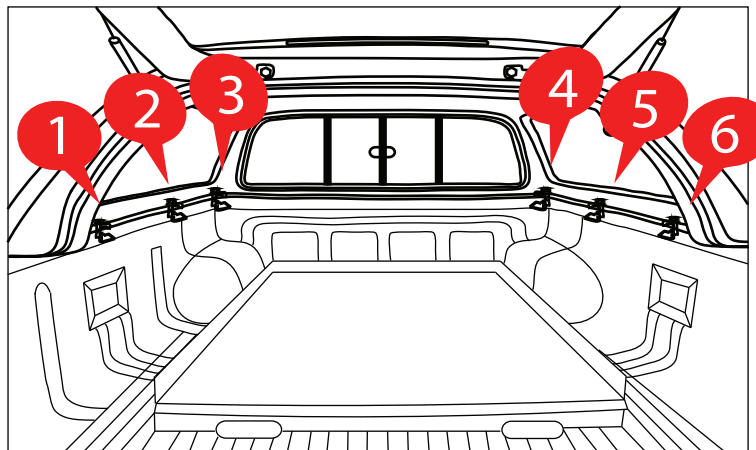


FIG.12



45 min

All right reserved to modify the text

www.ekotop.com