INSTALLATION INSTRUCTION

HARDTOP



Phone: 01672 851 842

Email: sales@hardtopsuk.com




e TERRON9

Fitted Maxus



Installation Manual Hard Top Fitting Time: 6 hours



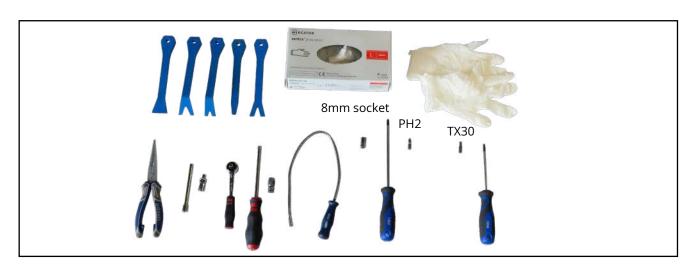











Remove all 4 handles, 2 covers per handle



Use 8mm Socket



Remove the side and rear cover (4 in total)





Use 8mm Socket











Remove sun visors, 8 bolts in total

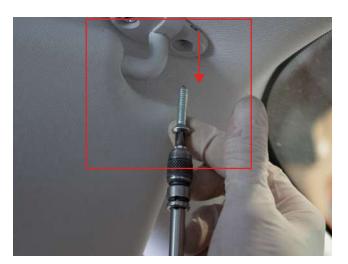







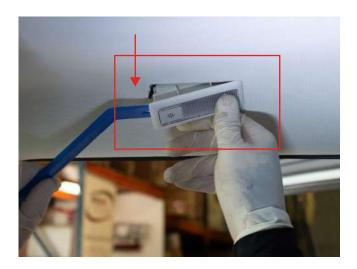





Remove two lights





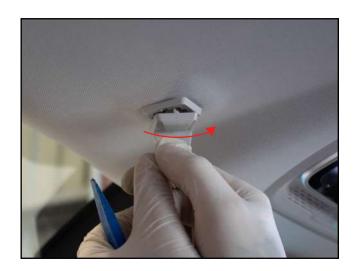



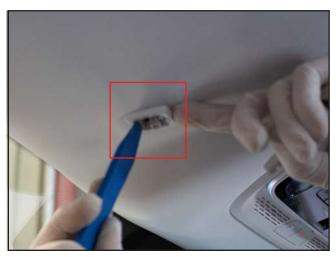












Remove plastic trim



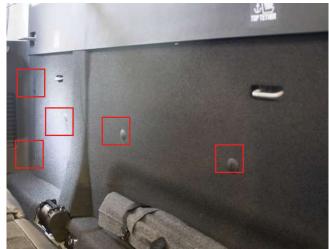

Remove caps to release the carpet

















Remove Trim














Release to plastic caps to start removing the headlining, then release the velcro

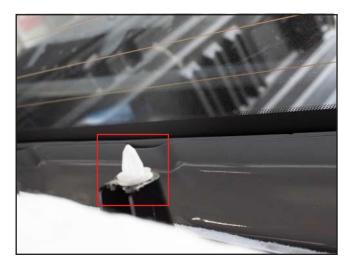







Remove 7 bolts with 8mm socket









Remove plastic caps, then remove screws













Unbolt and remove bed caps











Release spoiler to remove



Unplug brake light and loading lights





Push wires back through into the cab



Disconnecting the Battery





Remove Trim to disconnect battery









Disconnecting the Battery











Removing the Wheel Arch Lining



Remove left rear wheel arch for central locking wires













Insert Captive Nuts



Use silicon to fill the gap



Use expanding foam along the base and bulkhead



Feed wires into the canopy, connect break light and interior light. Use the heated rear window feed to connect in the canopy







Feed Central locking wire down the left pillar









Bolt the bulkhead of the canopy in place





Bolt the sides of the canopy in place





Refit Trim





Bolt Canopy into place









Adjust the rear door

