




Ensure the ignition is off. Remove door sill trim from the driver's door, followed by the plastic trim in front of this (next to the accelerator pedals)



This will reveal these wires

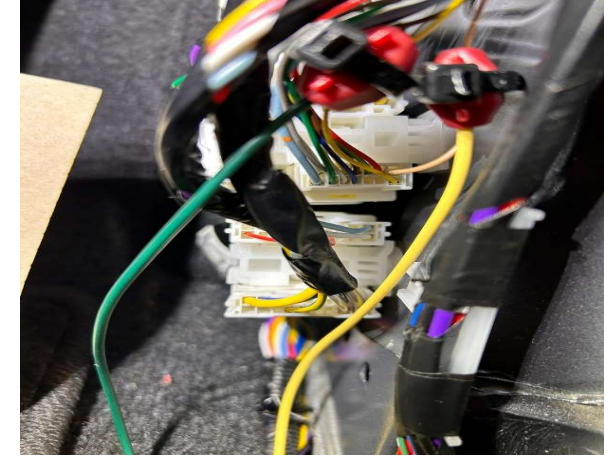

<u>CANOPY</u>		<u>VEHICLE</u>
YELLOW central locking	(LOCK)	SALMON
GREEN central locking	(UNLOCK)	YELLOW



Drill a suitably sized hole in the vehicle's floor pan. We use a bore hole drill bit. Pass the '2-wire' leg through the hole, to the underneath of the vehicle and fill with silicone sealant. Attach the wiring loom to the chassis and connect the wires to the canopy



Check that the hardtop locks and unlocks using the vehicle's remote