



NP300 Outback Fitting instructions



1) If fitted with a bed liner, remove the front C-Channel. Remove the blanking plugs (in the Navara) to reveal the pre-threaded holes. Loosely fit the four brackets.

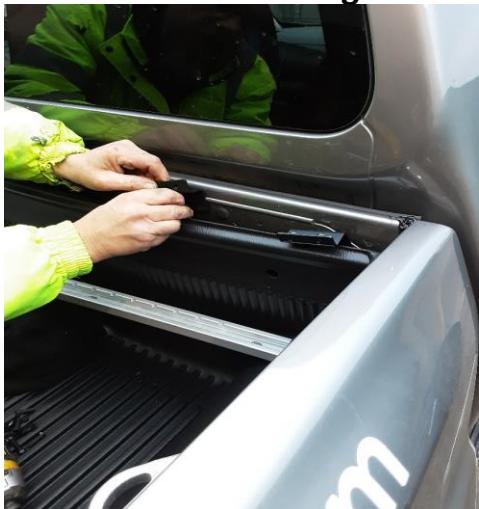

2) Lift the bulkhead bar into place and loosely fit the bolts into the previous brackets

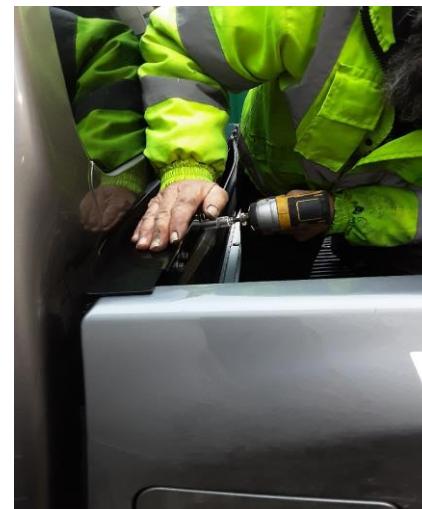

3) Ensure the bulkhead bar is pushed downwards and tighten all bolts



4) Refit C-Channel if removed



5) With two people, lift the lid 90 degrees and slot the lid into the bulkhead bar.



6) Attach the gas struts to the lid



7) Assemble the gas strut brackets and catches and loosely fit to the Navara.



8) Offer the lid down to the catches, realign and tighten. There is additional adjustment within catches at the lid end if needed. Use the Gas struts to measure the position required for the brackets (approx. 40 mm after the strut cylinder) tighten and fit the struts



Extra photos

NOTES:-

HARDTOPS
uk.com