

Side Arm Fitting Instructions for FR8DTHWTC Tri Fold Cover

Step 1.

Fit foam to side arms to protect tub body




Step 2.

Attach rear brackets into tie down points and Loosely bolt on side arm (tighten after step 3)



Step 3.

Attach bar onto bulkhead bar

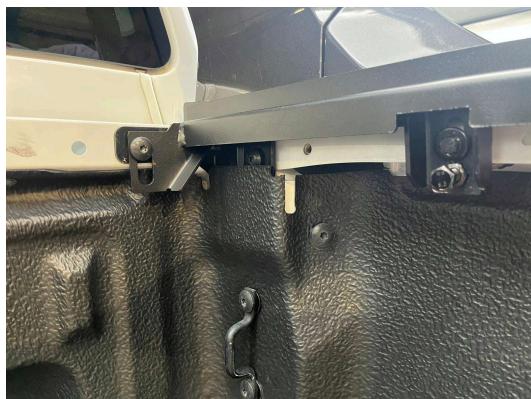

Step 4.

Attach side brackets



Step 5.

Adjust tension screw to keep bars level



Step 6.

Tighten all bolts ready to fit trifold cover

