



FITTING INSTRUCTION


TOYOTA REVO

Note :


Apply WD40 or grease to the moving parts regularly for good performance of the product.

Patent Pending Worldwide

Part list

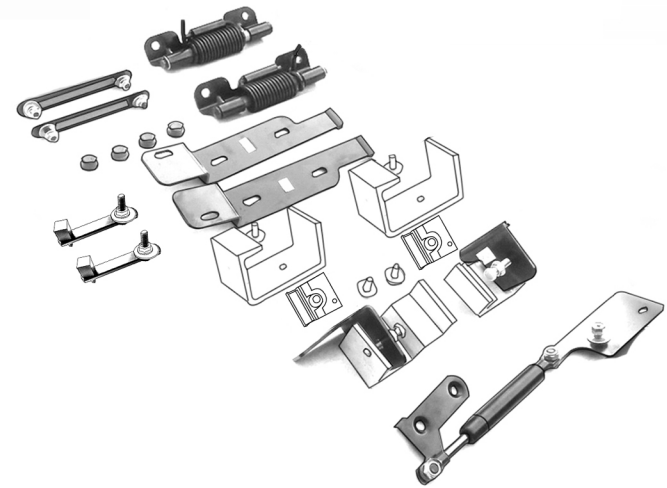


Tooling

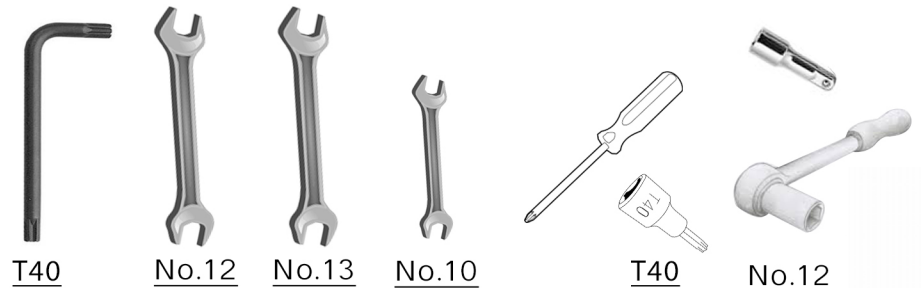

Patent Pending Worldwide




1. Take off tailgate cover plate

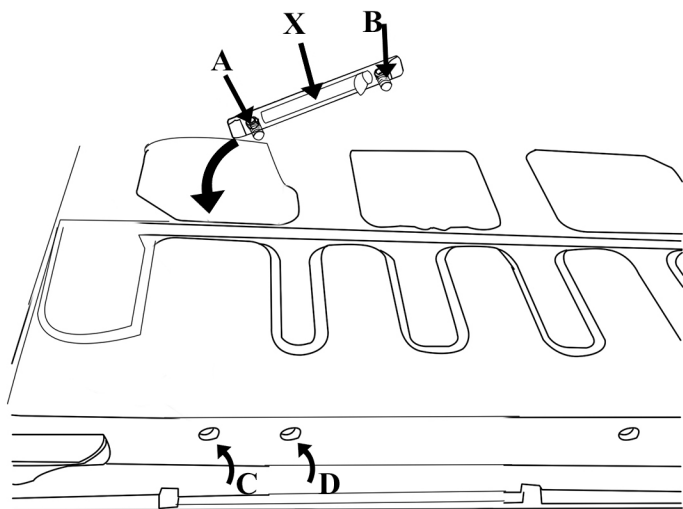


2. put bracket X into the tailgate (peel off glue tape and stick it inside the tailgate). Place bolt A&B through hole C&D

CAUTION

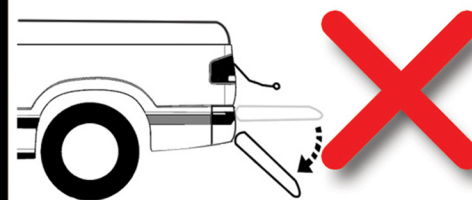


**Do not take off
tailgate cable
and drop down
the tailgate**

12. Install damper bracket (with tailgate)

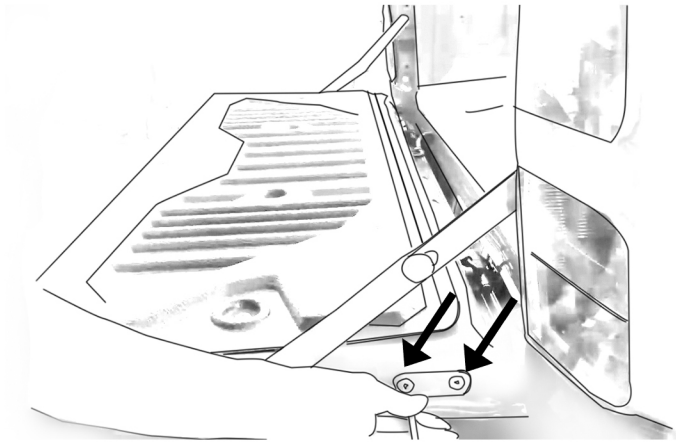


take off original bolts

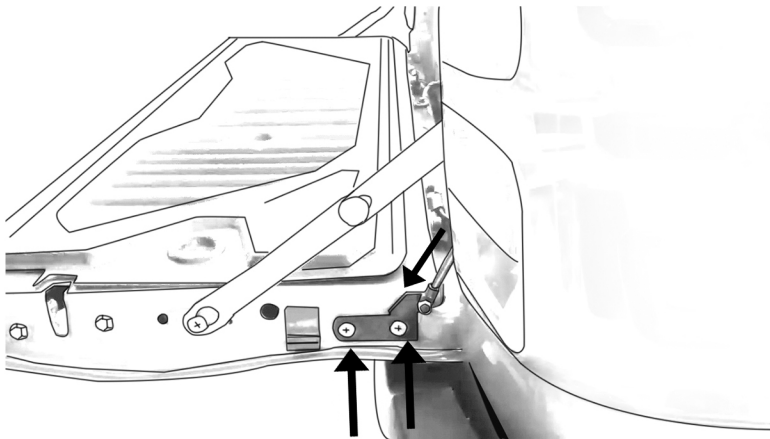


Pull the damper out and
put damper bracket and tighten back the
original bolt.

Process #3 - #5 is done while tailgate in close position.



3. Put ProLift bracket with tailgate (from the bottom)

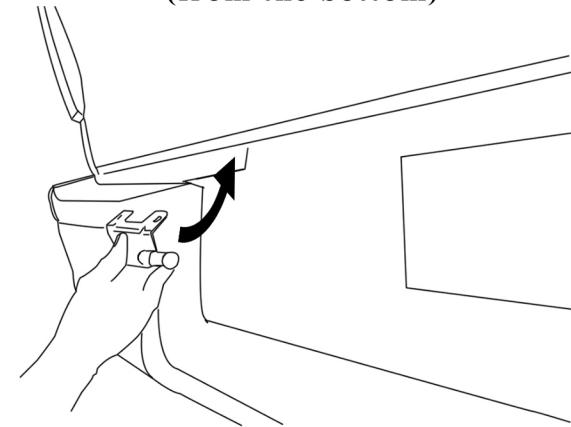


4. Tighten nut E&F

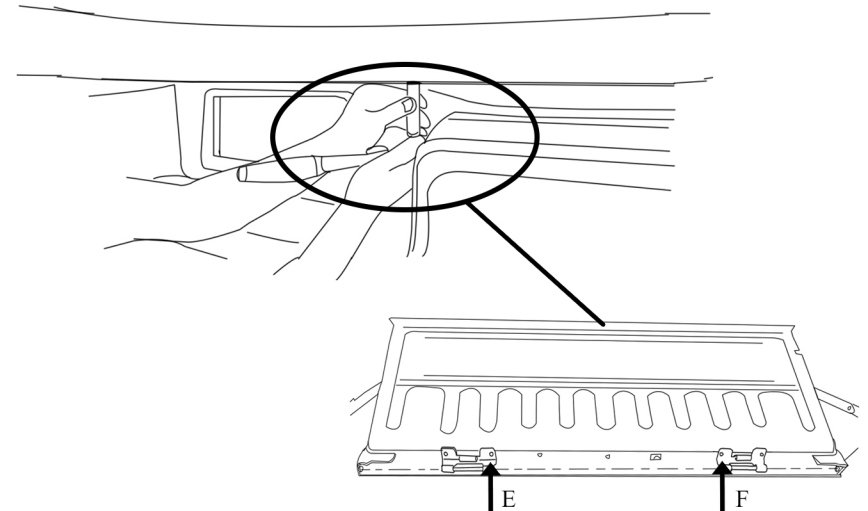

Install spring leaning bracket

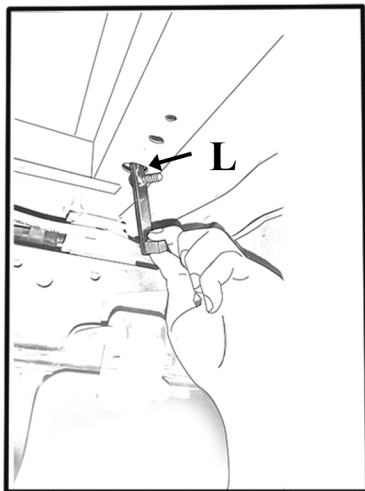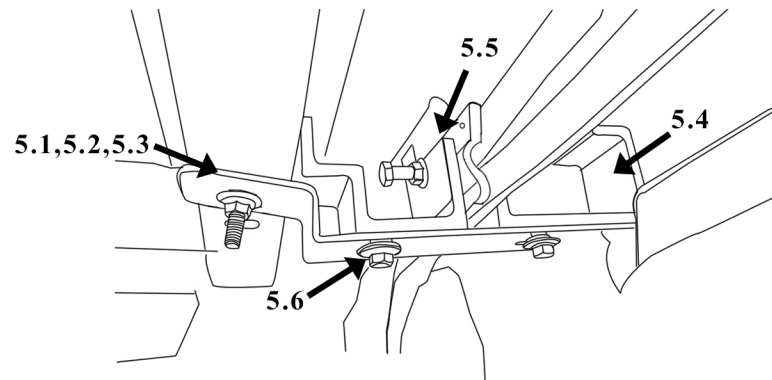


5.1 put bolt-welded bracket (L) to the position.

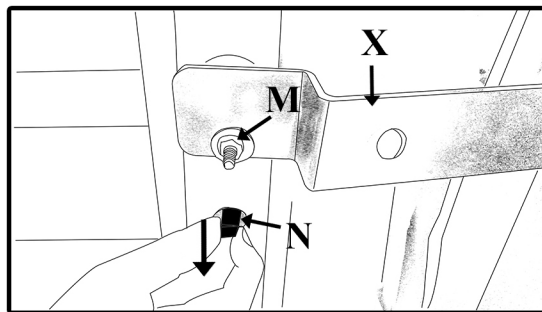

**5.2 put main bracket (X) in position.
Finger tighten nut M**





10. Install damper bracket and tighten bolt (U)

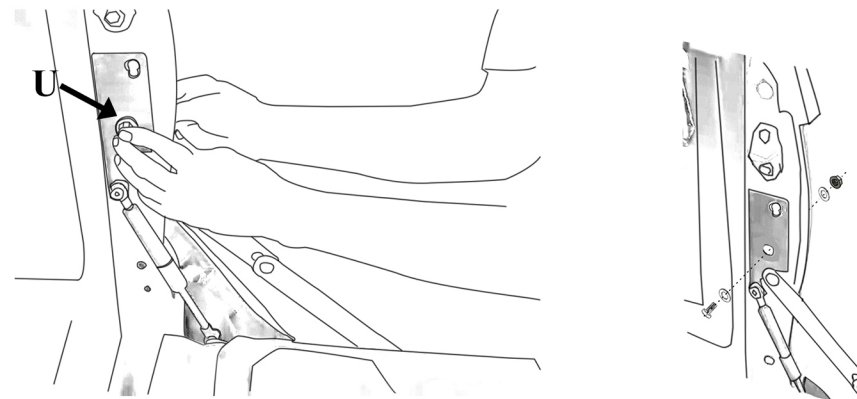


11. Put rear light in place and tighten original bolt I&J



**9. Take off rubber bumper and cut as picture below
and put it back**

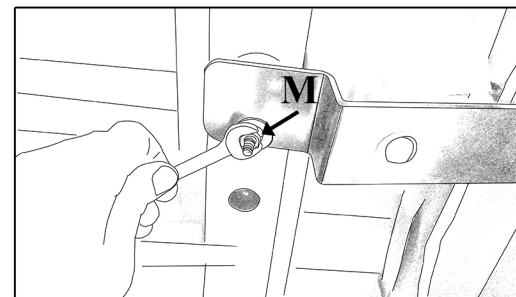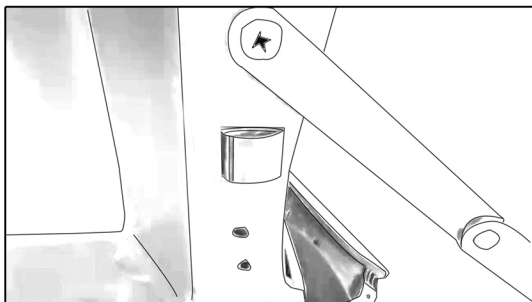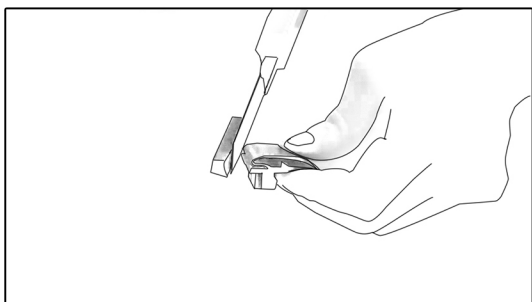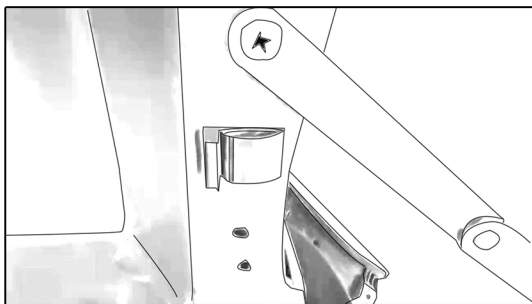


5.3 tighten nut (M)

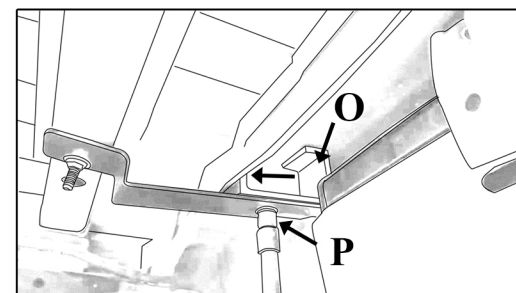


**5.4 put aluminium part (O)
in place
and tighten bolt (P)**


**5.5 put bracket (Q)
in place
put bracket (T)
and tighten bolt (R)**

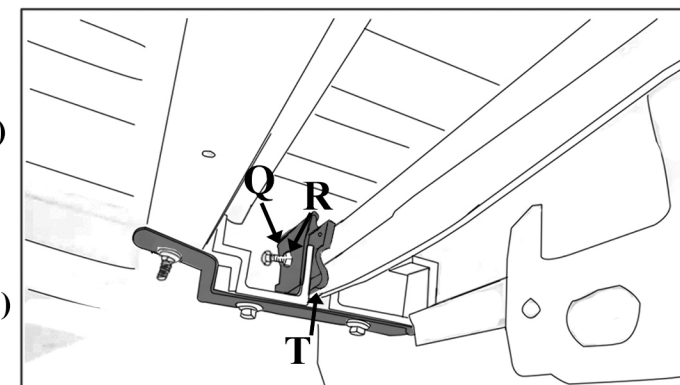


5.6 tighten bolt (S)

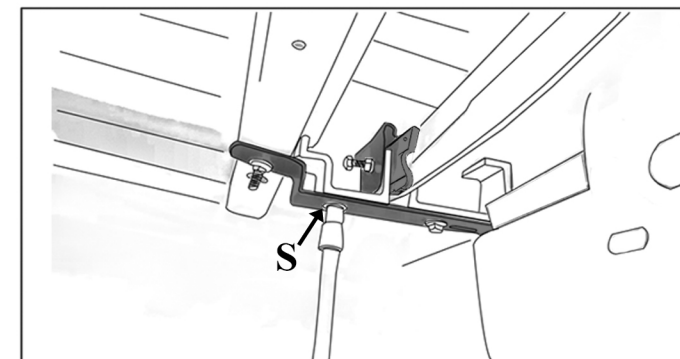

6. Tighten nut G&H

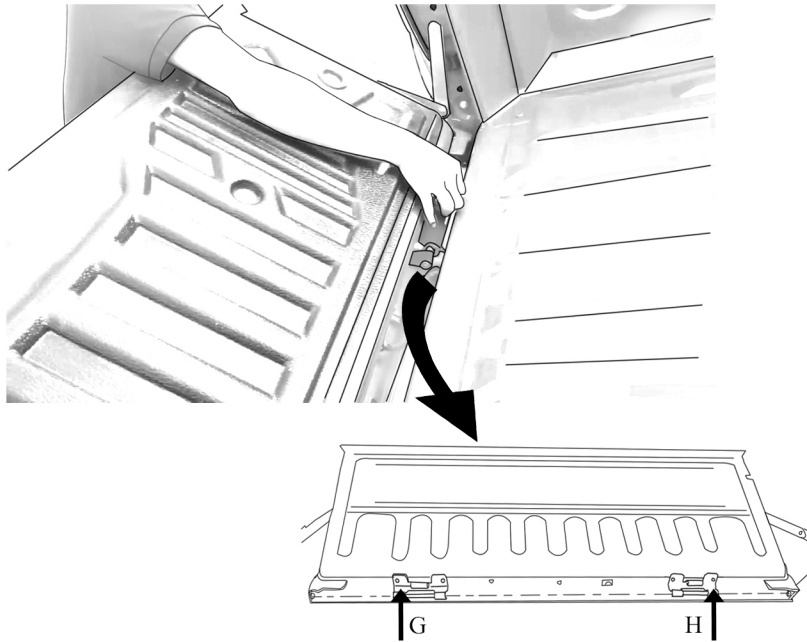


7. Put plastic plugs cover nuts

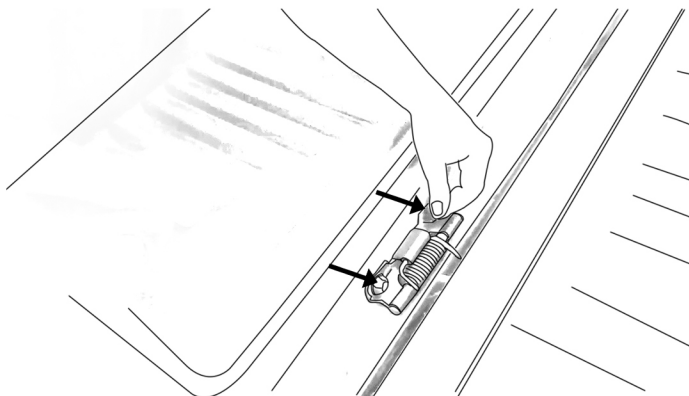


Install damper

8. Unbolt I&J

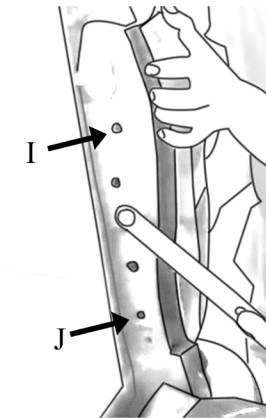

Unbolt I&J

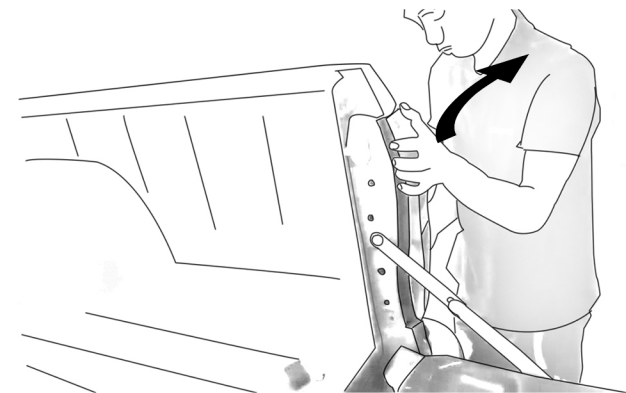

Take out rear light cover
(direction to the side of the truck)