



# TRAYSLIDE DECK FITTING INSTRUCTIONS

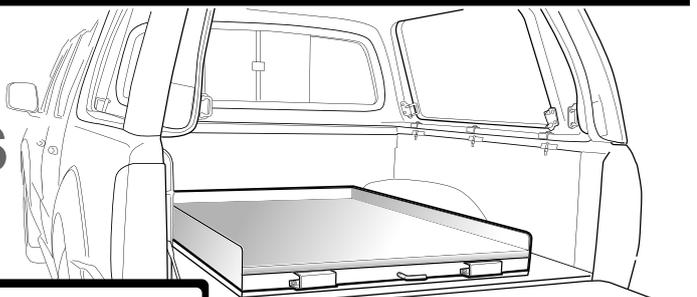

## Required tools

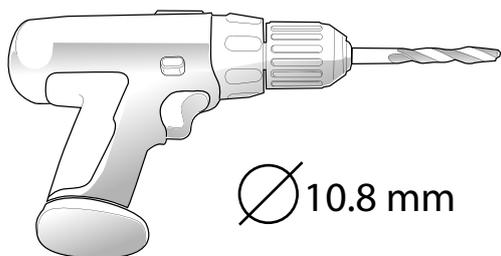

∅ 10.8 mm



13 mm

## Fitting Kit



M8 x 30 x 1.25



**x 6**



M8 x 1.25



### Step 1 :

- Place and Centre The Base frame in the Truck Bed.
- Place Front Base Frame Touching the Front Wall Of the Pick-Up Bed.

### Step 2 :

- Centre the front by measuring the Distance between the Front Base Frame and the side of the Pick-up Bed.

### Step 3 :

- Mark the 6 Holes of the Base Frame.

**NOTE :** Before drilling, make sure that you don't drill through various parts if the Vehicle by Mistake.

### Step 4 :

- Firstly, drill pilot holes.
- Follow by Drilling a 10.8mm Hole through the Floor of the Pick-Up Bed (x6).
- Paint the Bare Metal of the hole with a suitable anti corrosive paint.

**NOTE :** Look before drilling.

### Step 5 :

- Put 6 Rivet-nuts (M8 x 1.25) provided into the 6 Holes.

### Step 6 :

- Crush the 6 Riv-Nuts with the Flat Tool Provide.

### Step 7 :

- Place back and Centre the Base frame in the Truck Bed.
- Place Front Base Frame touching the Front Wall of the Pick-up Bed.

### Step 8 - 9 :

- Bolt securely the 6 M8 x 30 x 1.5 bolts + Washers provided with a Spanner 13mm the Base Frame on the Truck Bed.
- The Top TraySlide is now ready to install.

### Step 10 :

- Place the Top Deck by aligning the bearing into the base truck bearing notches.
- Turn the T - Handle, allowing the deck to fall into the Truck.
- Holding the T - Handle in the Open position, slide the Deck forward until it stops, lift stops, life the rear over the Stops and lower the Deck into position.

# TRAYSLIDE DECK FITTING INSTRUCTIONS

