



# **User's Manual of Retractable Tonneau Cover**

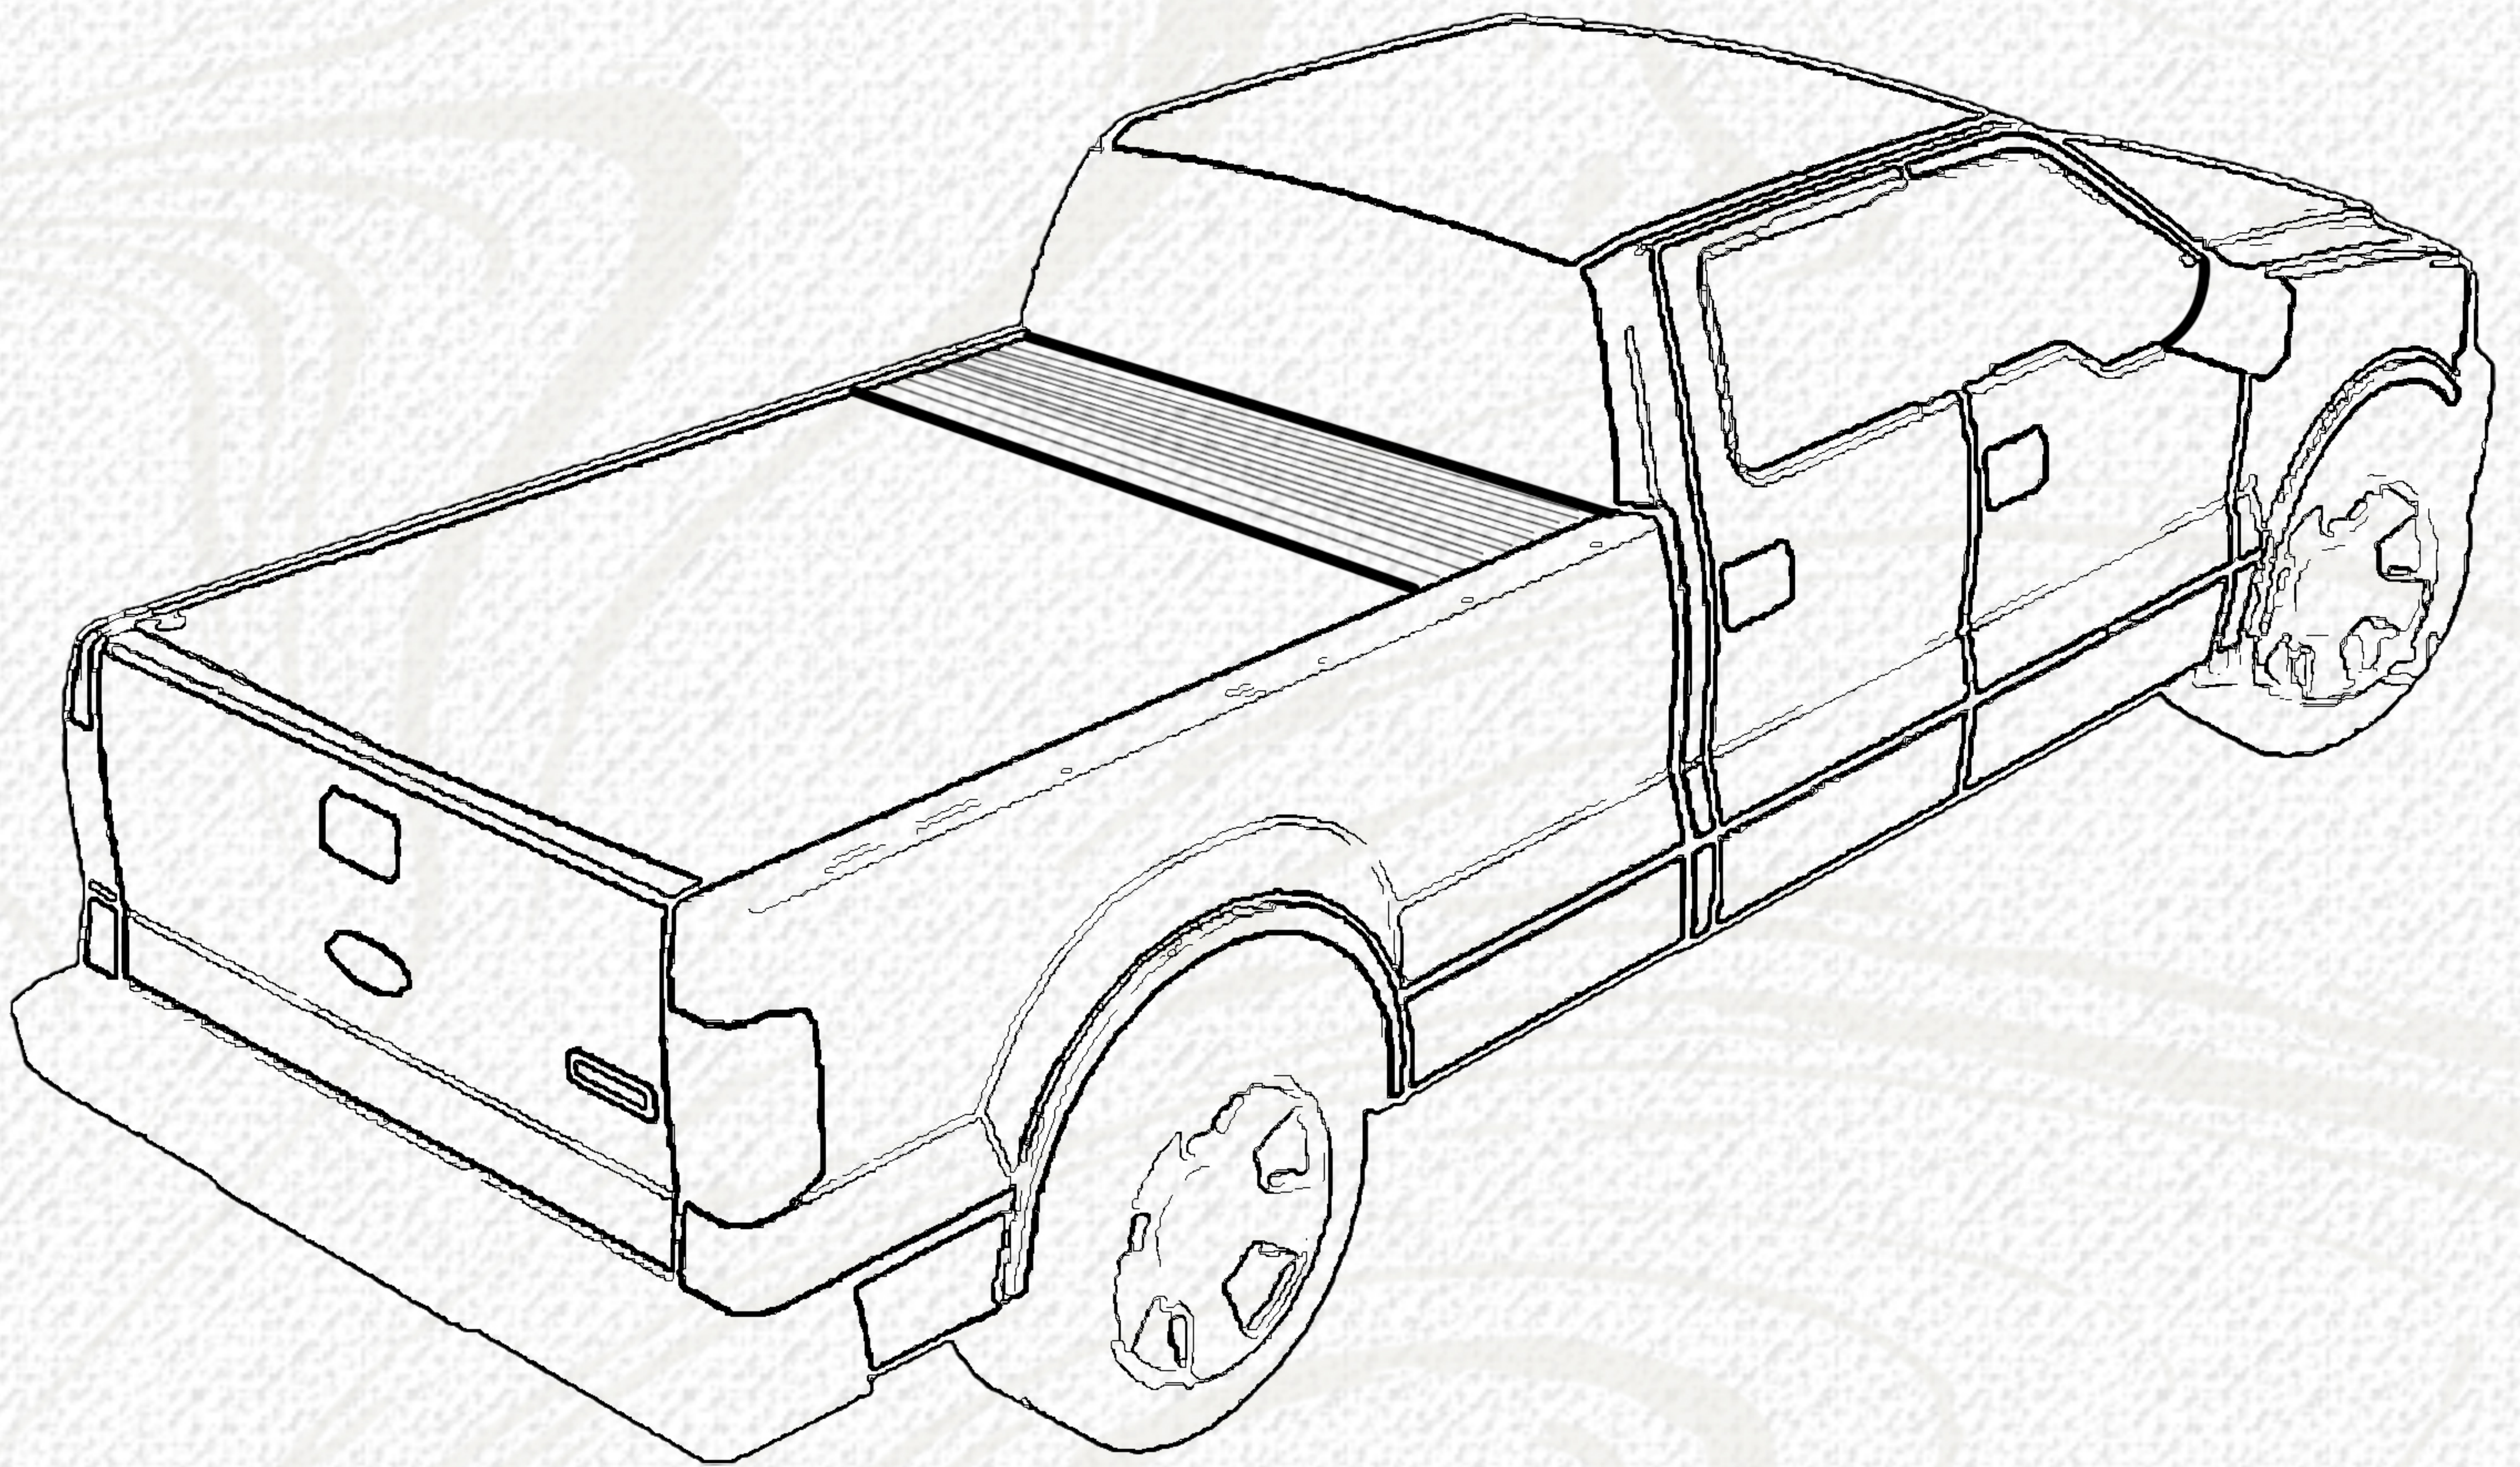




# Accessories List

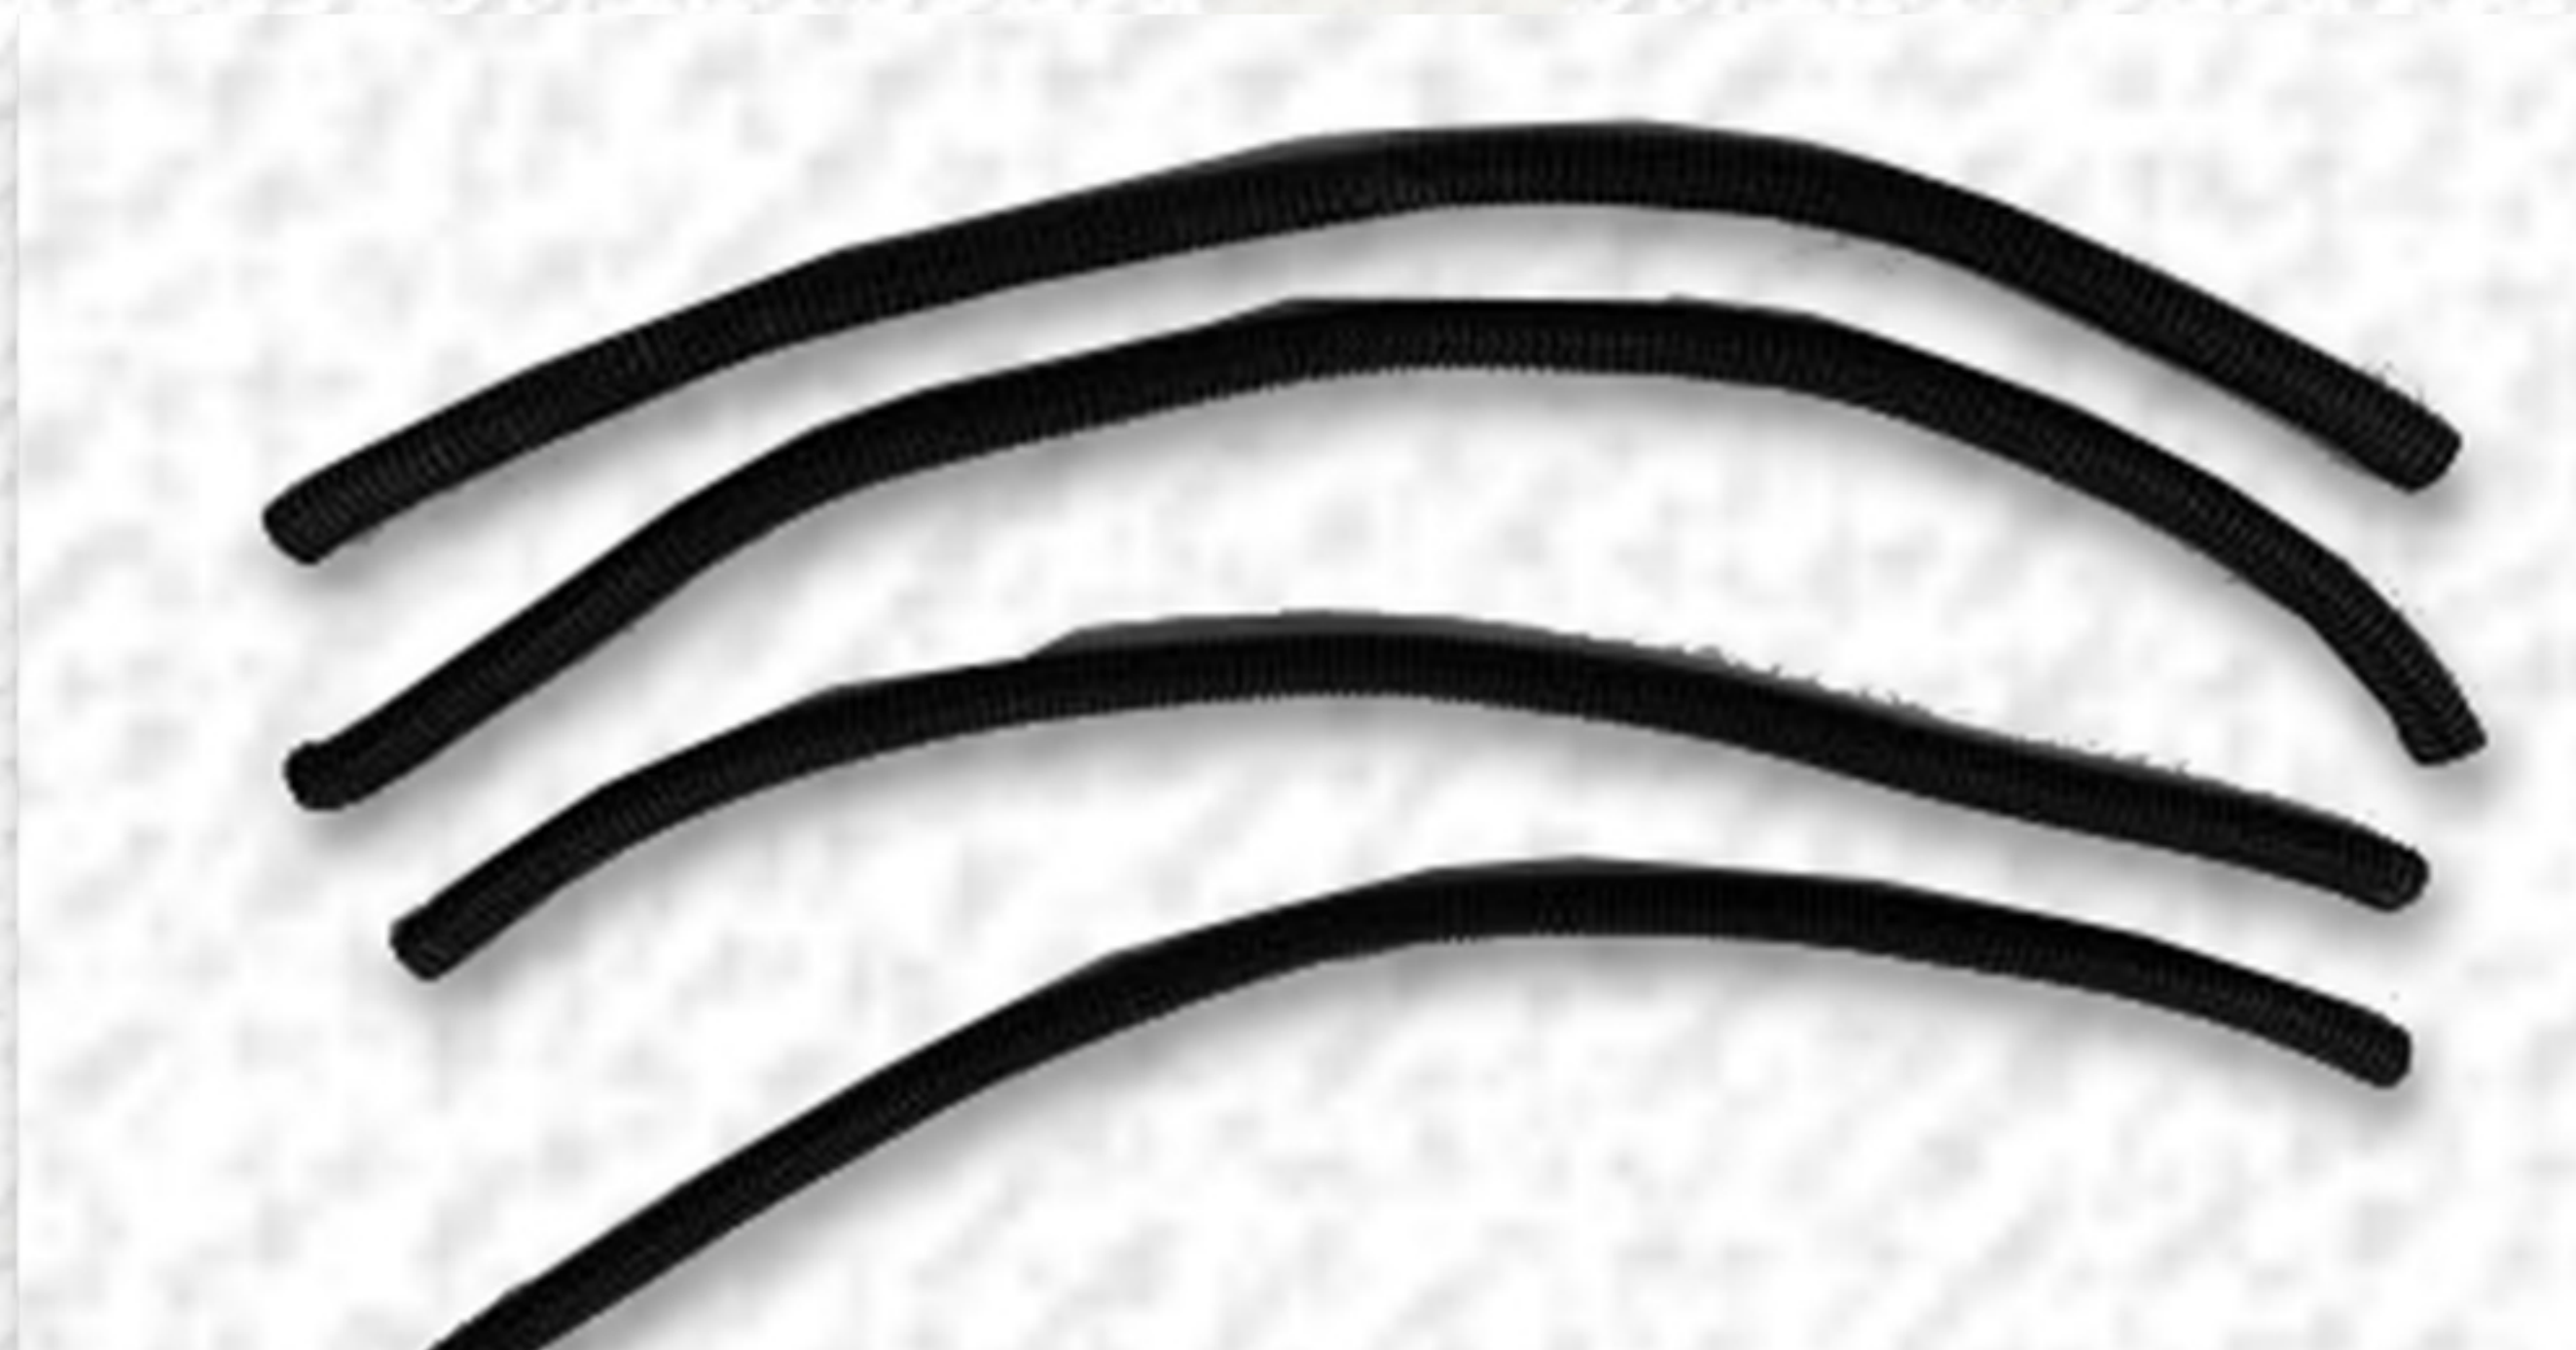

**YT01:Drain Tube**

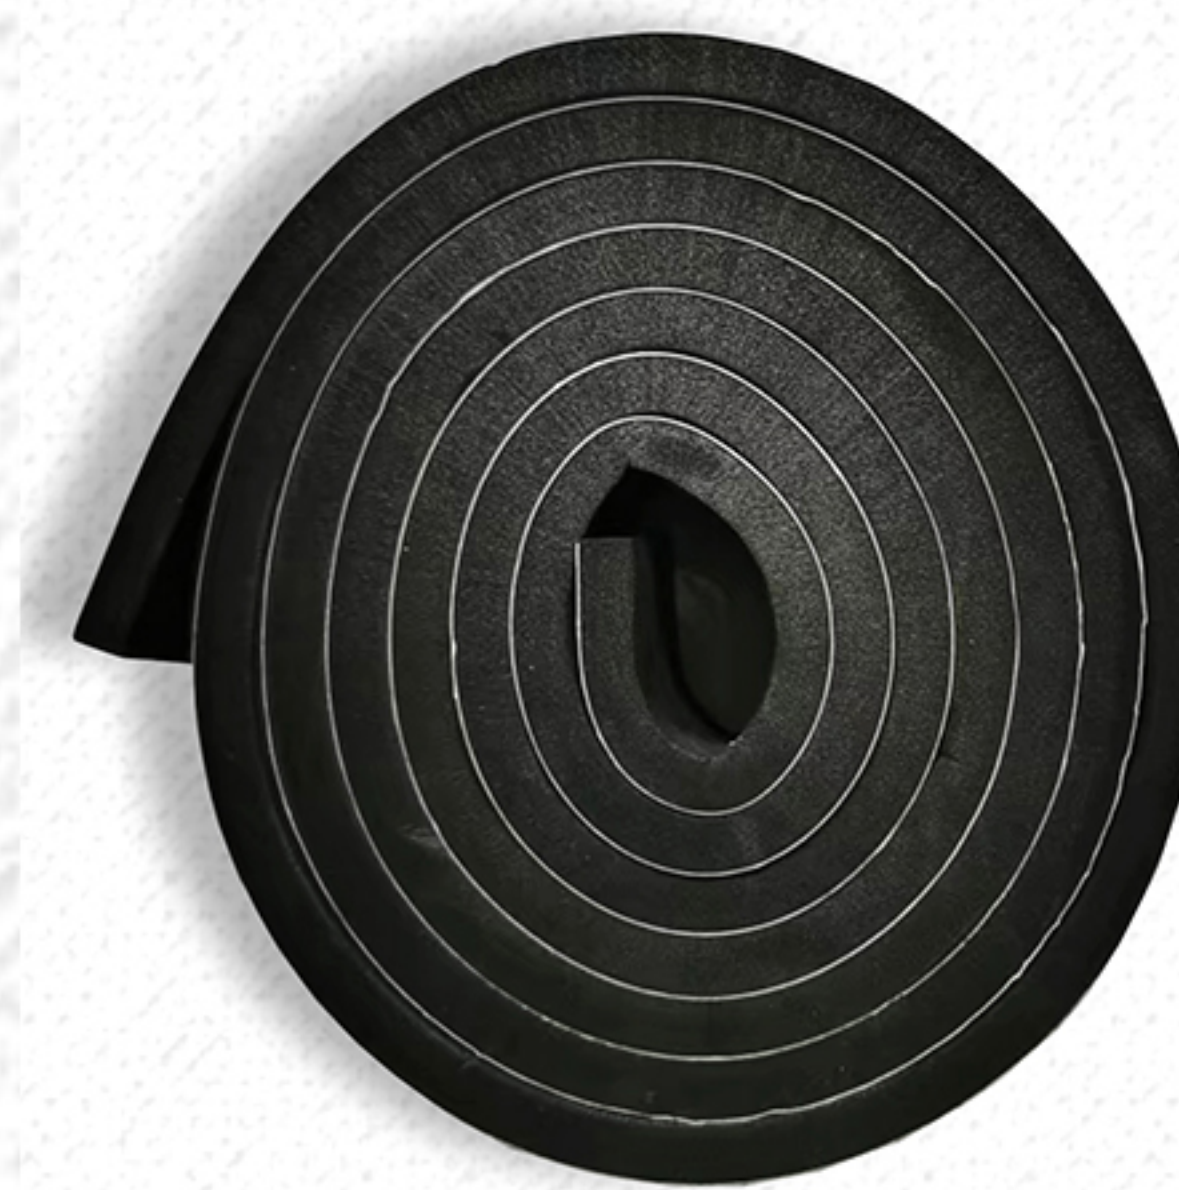

**YT02:Foaming Adhesive Tape**



**YT03:Lock Hook A04:5.5\*32 Screw;  
YT05:M5 Nut**



**YT07:M6\*12 Flange Bolt YT08:M6 Washer;  
YT09:S=5 Wrench**



**YT10:Rubber Cover of Track Front End  
YT11:Rubber Washer of Drain tube**



**YT12:Washer; YT13:Screw Cap  
YT14:M5\*7 Screw**



**YT15:Top Cover**



**YT16:Horizontal Positionig Lever**



# Accessories List



**YT17:M6 Screw YT18:M6 Nut**



**YT19:Side Track(One Left andOne Right)**



**YT20:Brackets**



**YT21:M8\*40 Track Mounting Kit**



**YT22:Screw Washer**



**YT23:M8\*50 Screw**




**YT24:Hose Clamps of Drain Tubes**




**YT25:Lubricant**




# NOTE

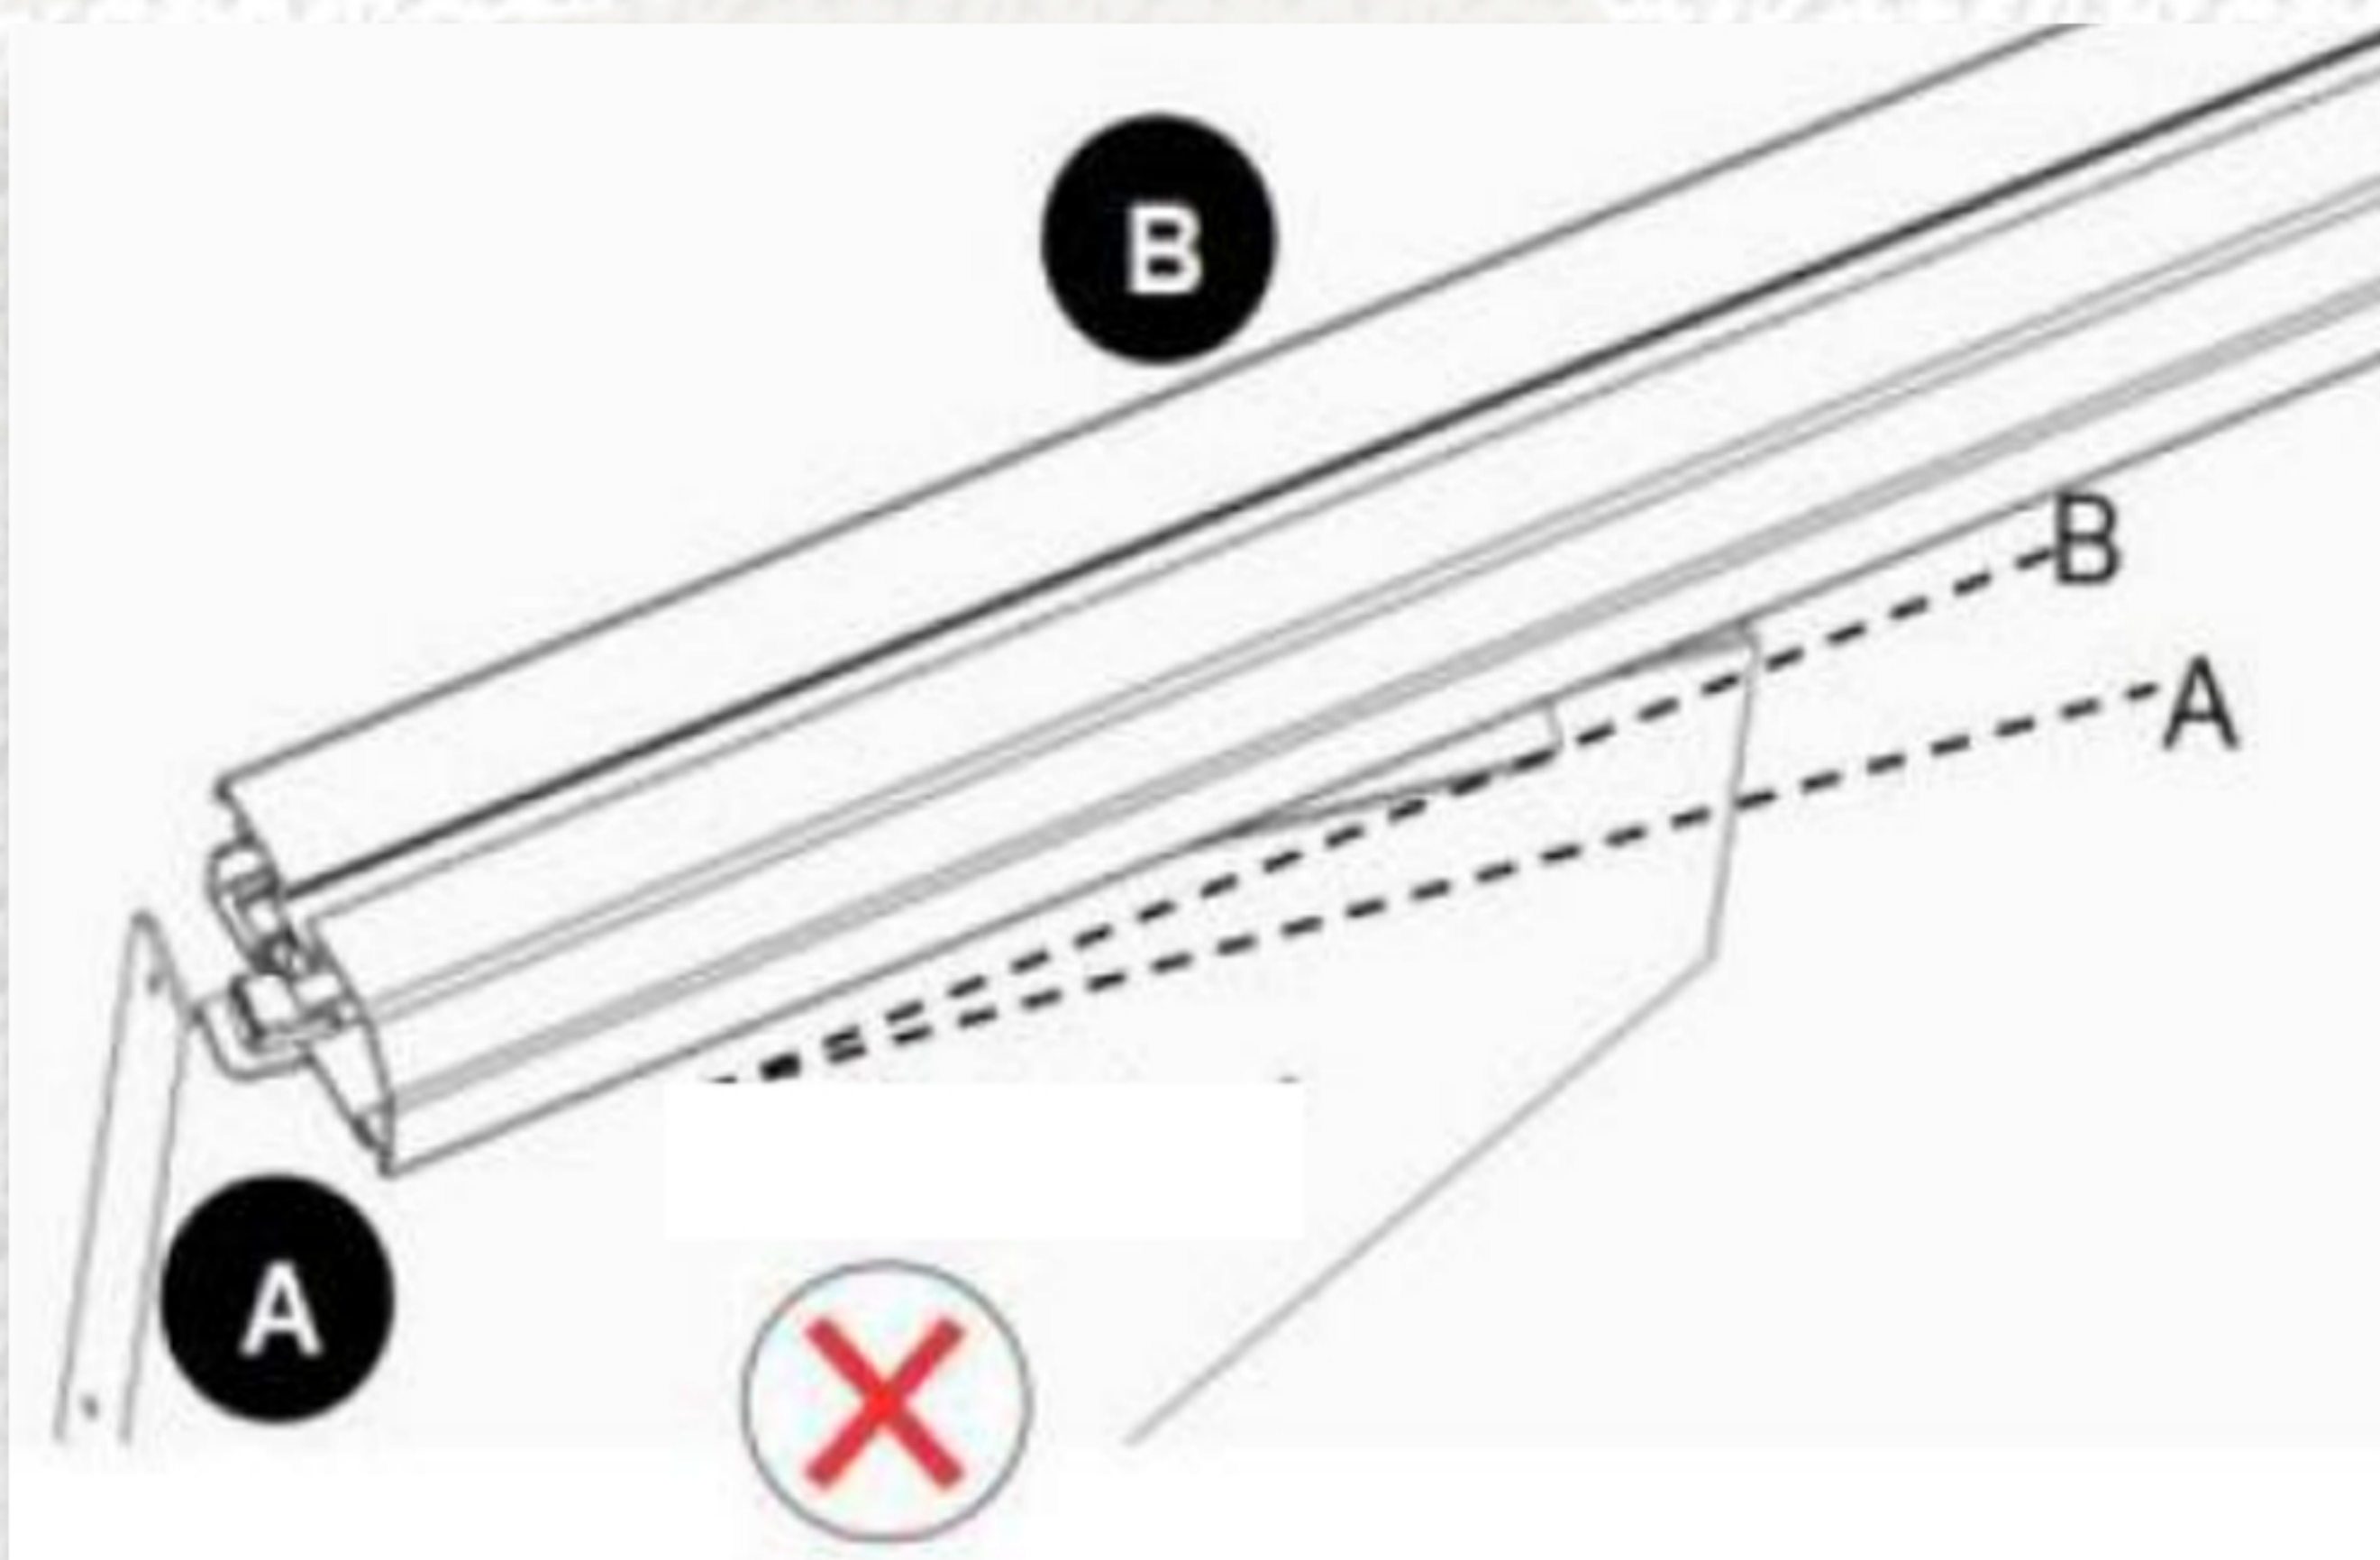


**Vertical direciton**

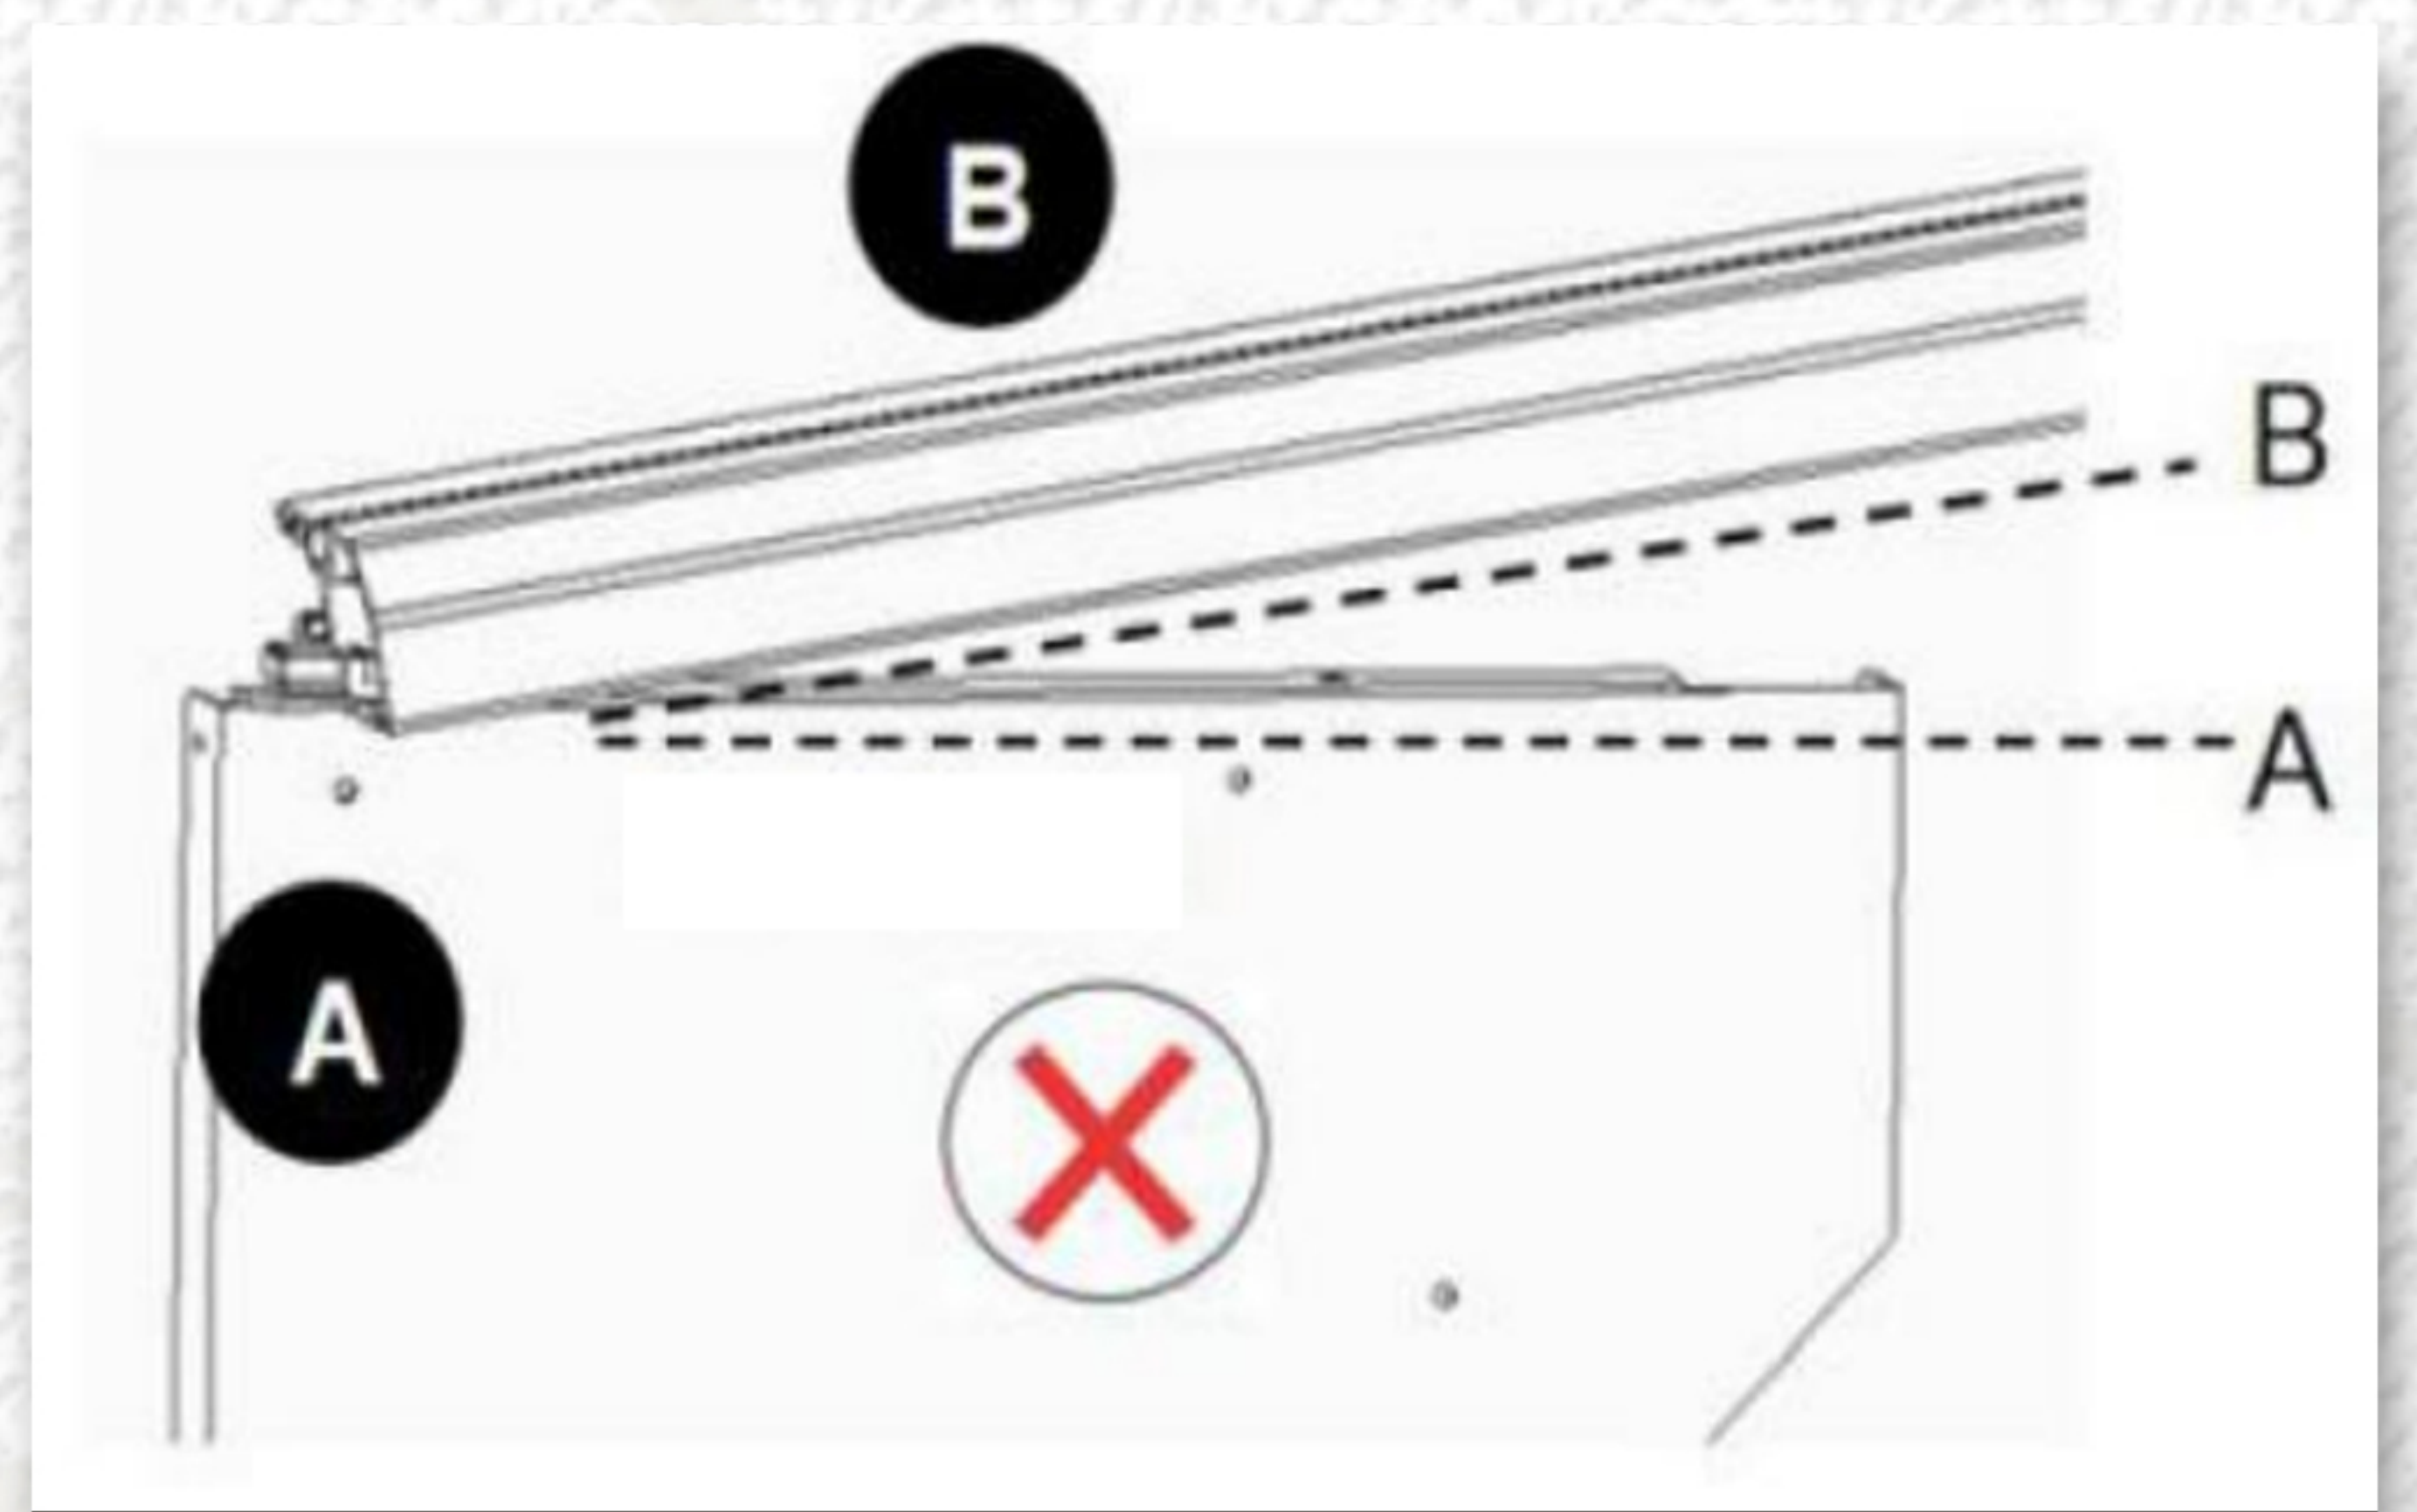

**Horizontal direction**

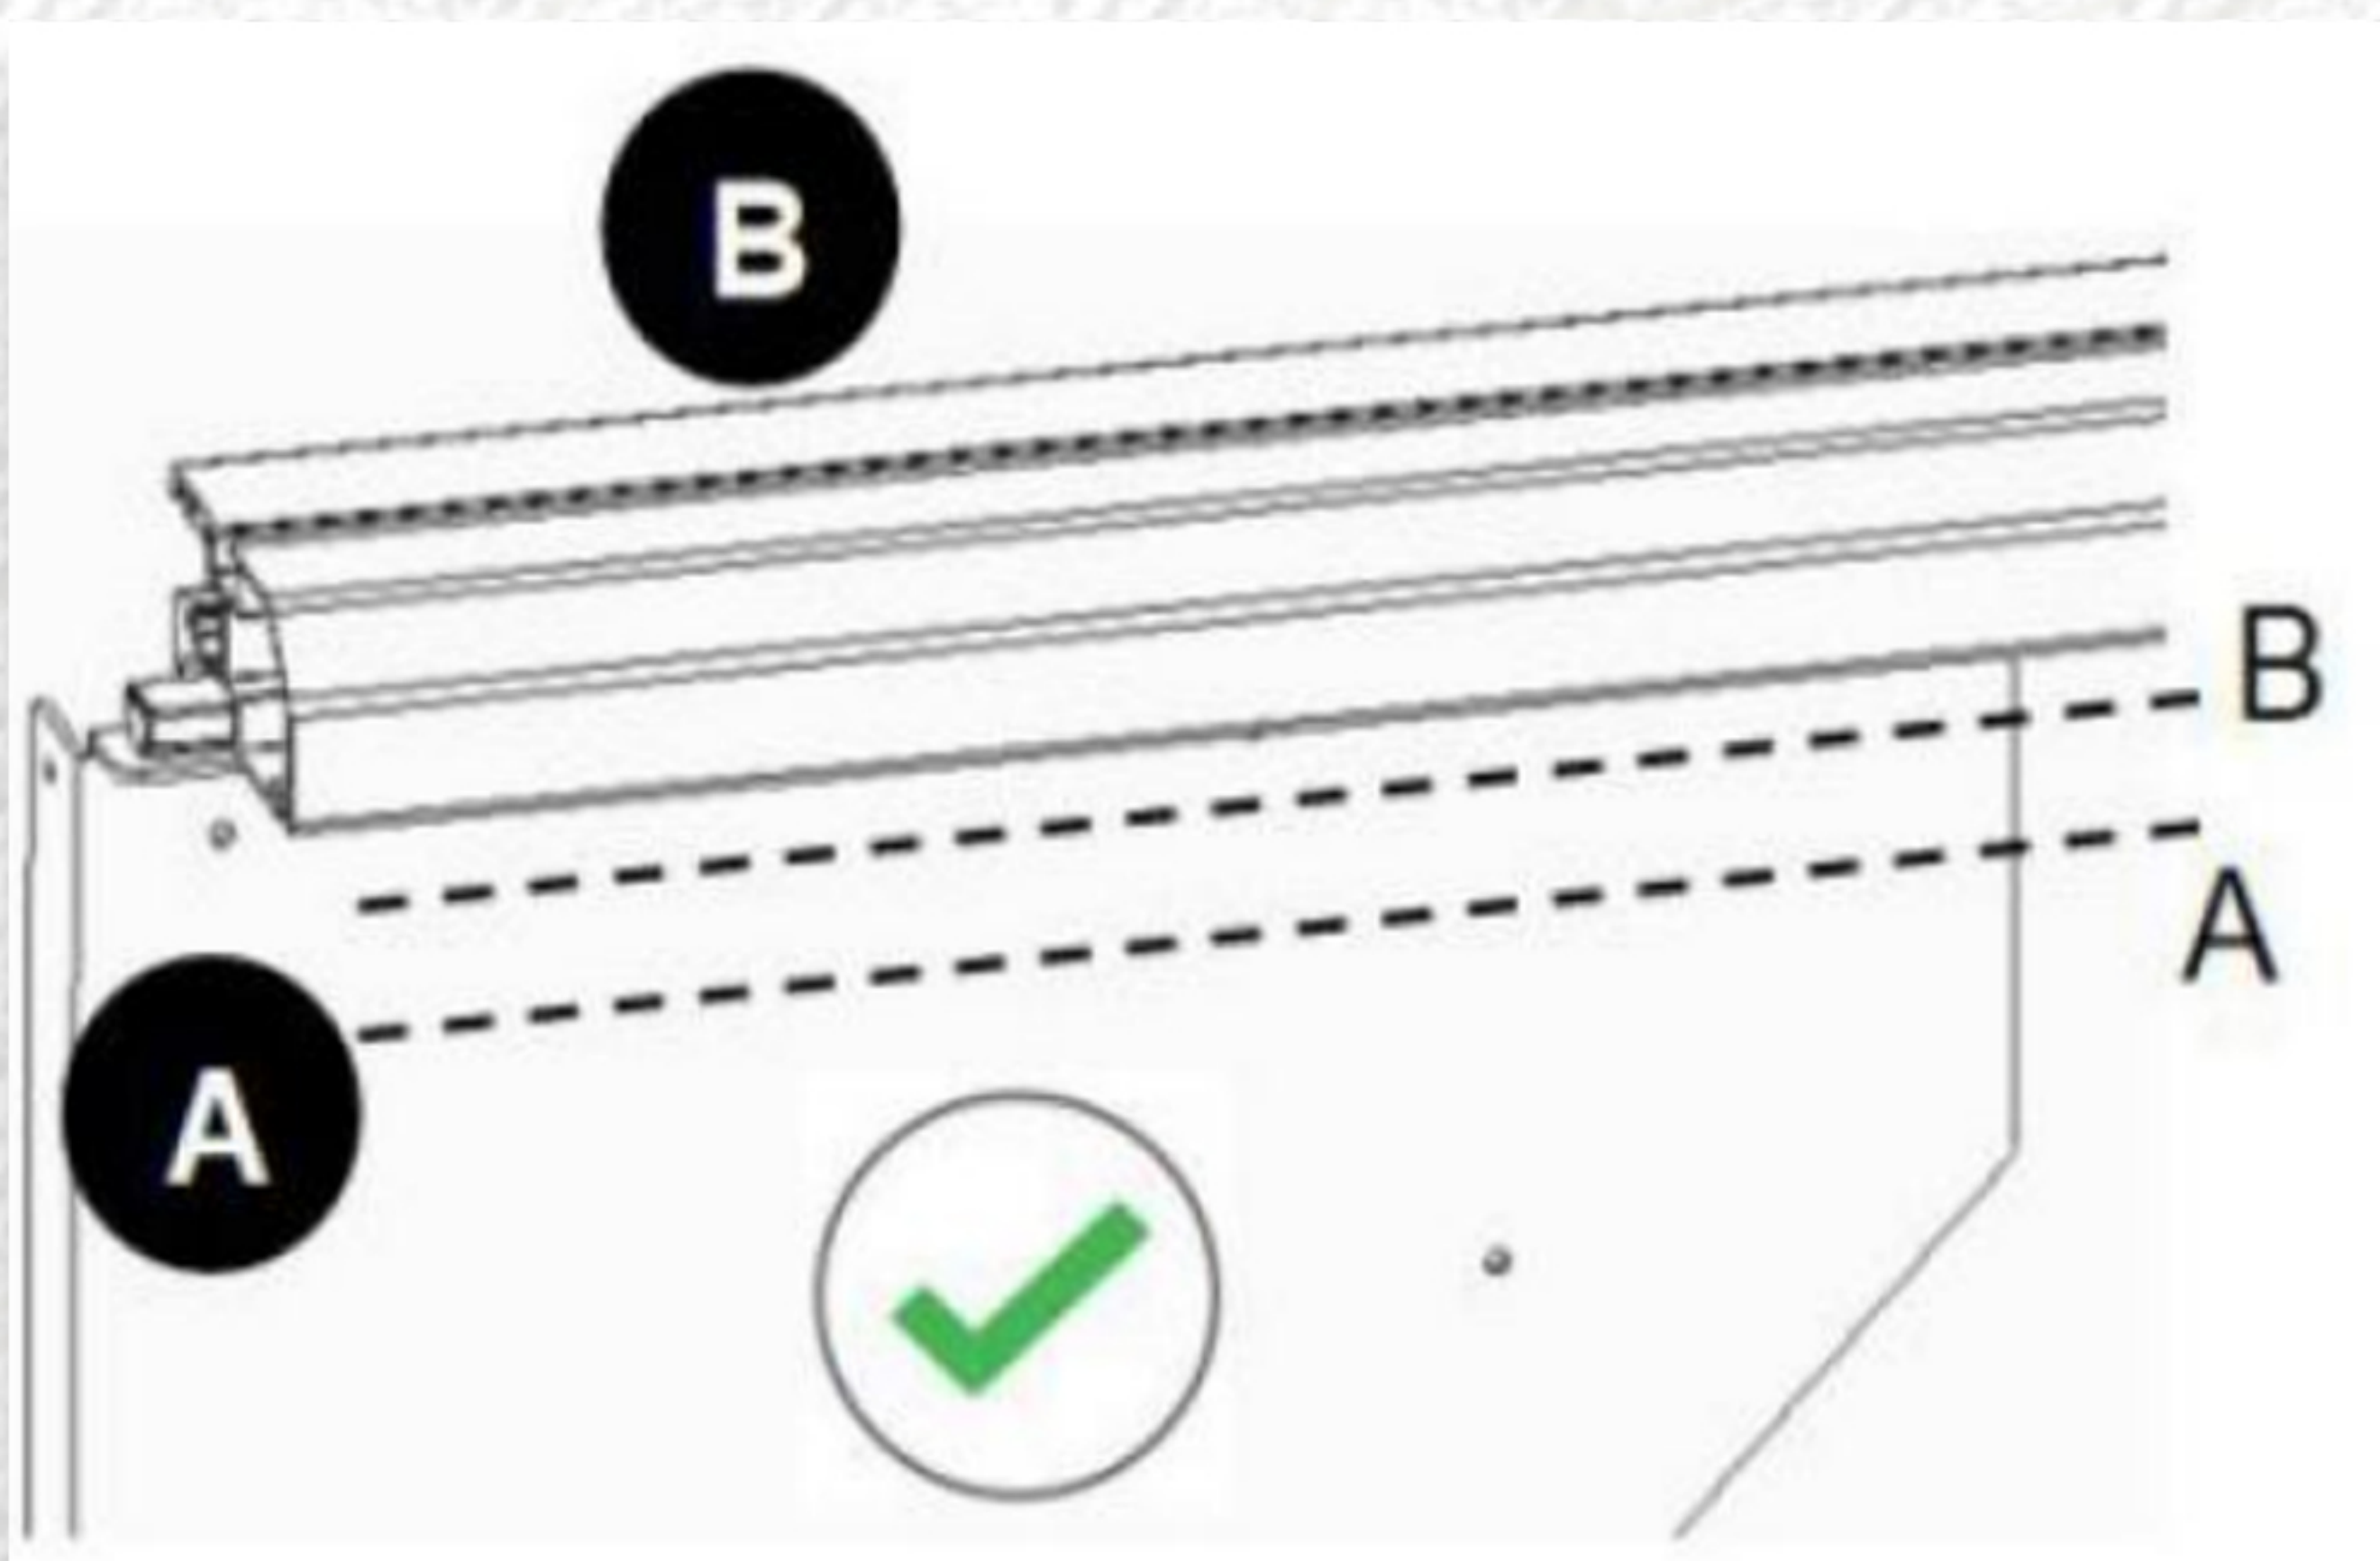

**Put In Horizontal**

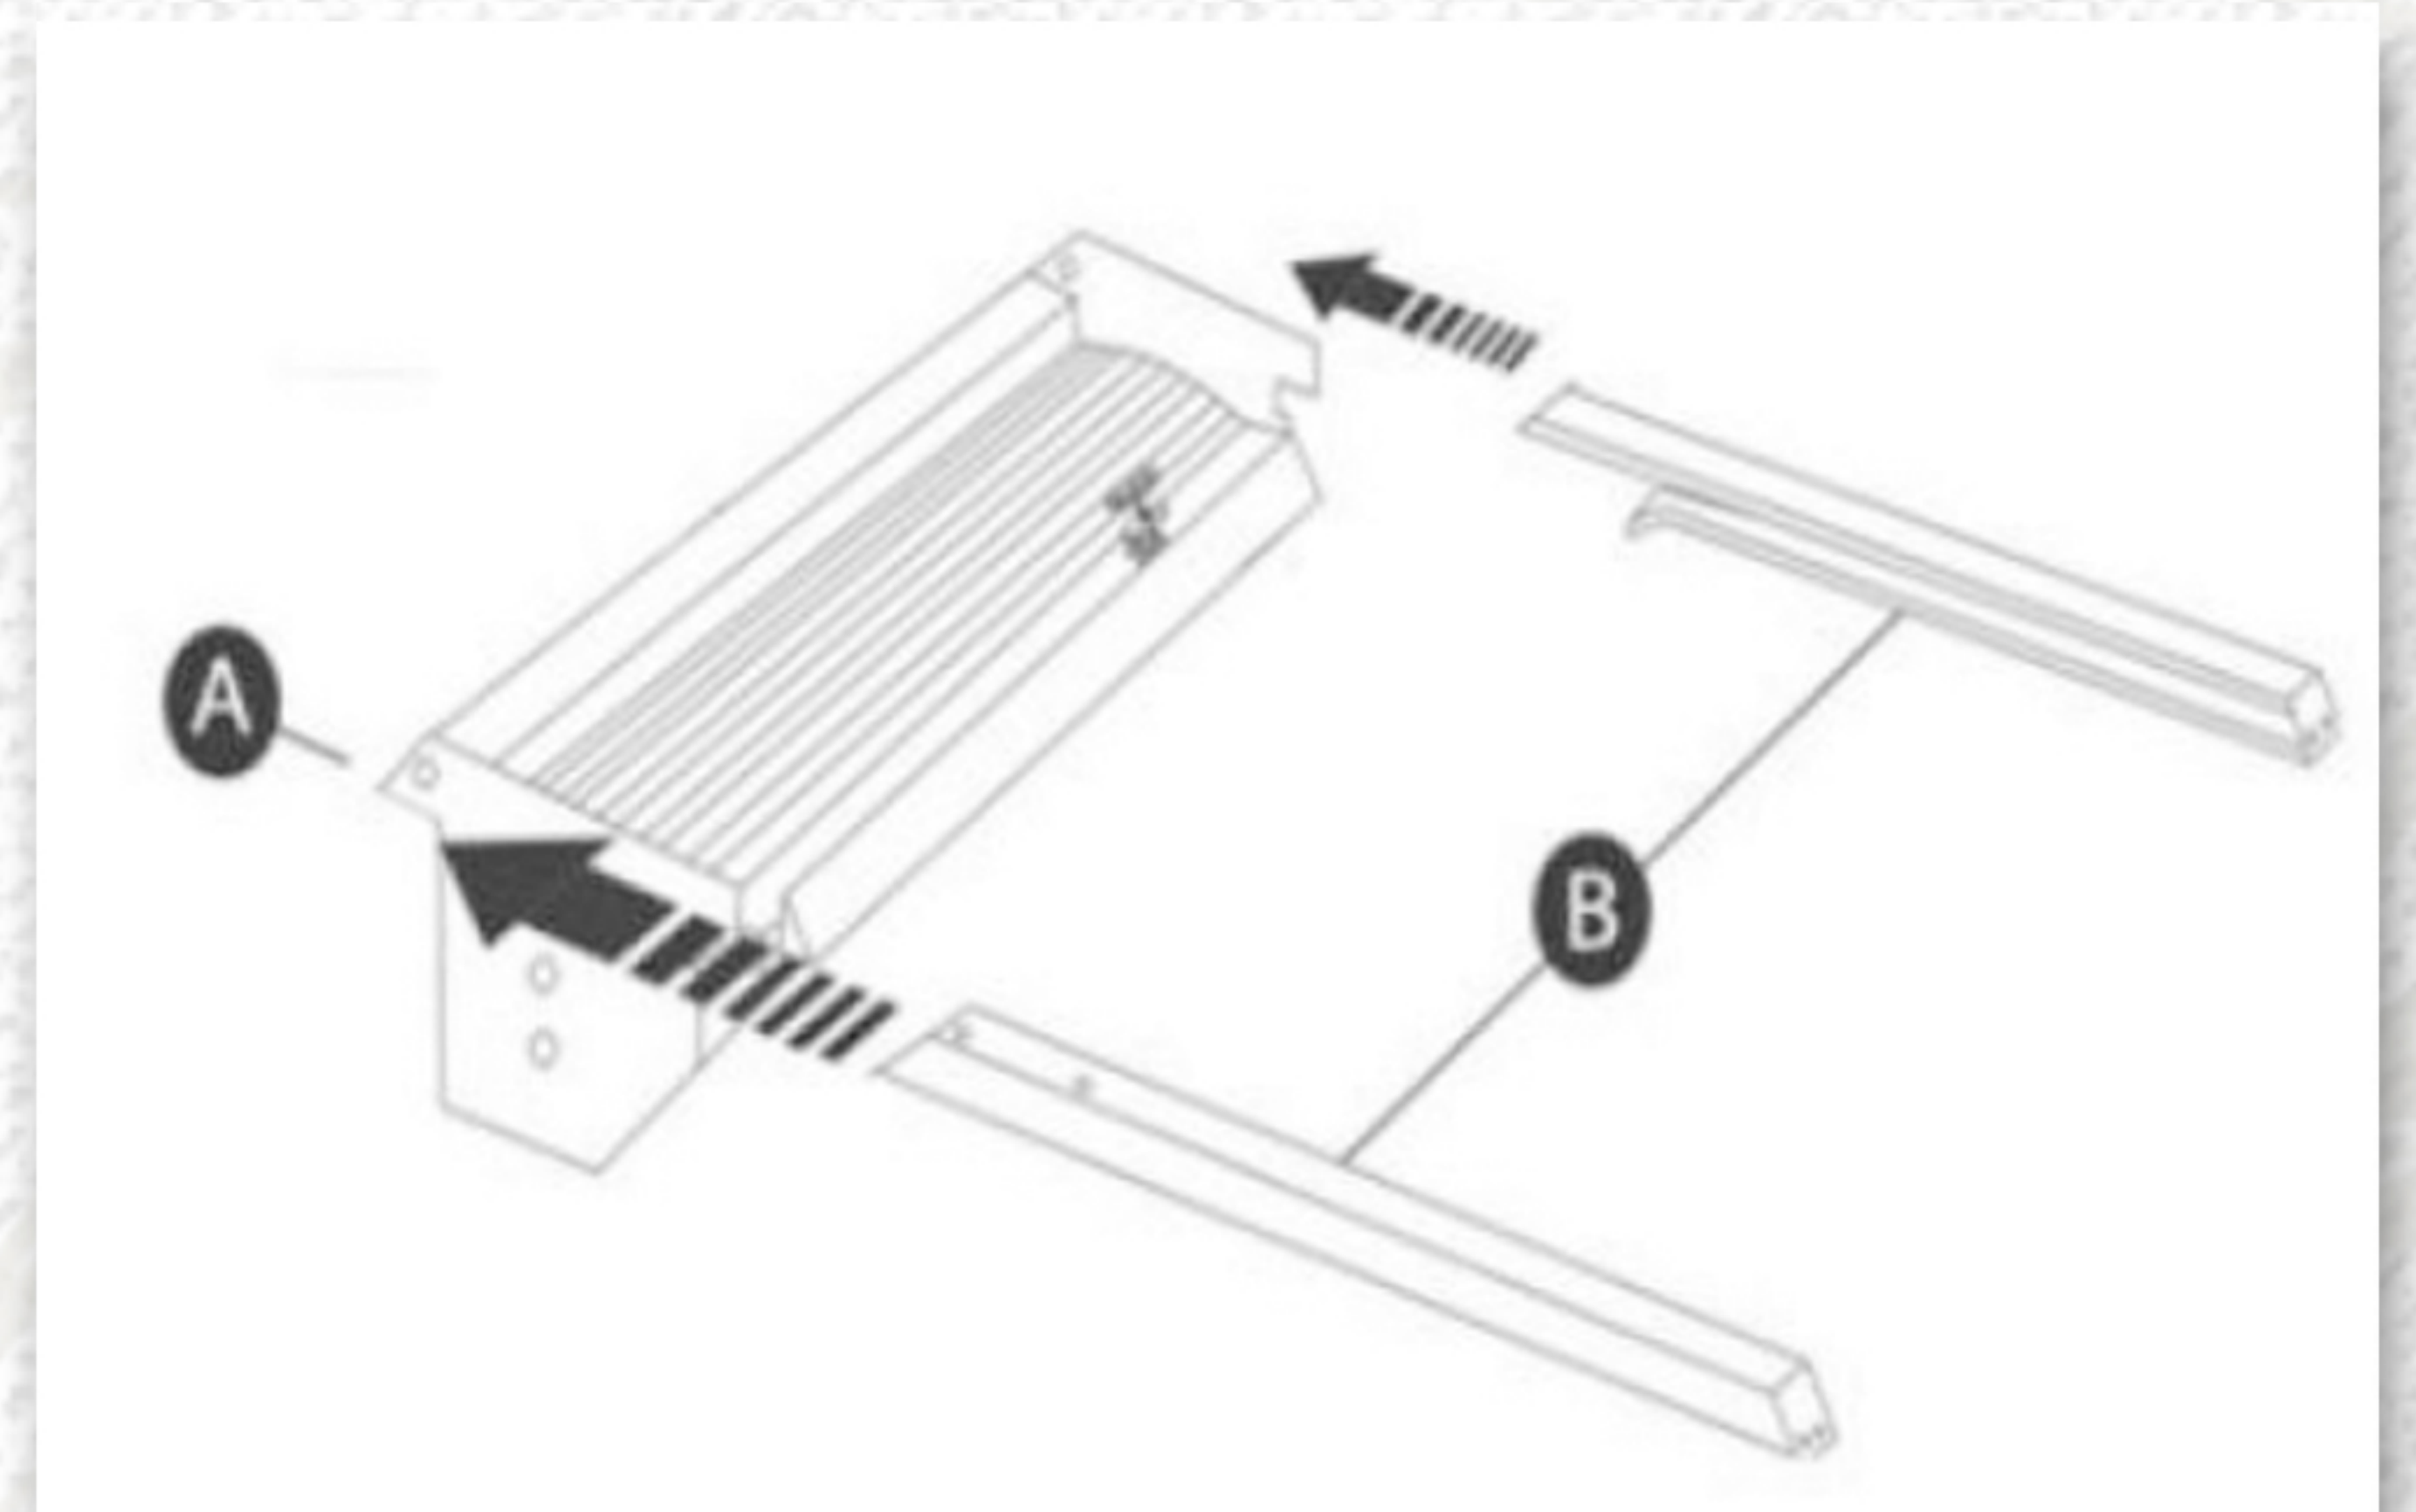

**Installation in horizontal to avoid issue**





# Installation



①Fixing the horizontal guide rail;  
②Install the rubber cover of the front end of the Side Track(YT10)



Find the two screw holes in the red circle and tighten the screws(YT07,08)

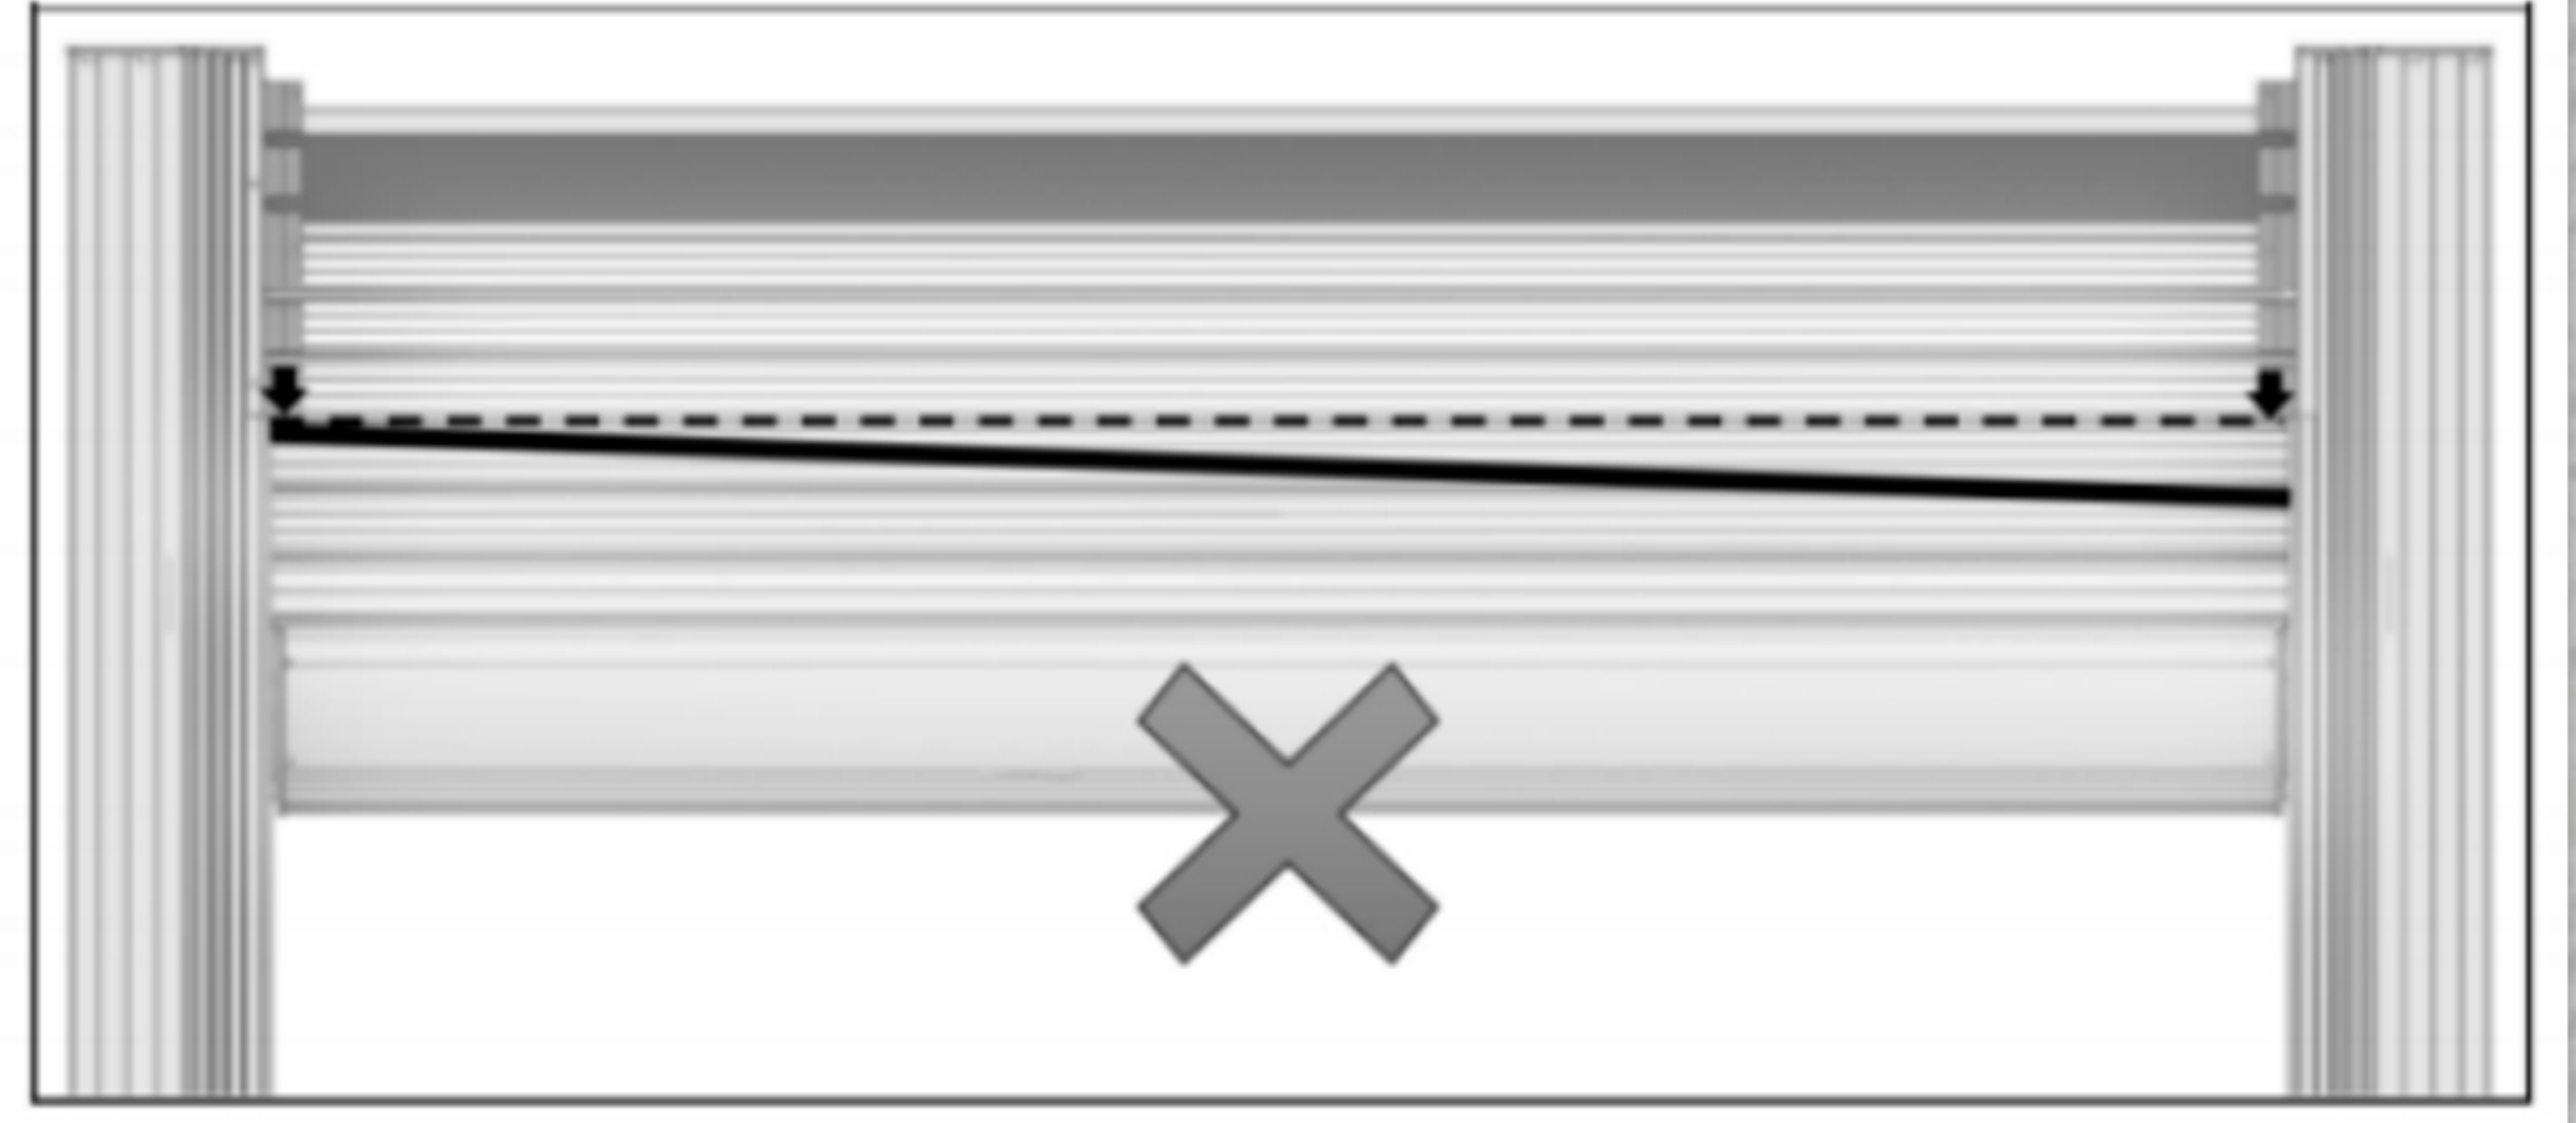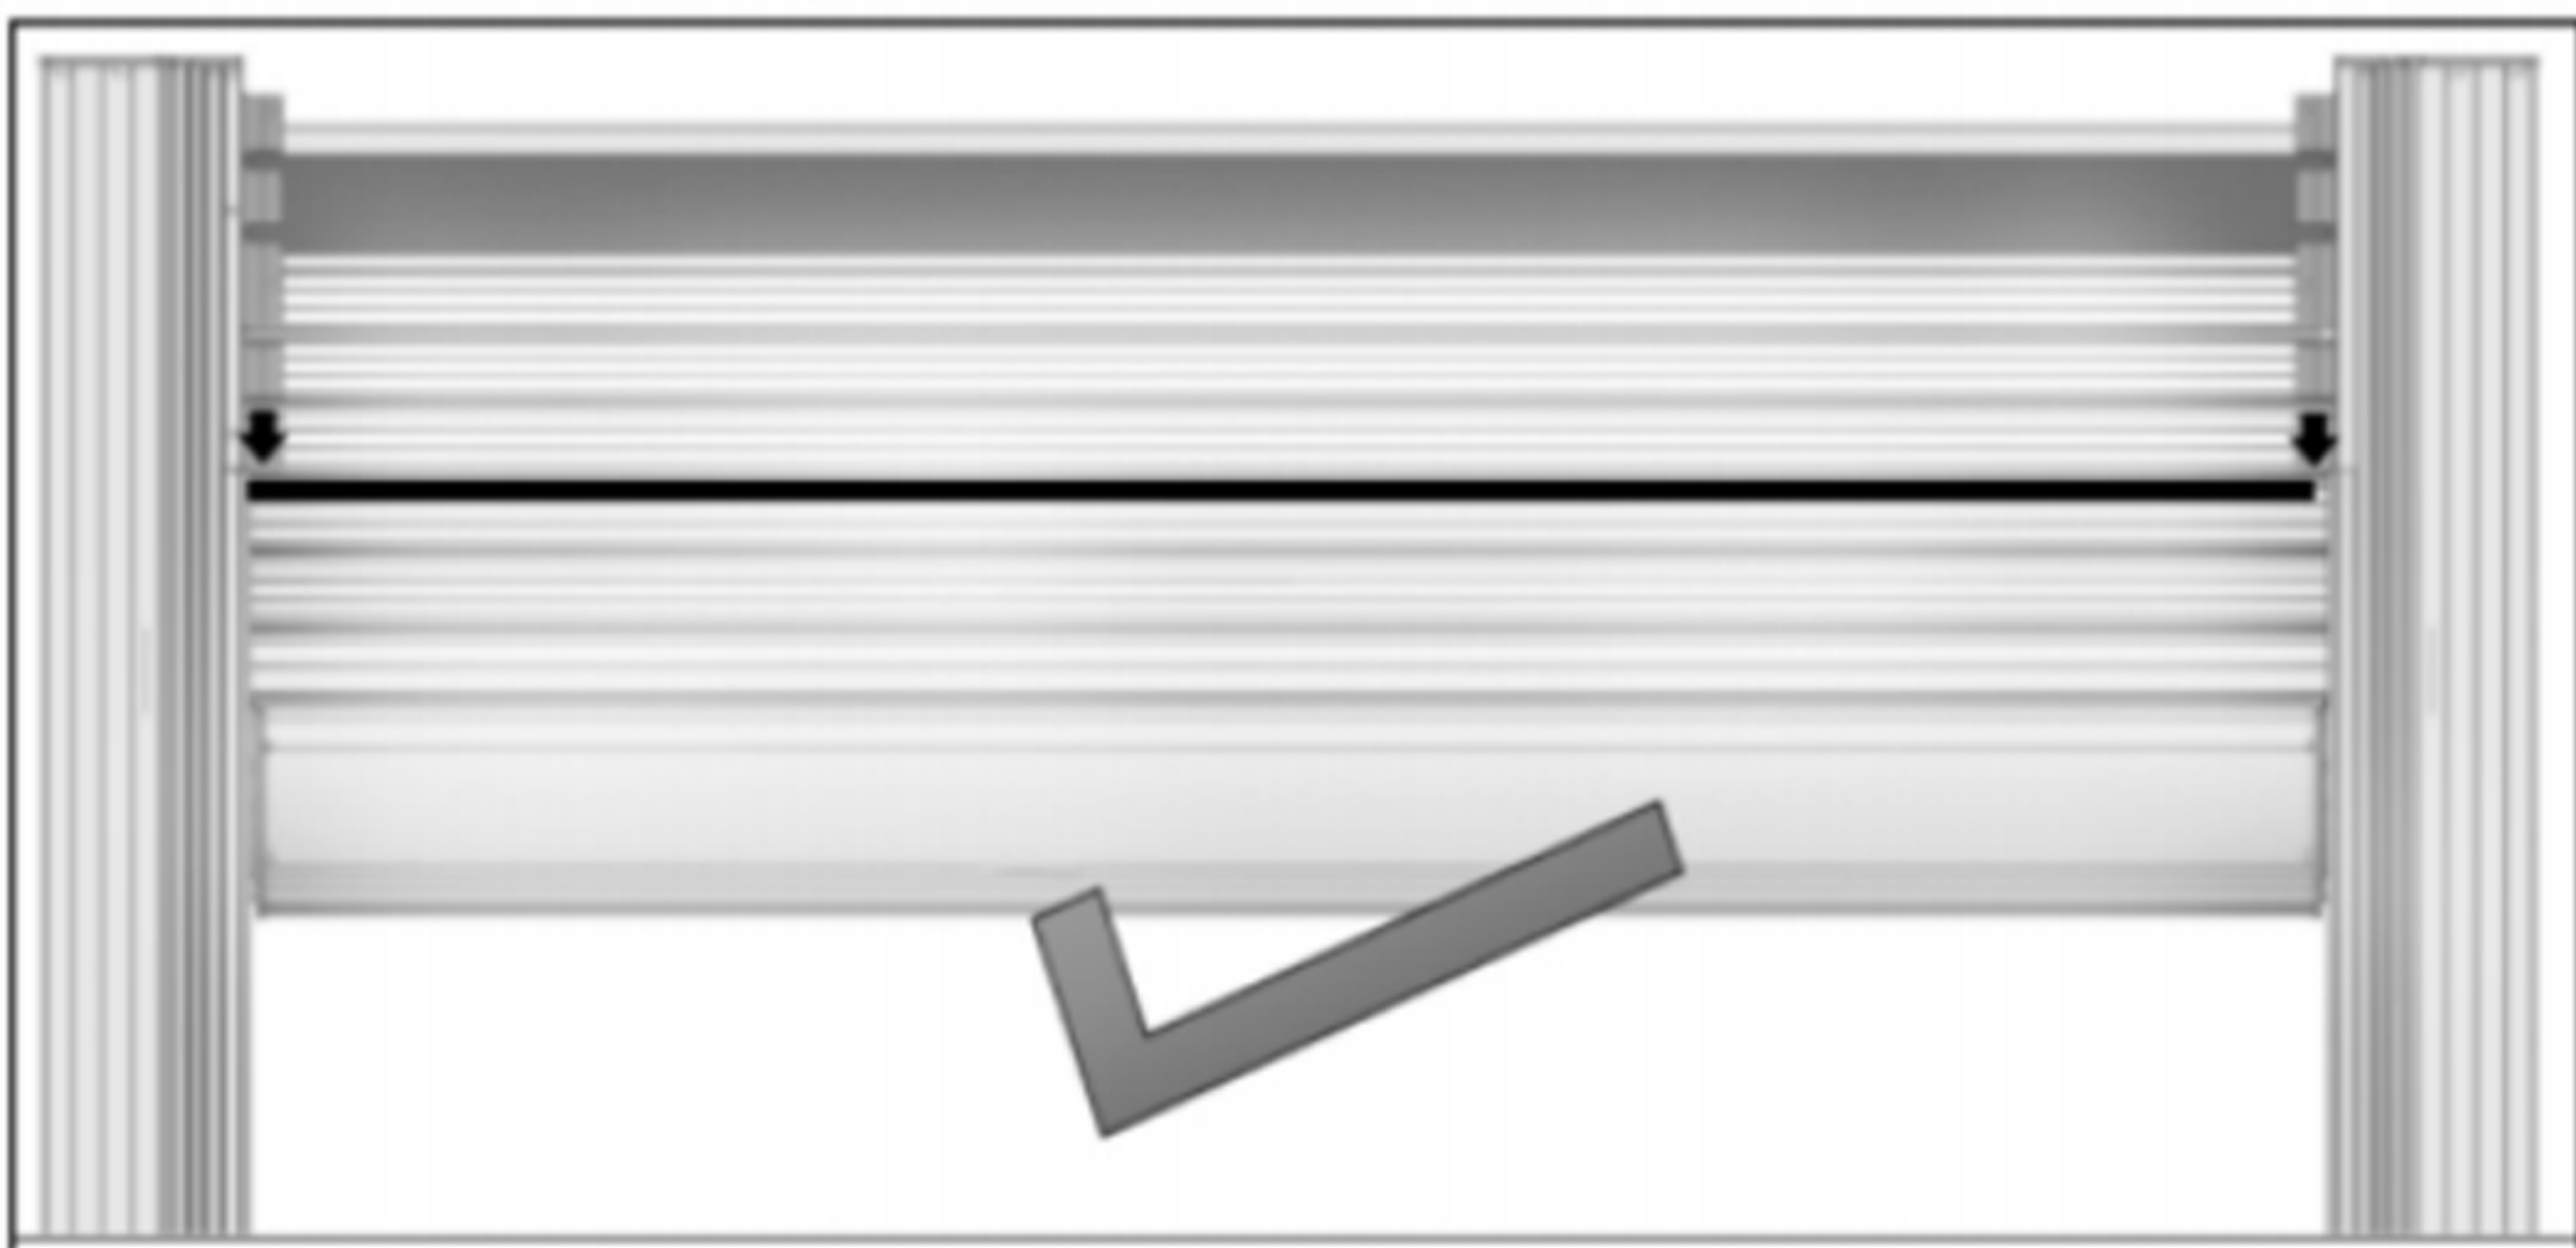

**Keep Vertical direction**



Install the Top Cover, and fixed with screws and screw cap (YT12, 13,14,15)



If the truck sides are not at the same height with the middle, then paste the Foaming Adhesive Tape in the middle (YT02)



# Installation



Two persons put roller in horizontal together;  
Use screws(YT07,08)




Silicon sealant can be used here according to  
customer requirements,the length is 140mm



Find the gap on the side rail and put the  
T-bolt into the guide rail (YT18)



Adjust the roller to the right position and  
cover the tailgate part at lest 20mm

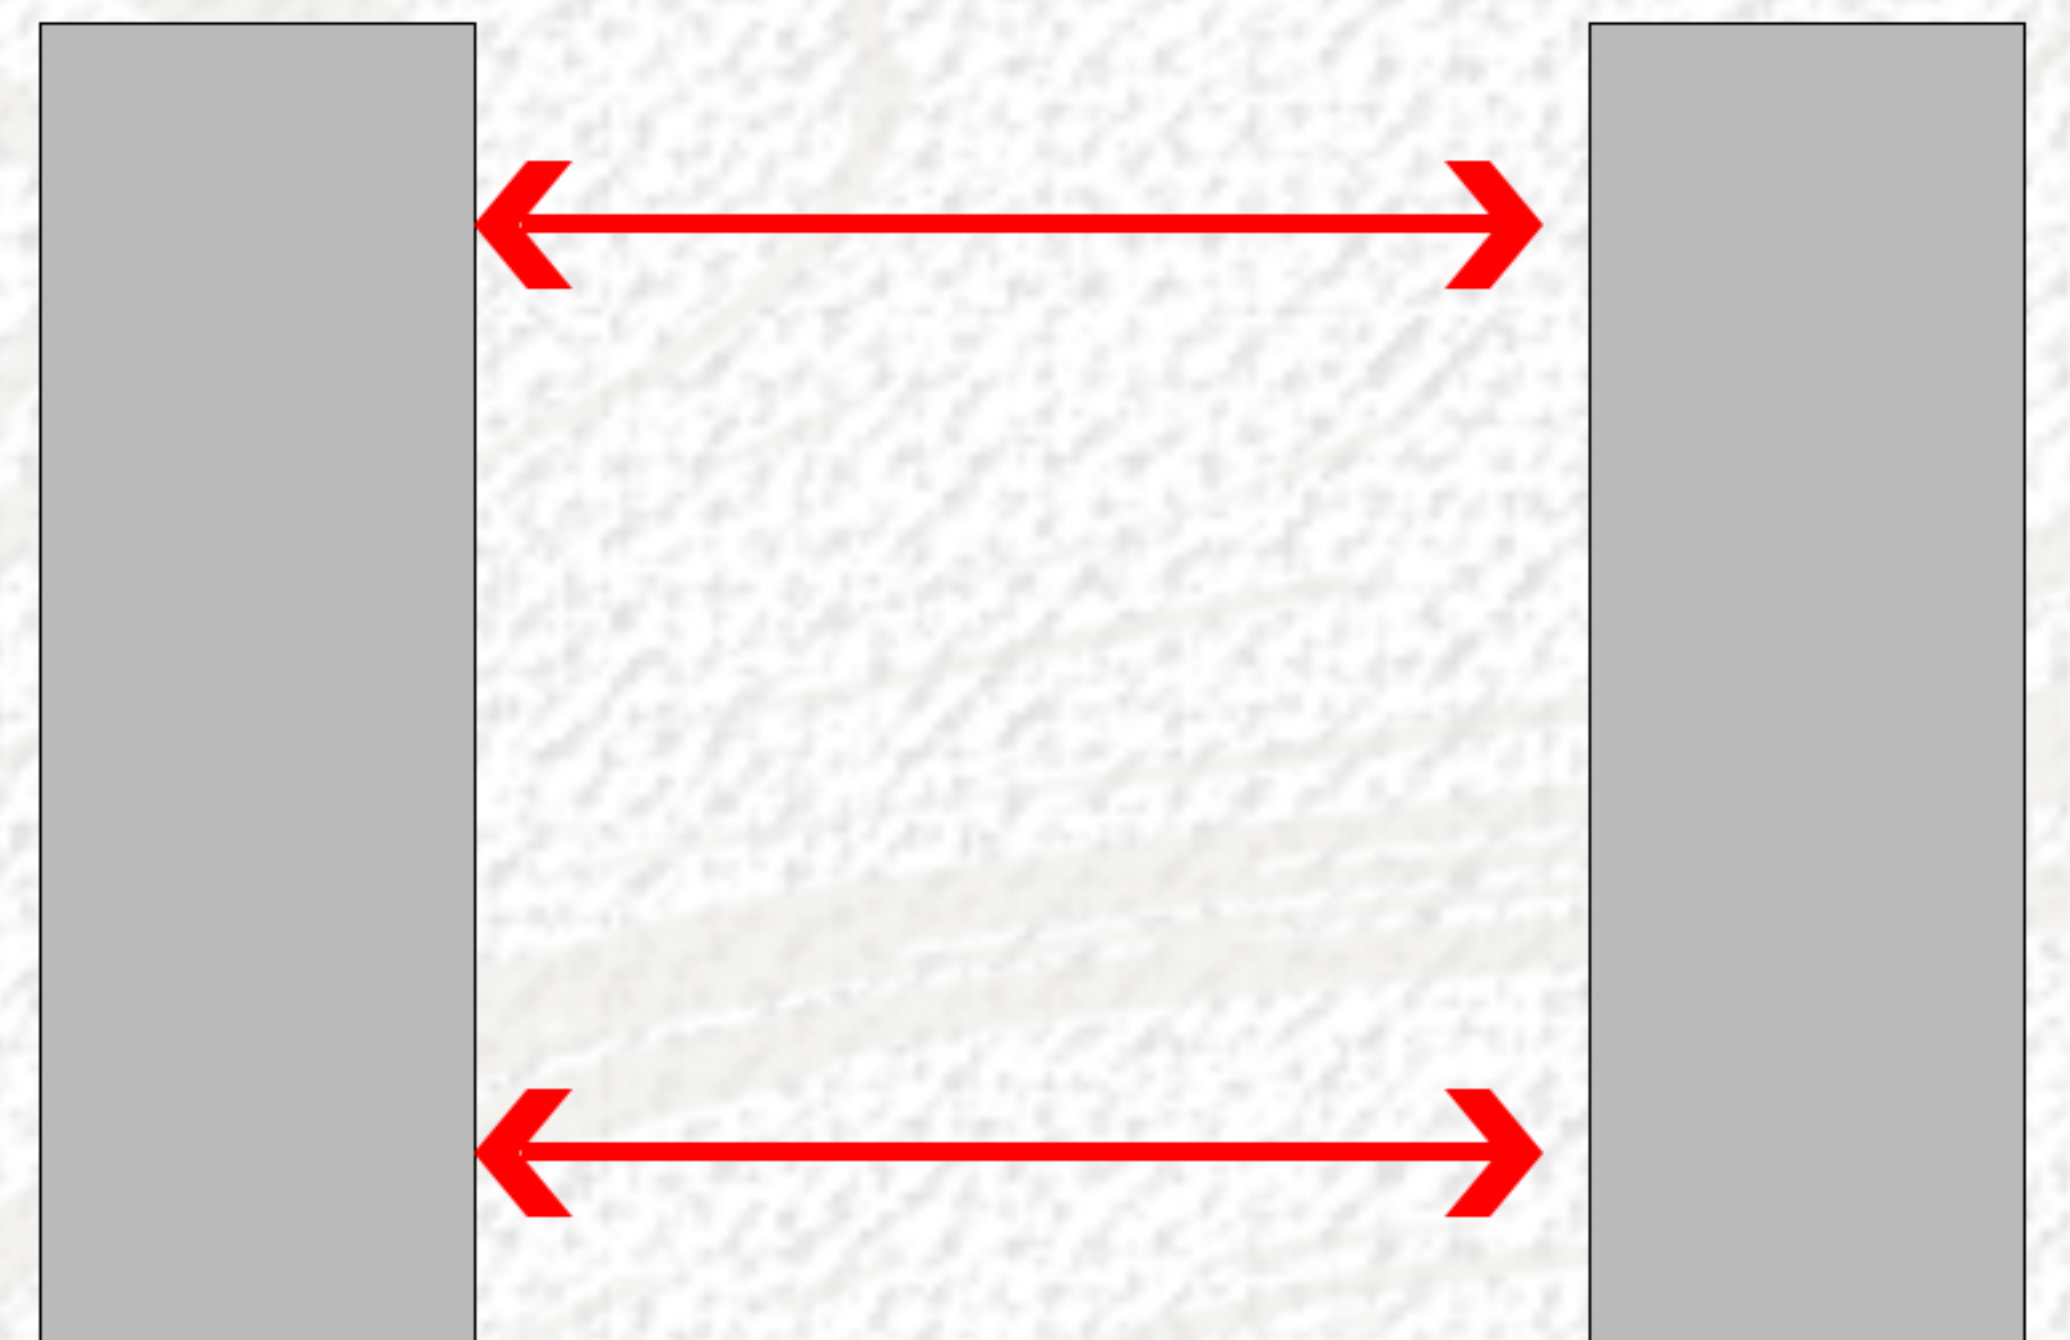

Use the Horizontal  
Positioning Lever  
to support the inside of  
the slidetracktoensure  
thetwosidesareparallel



# Installation



Install the brackets (YT21,18)




Install the leveling bolt and washer (YT22,23)  
This bolt will share some of the force generated by the tilt of the bracket.



Install the rear drain tube and lock it with hose clamps (YT01,24)



Install the front drain tube and lock it with hose clamps (YT01,24)

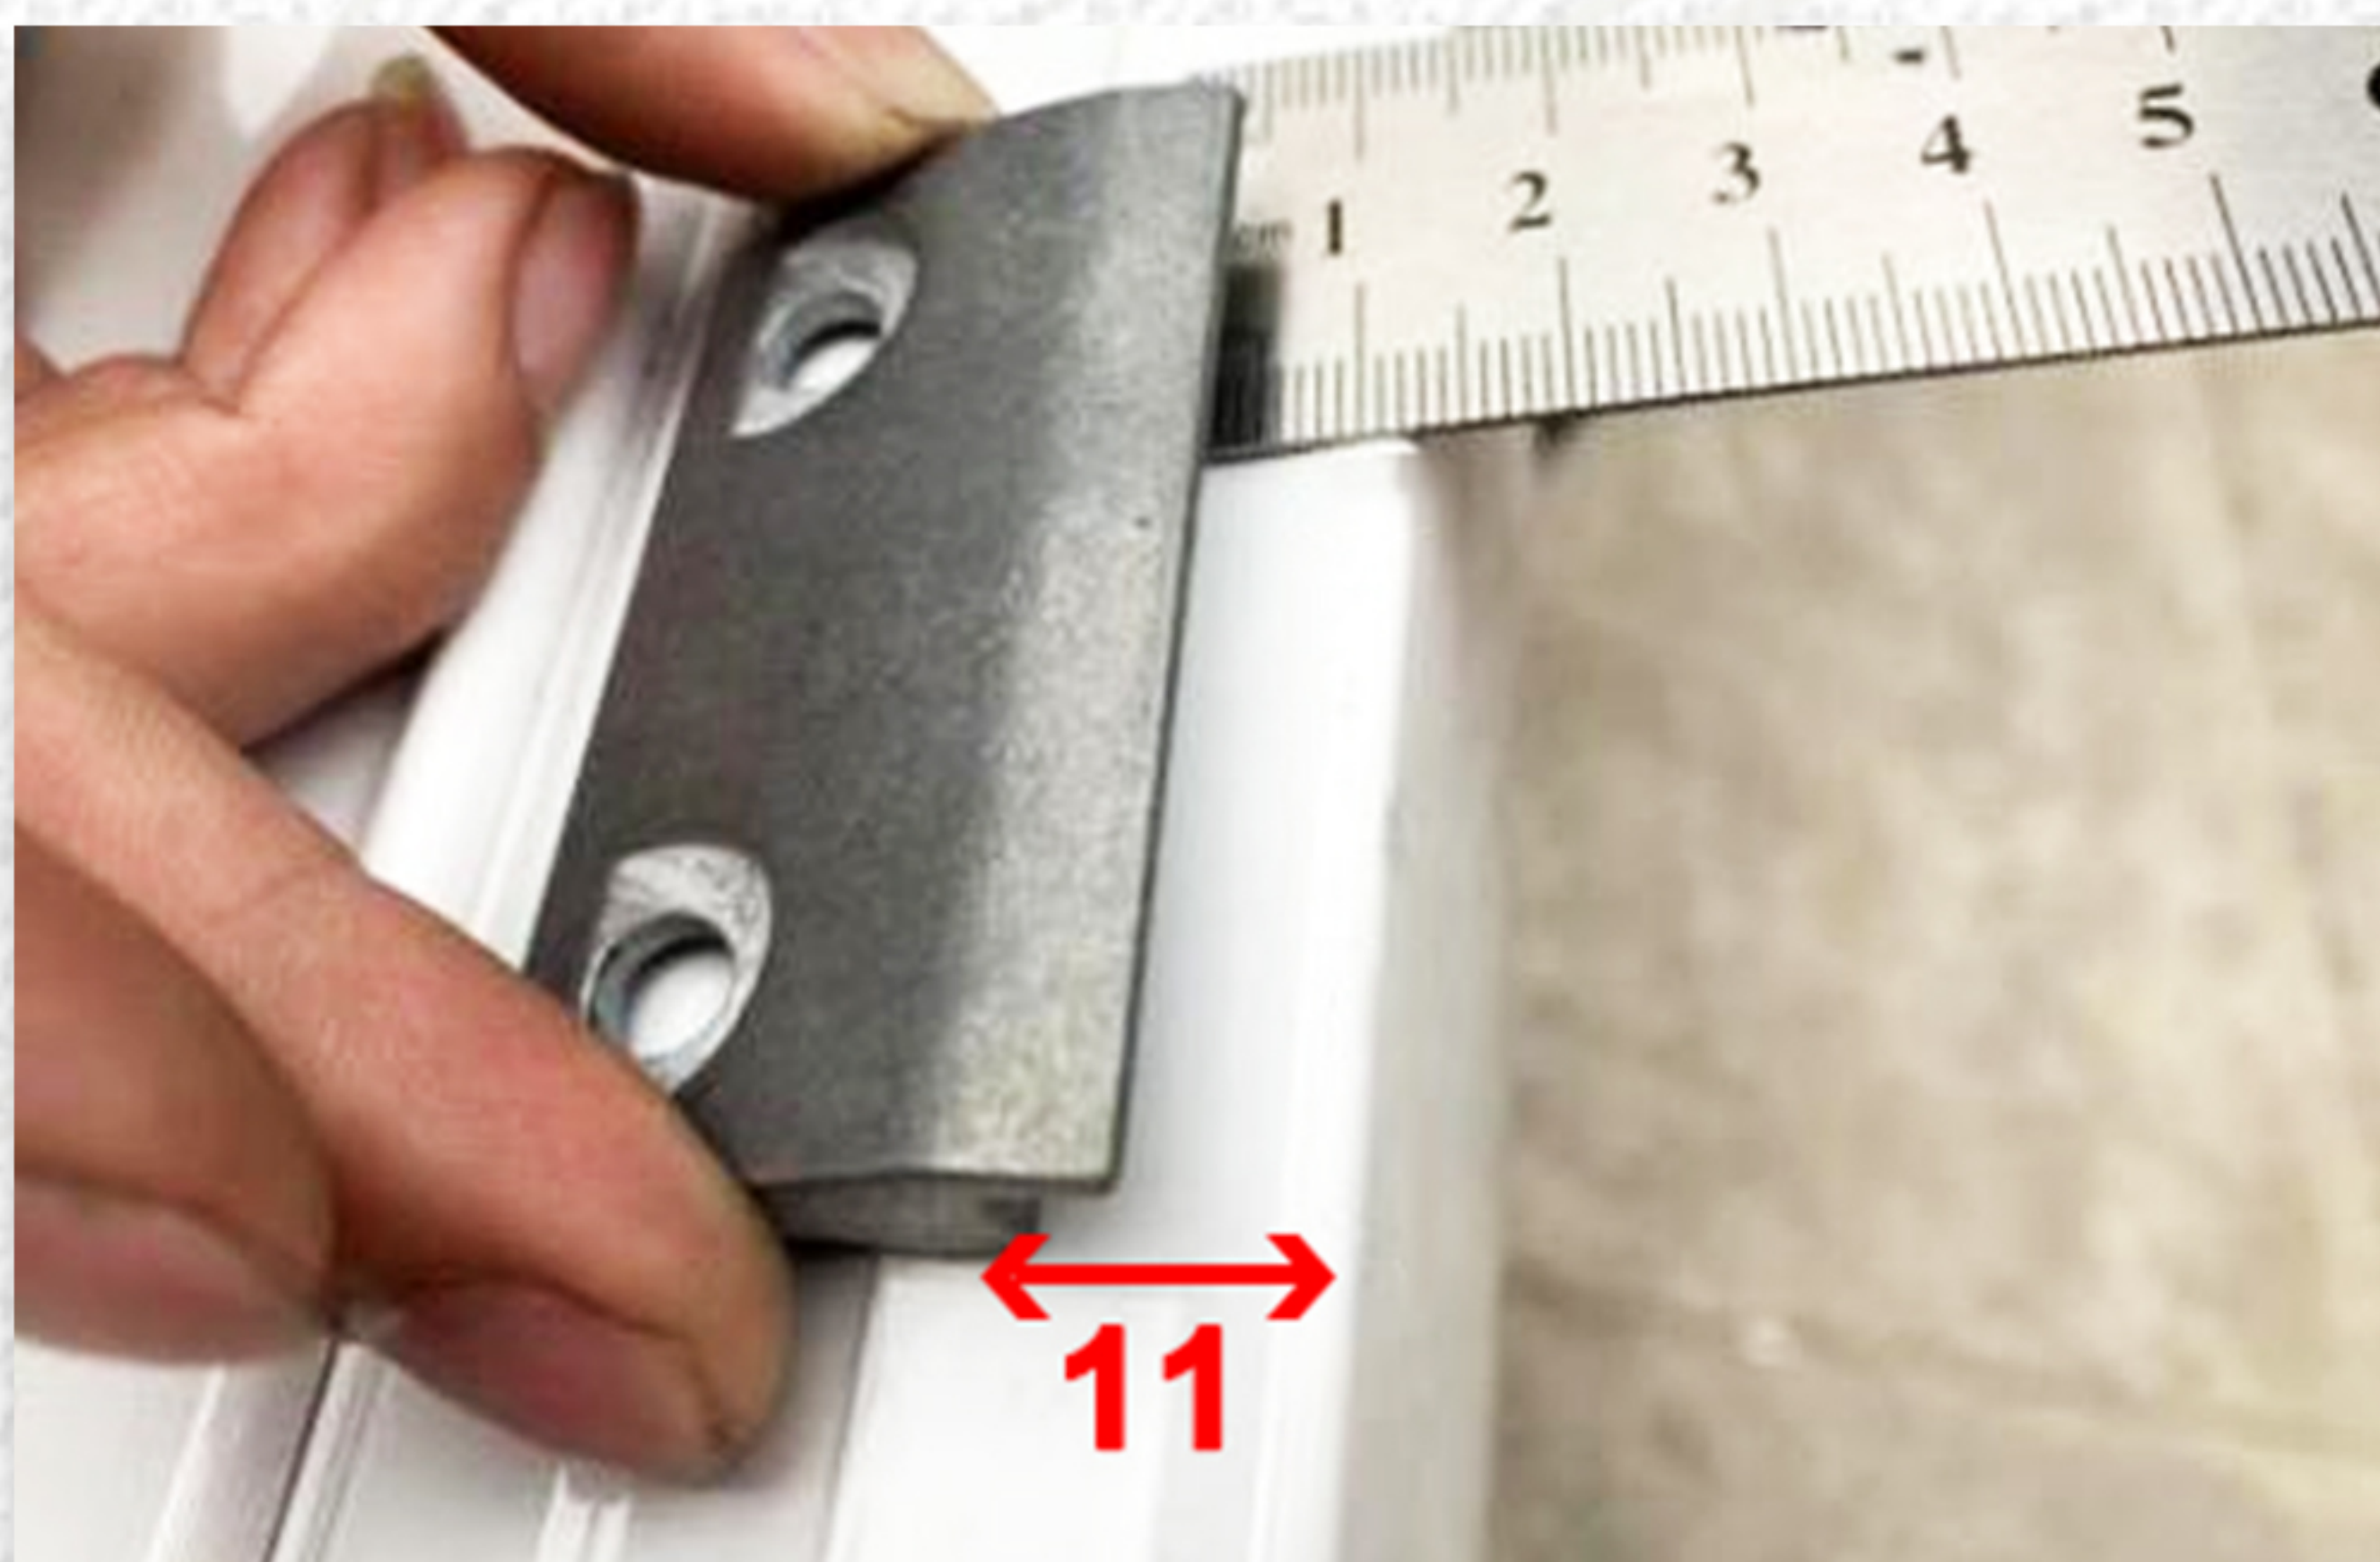


If the tailgate does not have self-locking function, a lock hook should be installed at the corresponding position of the roller lock. The position of the lock block to the door is 13mm(YT03,04)




Pull back first and then press the lock to open the roller. Good usage habits can extend product life.




# Installation

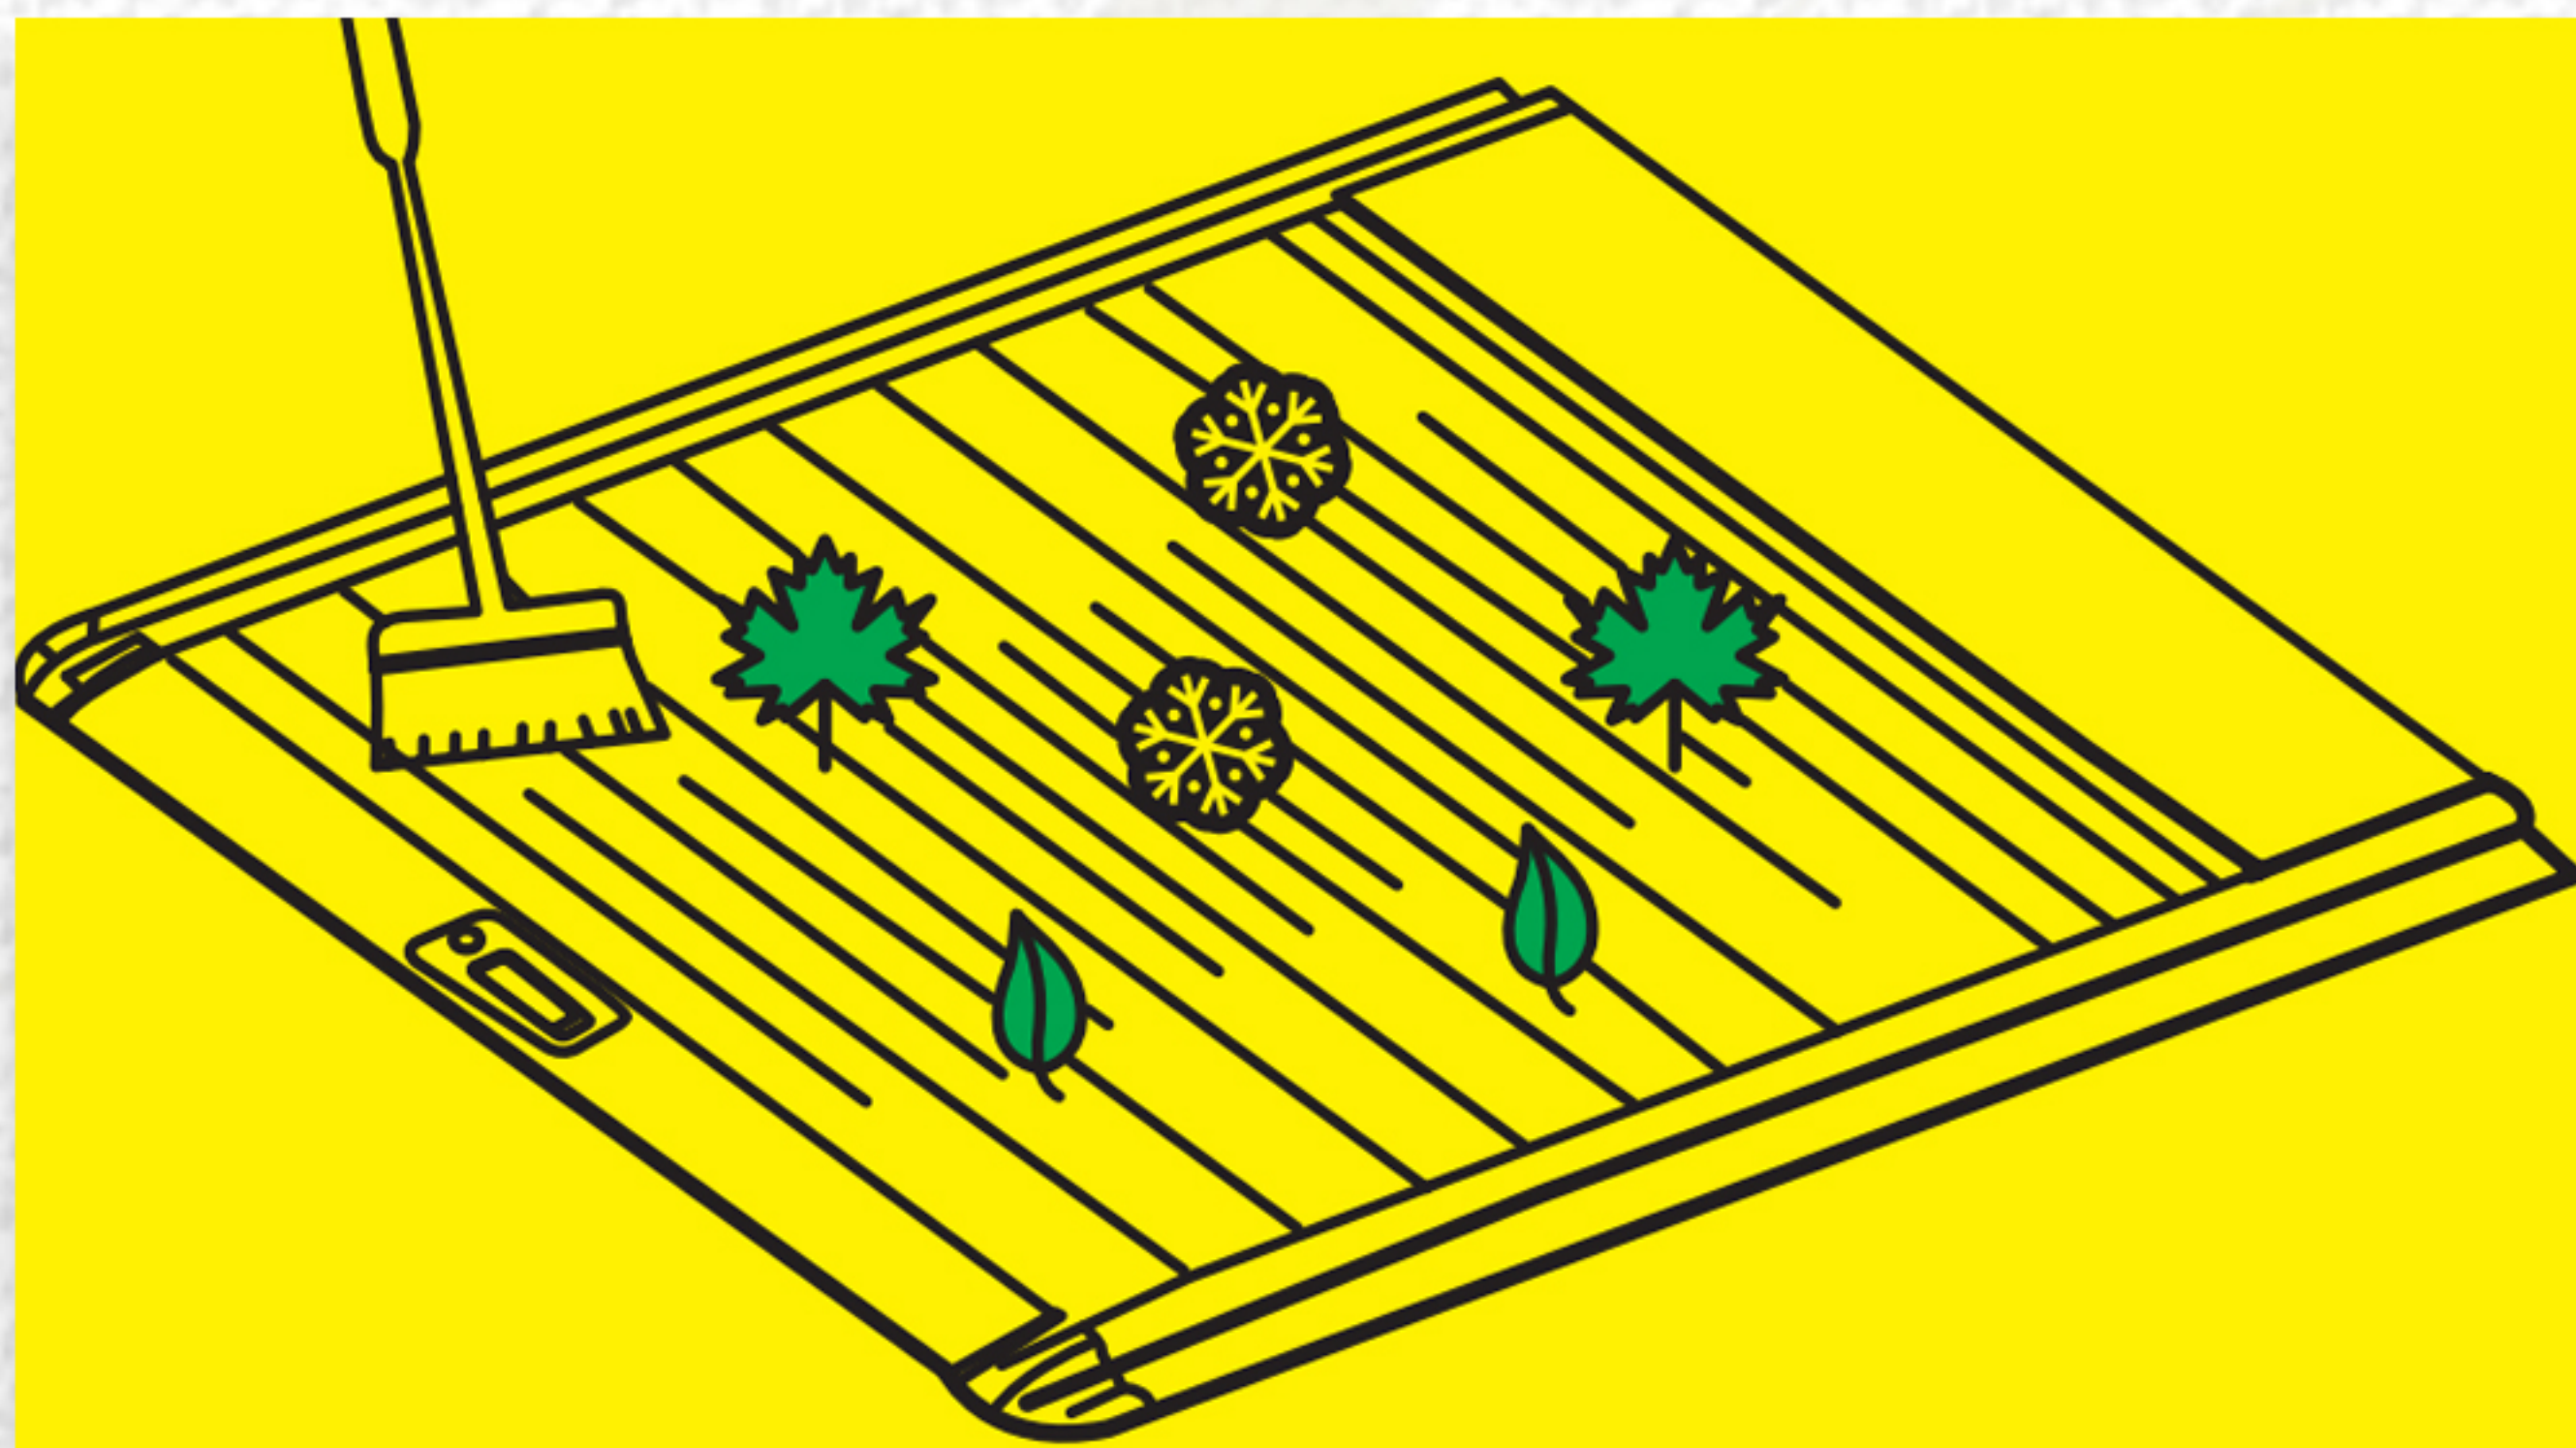


Please clear the litter before use.

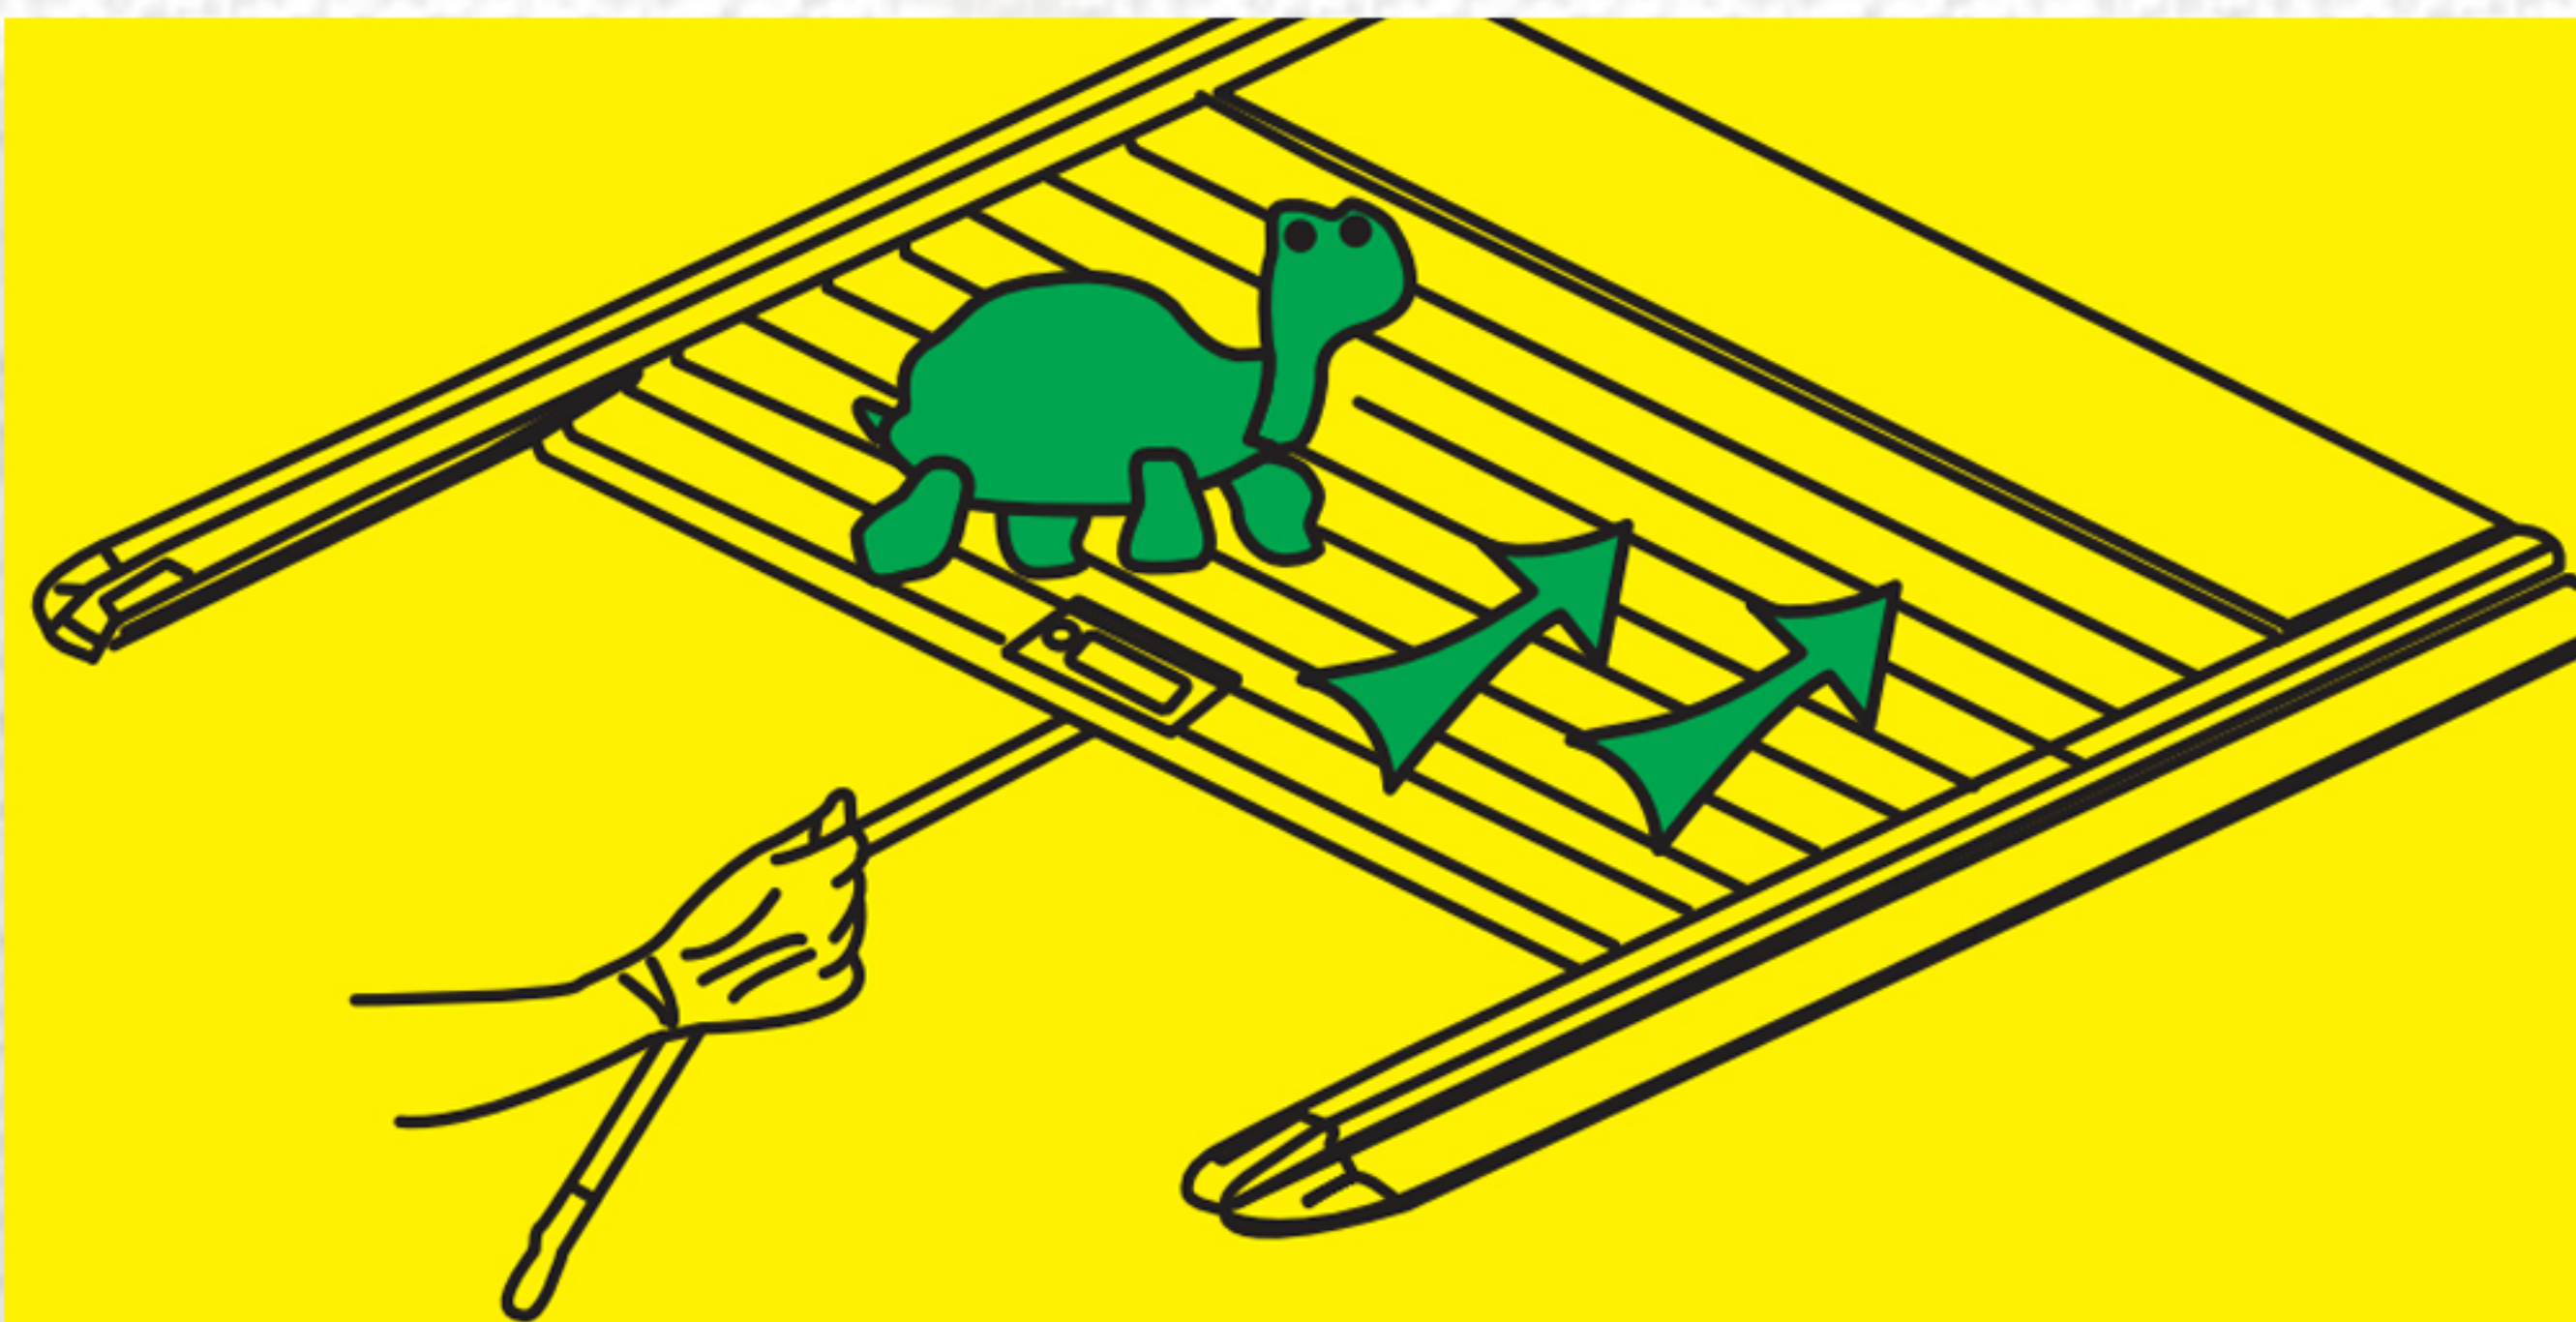


Please open slowly.

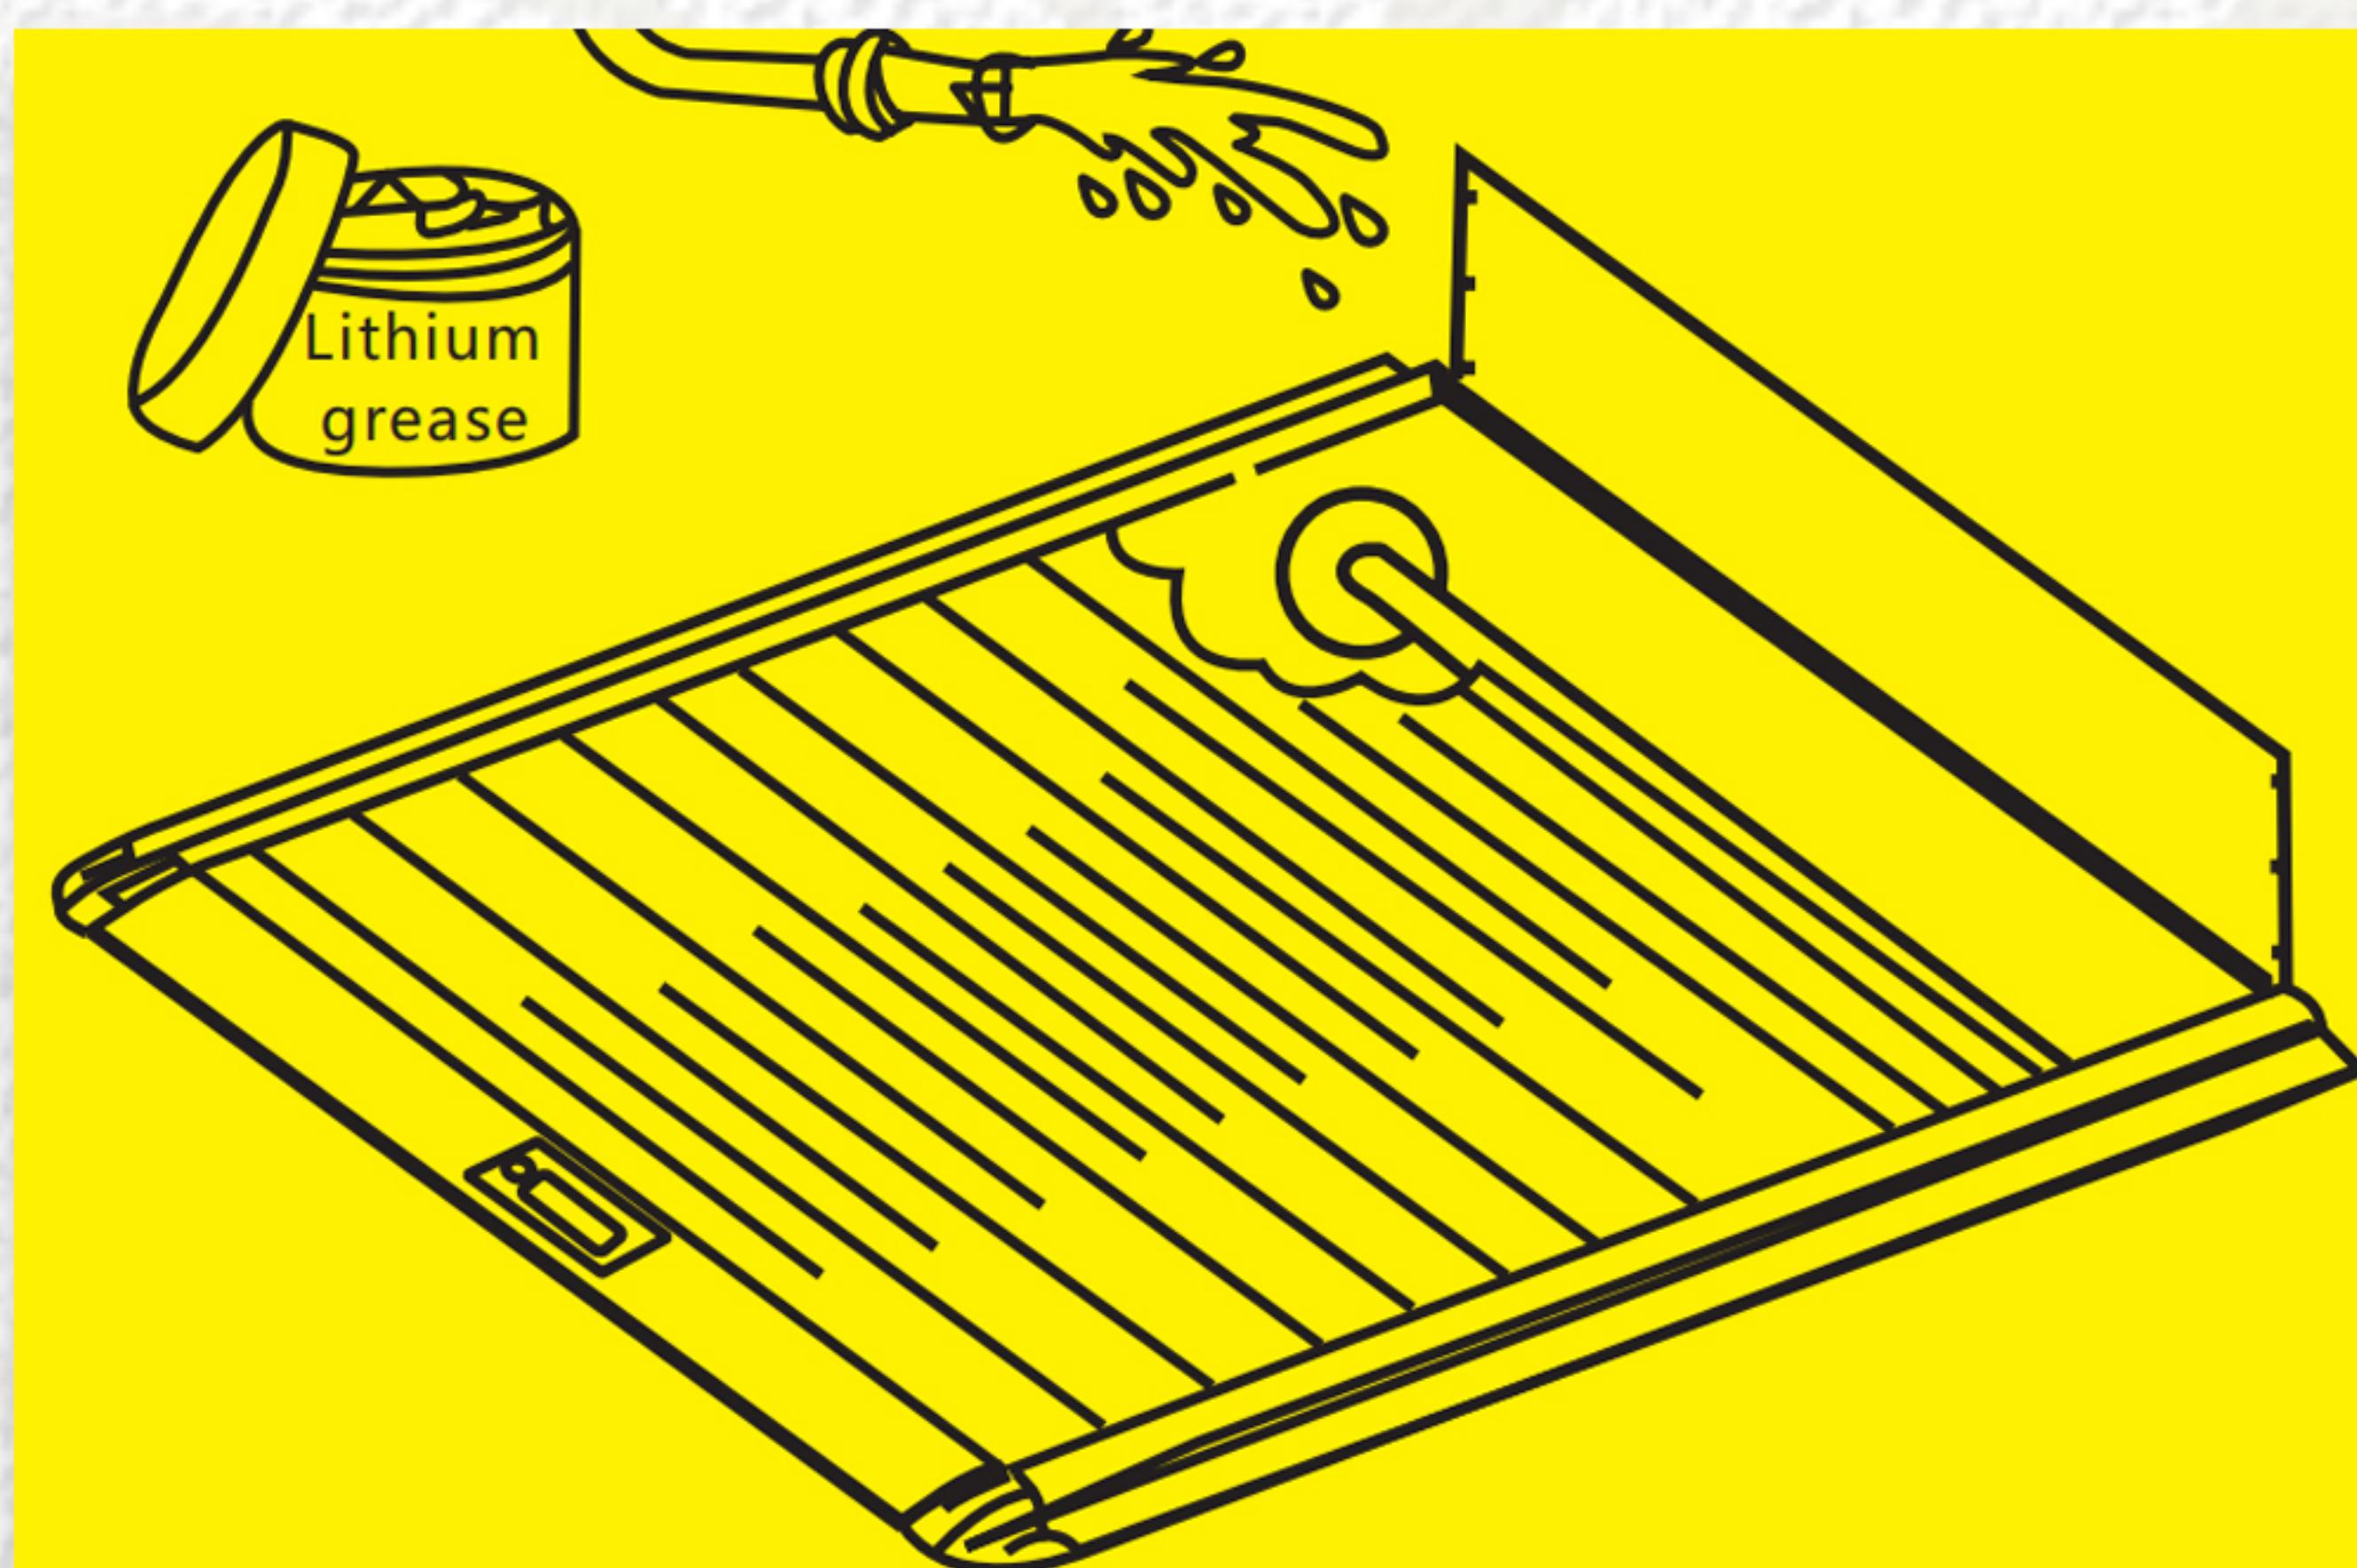


Every 6 months to clean and lubricate the canister

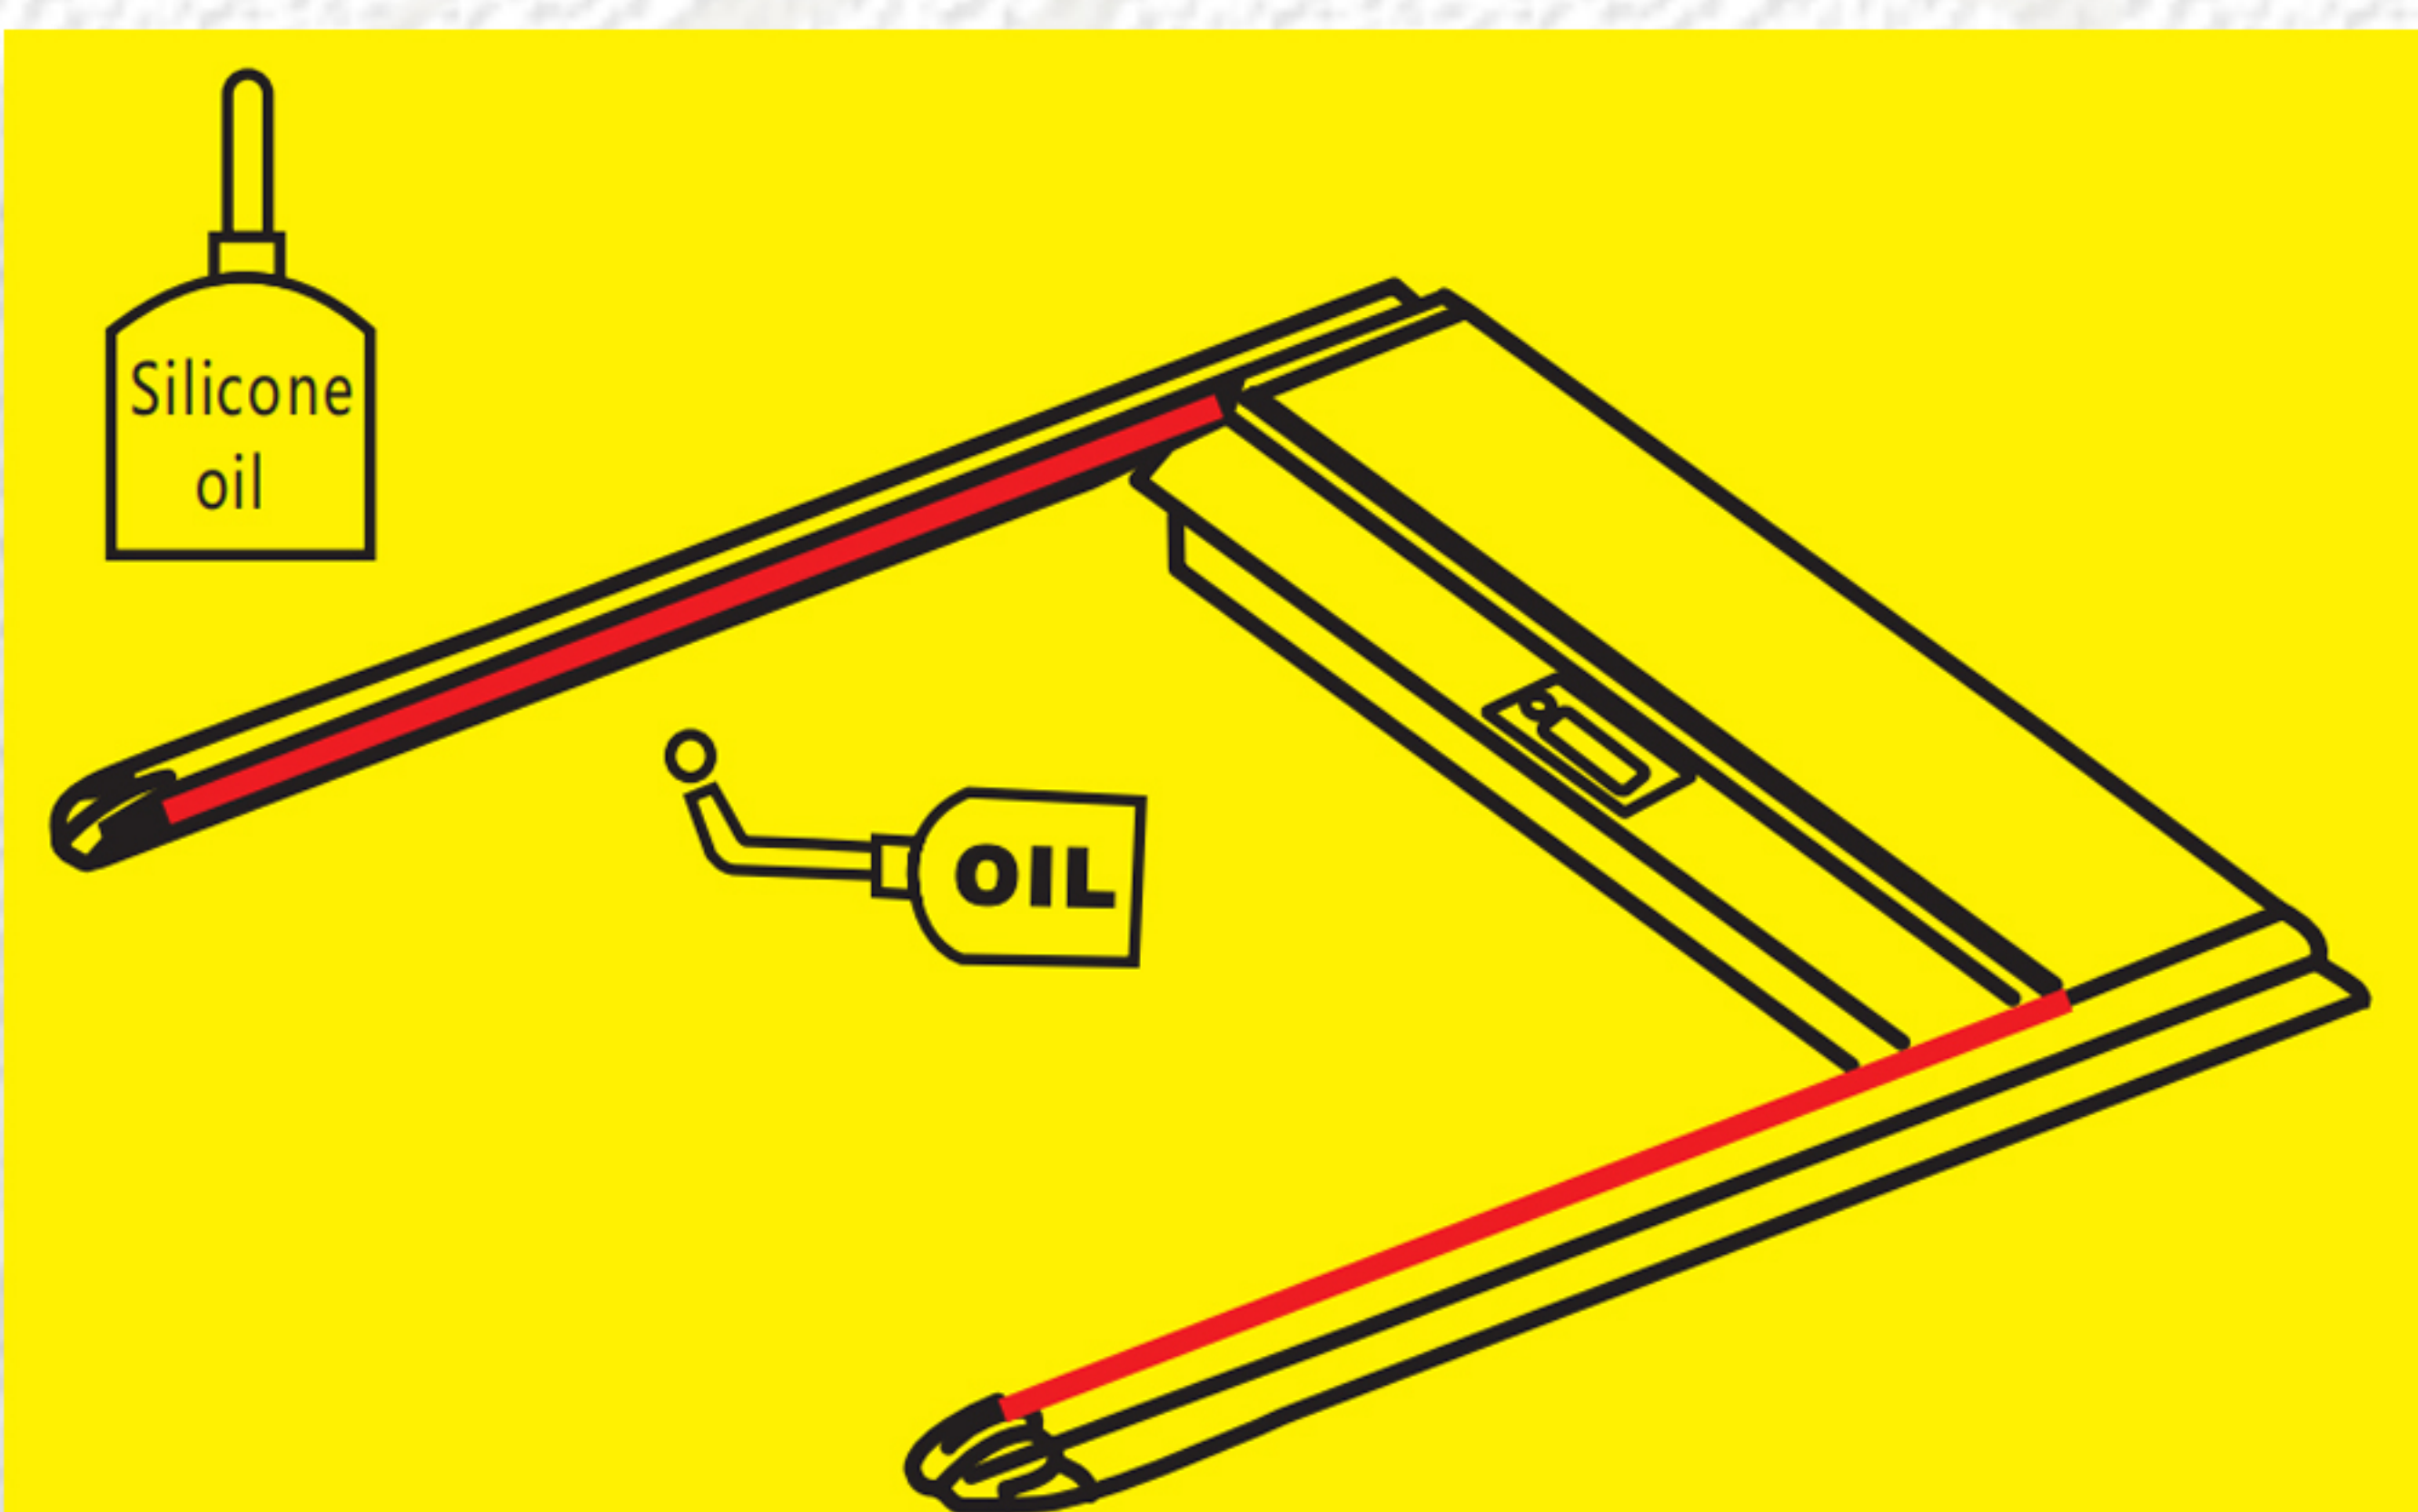

Every 3 months to clean and lubricate the track rubber strip

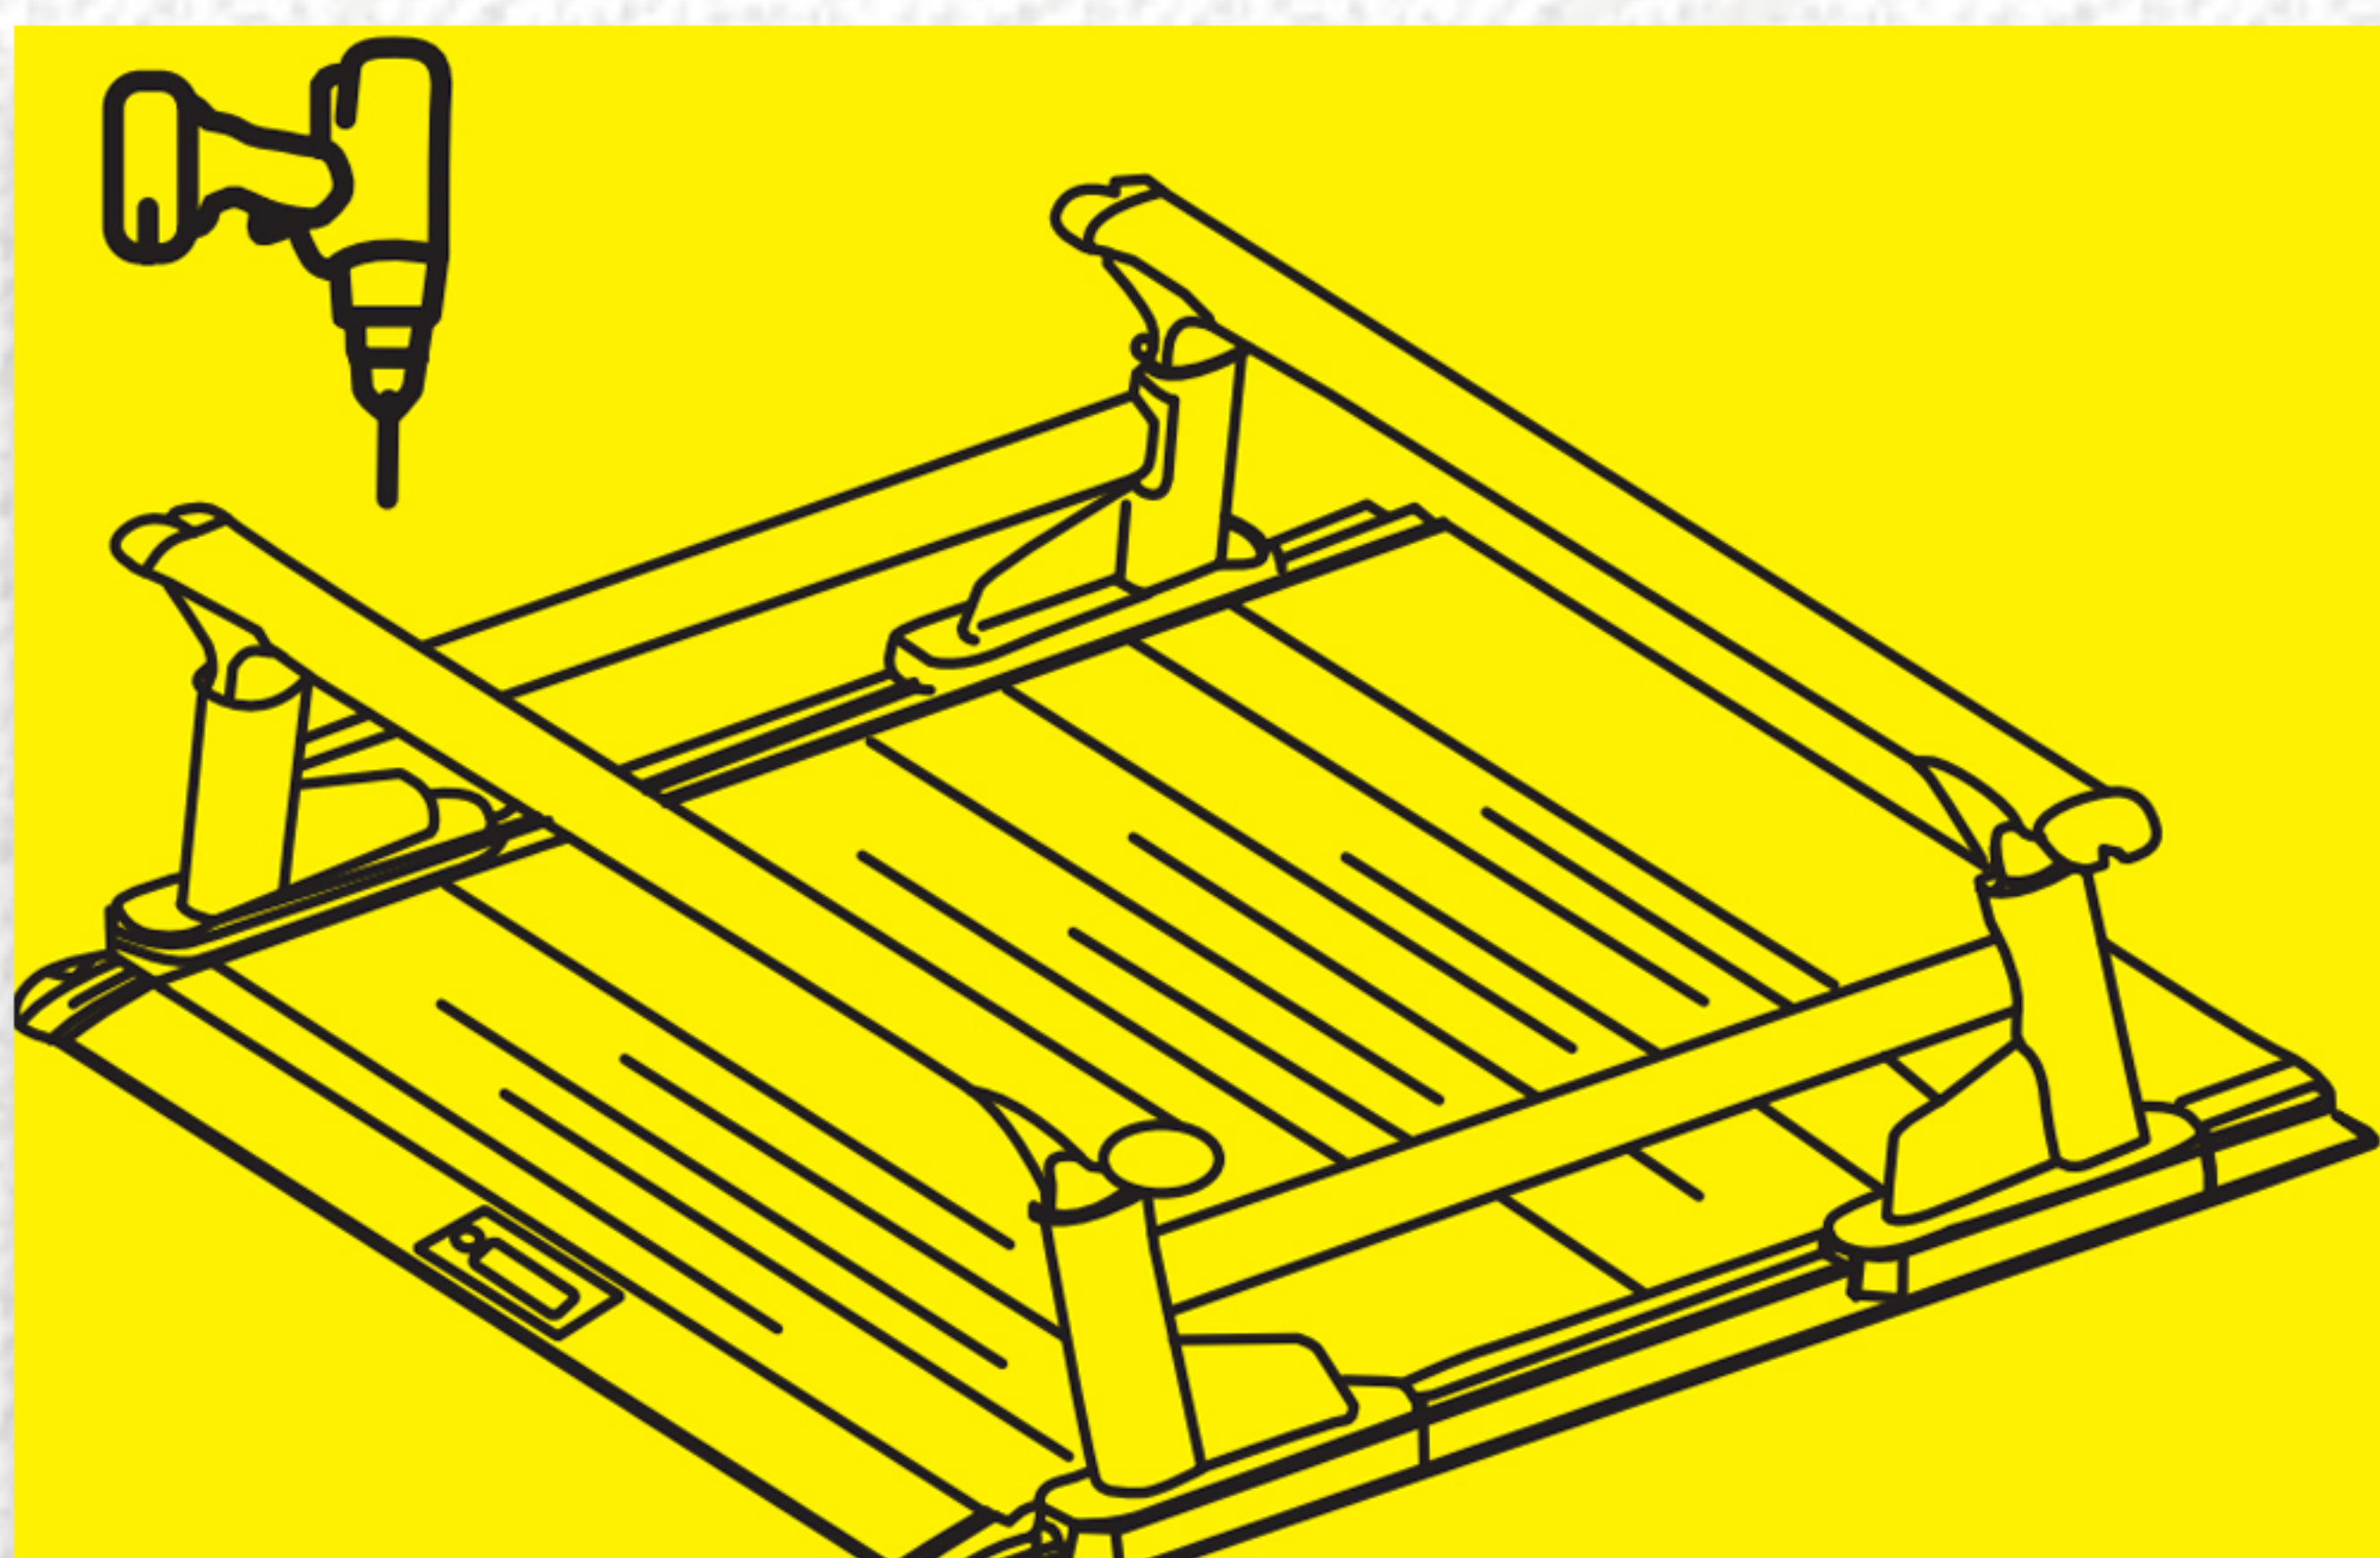

Please drill holes on the truck for installing heavy loading equipment.

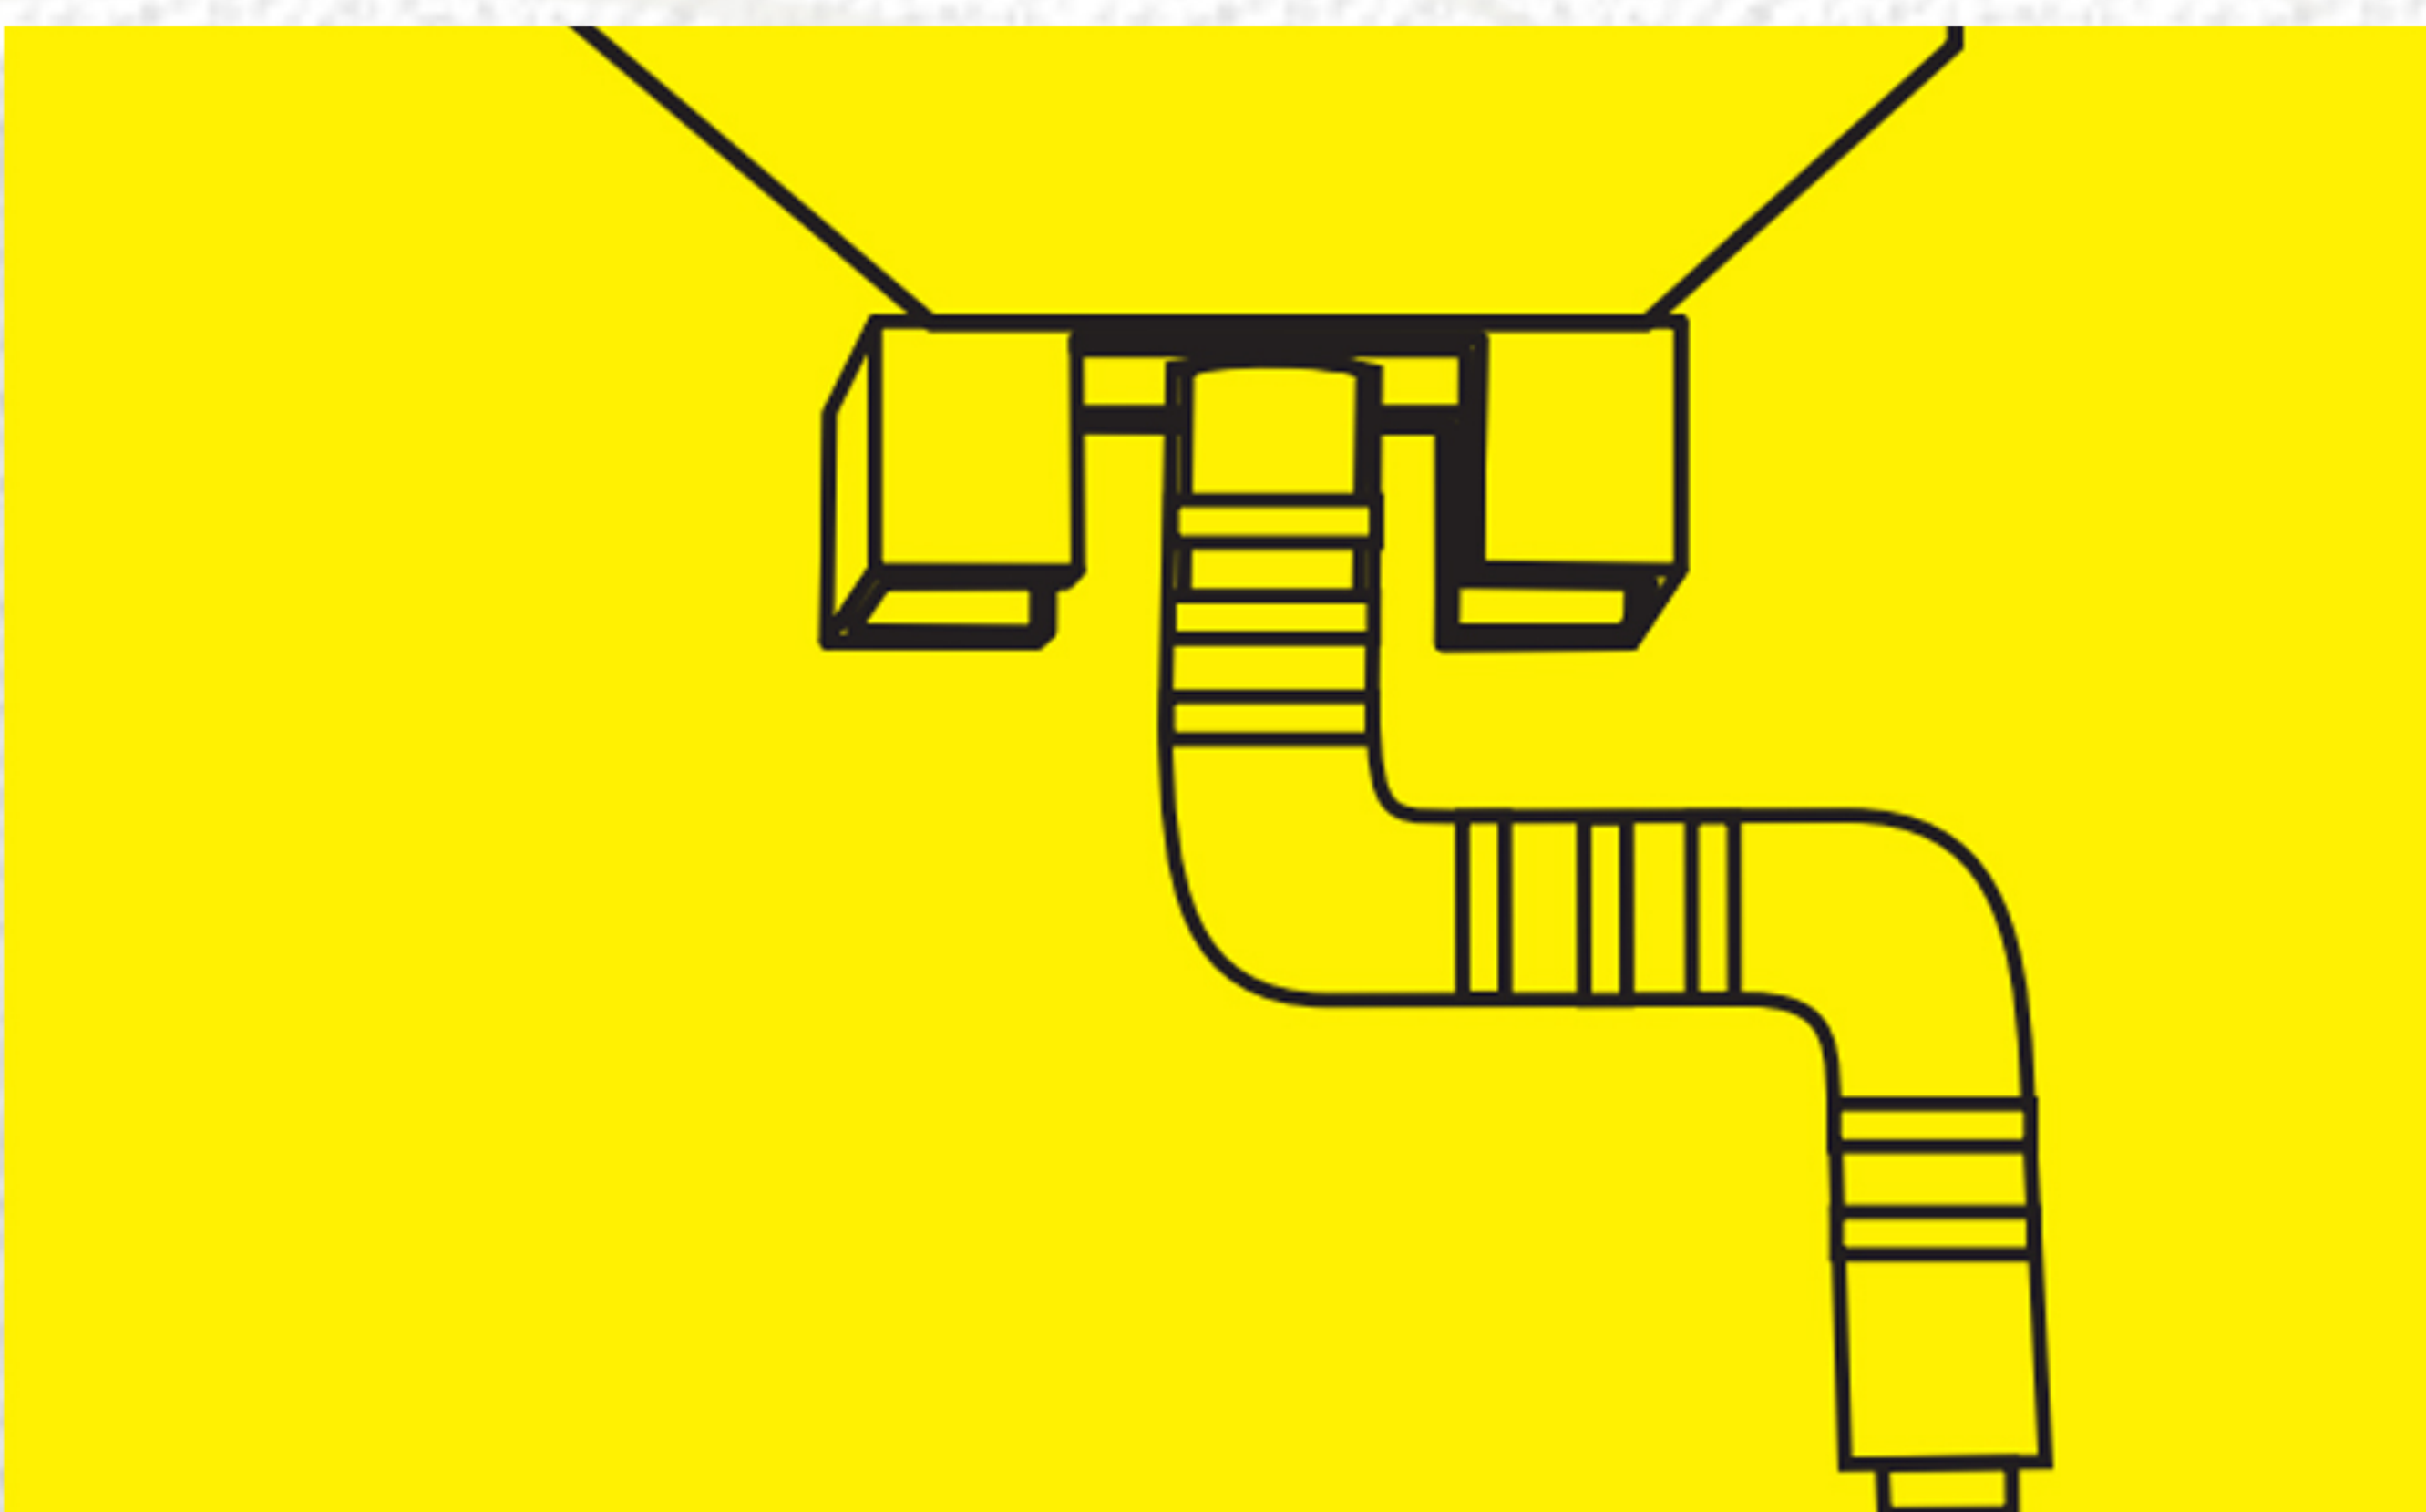

Keep the drainpipe free from blockage.